


EMG20K22B  
EMG20K22W



---

**EN** Freestanding Microwave Oven

---


Installation & User manual

2

**TH** เตาไมโครเวฟ ชนิดตั้งโต๊ะ

การติดตั้งและคู่มือการใช้งาน

12

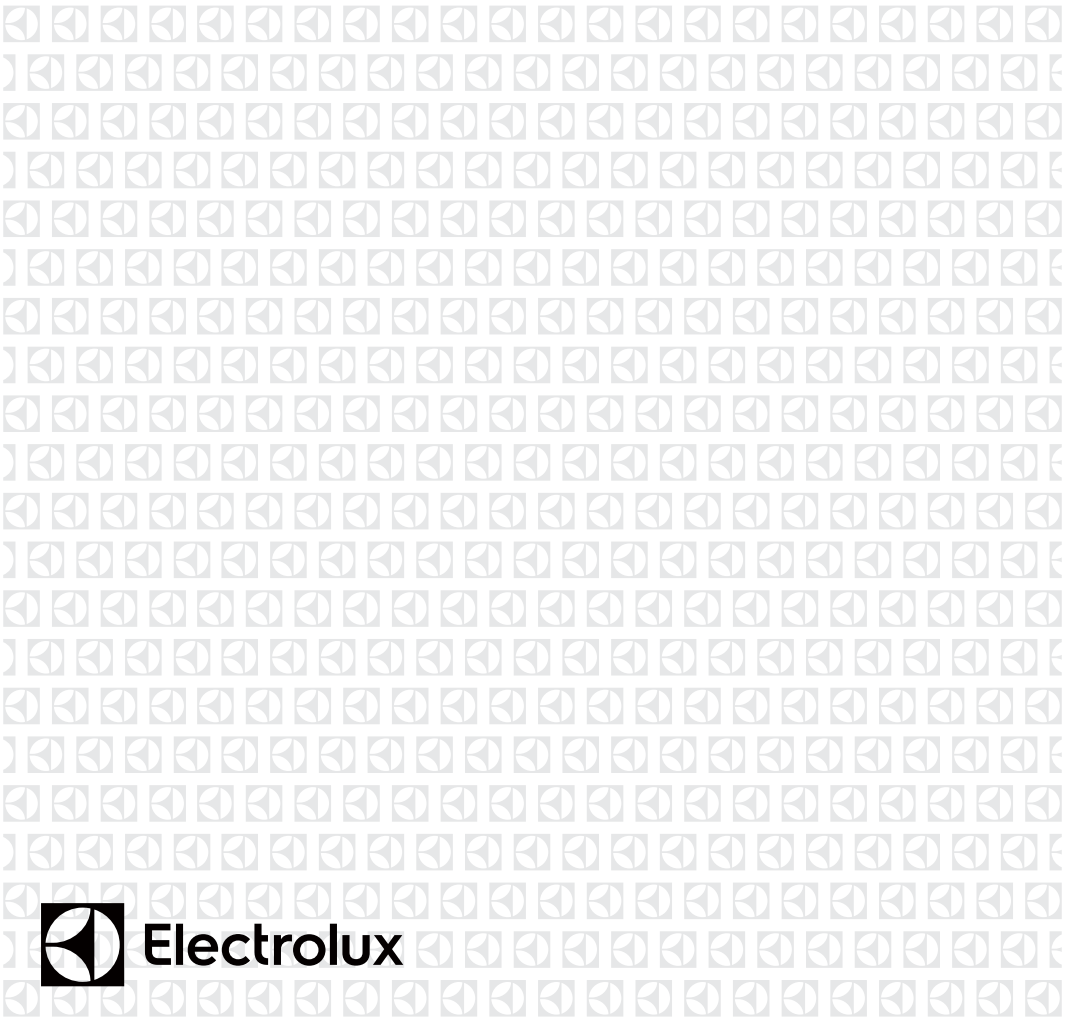

## WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time.

Welcome to Electrolux.

## BEFORE USING YOUR APPLIANCE

Check for any damage or marks. If you find the appliance damaged or marked you must report it within 7 days to claim for damages under the manufacturer's warranty. This does not affect your statutory rights.

Before you use the appliance, we recommend that you read through the whole user manual which provides the description of the product and its functions. It is important that the product is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards.

For future reference, please store this booklet in a safe place.

## CONDITIONS OF USE

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments.
- Farm houses.
- By clients in hotels, motels and other residential type environments.
- Bed and breakfast type environments.

## BEFORE YOU CALL

Please ensure you read the instruction manual fully before you call for service, or a full service fee could be applicable.

## RECORD MODEL AND SERIAL NUMBER HERE:

Model: \_\_\_\_\_

Serial No: \_\_\_\_\_

### IMPORTANT INFORMATION THAT MAY IMPACT YOUR MANUFACTURER'S WARRANTY

Adherence to the directions for use in this manual is extremely important for health and safety. Failure to strictly adhere to the requirements in this manual may result in personal injury, property damage and affect your ability to make a claim under the Electrolux manufacturer's warranty provided with your product. Products must be used, installed and operated in accordance with this manual. You may not be able to claim on the Electrolux manufacturer's warranty in the event that your product fault is due to failure to adhere this manual.

## CONTENTS

General warnings .....	3
Safety instructions .....	4
Product description.....	5
Accessories .....	5
Control panel .....	5
Daily use .....	6
Using the accessories .....	8
Helpful hints and tips .....	8
Care and cleaning .....	9
Troubleshooting .....	9
Installation.....	10
Electrical Installation.....	11
Customer care center.....	11

## SYMBOLS



**WARNING!**

This symbol indicates information concerning your personal safety.



**CAUTION!**

This symbol indicates information on how to avoid damaging the appliance.



**IMPORTANT!**

This symbol indicates tips and information about use of the appliance.



**ENVIRONMENT!**

This symbol indicates tips and information about economical and ecological use of the appliance.

## INFORMATION ON DISPOSAL FOR USERS



**ENVIRONMENT!**

- Most of the packaging materials are recyclable. Please dispose of these materials through your local recycling depot or by placing them in appropriate collection containers.
- If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

## GENERAL WARNINGS

Important safety instructions, read carefully and keep for future reference. Pass the user manual on to possible new owners of the appliance.

NOTE! You must read these warnings carefully before installing or using the appliance. If you need assistance, contact your Customer Care Department. The manufacturer will not accept liability, should these instructions or any other safety instructions incorporated in this book be ignored.

### Children and vulnerable people safety.



#### WARNING!

#### Risk of suffocation, injury or permanent disability.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging away from children.
- If the appliance has a child safety device, we recommend that you activate it if children are present.
- WARNING: Accessible parts may become hot during use. Young children should be kept away.



#### CAUTION!

Important safety instructions, read carefully and keep for future reference.

#### General safety

- Internally the appliance becomes hot when in operation. Do not touch the heating elements that are in the appliance. Always use oven gloves to remove or put in accessories or ovenware.
- Do not use a steam cleaner to clean the appliance.
- Before maintenance isolate the power supply.
- If the door or door seals are damaged, the appliance must not be operated until it has been repaired by a competent person.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Only a competent person can carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
- Do not heat liquids and other foods in sealed containers. They are liable to explode.

- Only use utensils that are suitable for use in microwave ovens.
- When heating food in plastic or paper containers, keep an eye on the appliance due to the possibility of ignition.
- The appliance is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Microwave heating of beverages can result in delayed eruptive boiling. Care must be taken when handling the container.
- The contents of feeding bottles and baby food jars should be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- Eggs in their shell and whole hard-boiled eggs should not be heated in the appliance since they may explode, even after microwave heating has ended.
- The appliance should be cleaned regularly and any food deposits removed.
- Failure to maintain the appliance in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- The temperature of accessible surfaces may be high when the appliance is operating.
- This appliance is designed for freestanding application. It must not be installed behind a decorative door or installed in an enclosed cupboard. Please follow the installation requirements in this manual.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the glass door since they can scratch the surface, which may result in shattering of the glass.
- If the supply cord is damaged, it must be replaced by the manufacturer or an authorised service agent or similarly qualified persons in order to avoid a hazard.



#### CAUTION!

In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.



#### WARNING!

Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.



#### NOTE:

If there are manufacturing or oil remains on the enclosure or heating element, smoke or odour might occur during

the beginning operation. This is normal and will cease after repeated use.

We strongly recommend proceeding as follows:

- Turn on the grill mode and let the appliance operate several times without food to be cooked.
- Ensure sufficient ventilation.

## SAFETY INSTRUCTIONS

### Installation



#### **WARNING!**

**Only a qualified person must install this appliance.**

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Obey the installation instructions supplied with the appliance.
- Always be careful when you move the appliance because it is heavy. Always wear safety gloves.
- Keep the minimum distance from the other appliances and units.

### Electrical connection



#### **WARNING!**

**Risk of fire and electrical shock.**

- This appliance is supplied with a power cord and 10A power plug suitable for connection to standard 10A power socket. If a power socket needs to be installed, it must be done by a suitably qualified electrician.
- The appliance must be earthed.
- Make sure that the electrical information on the rating plate agrees with the power supply. If not, contact an electrician.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- Make sure not to cause damage to the mains plug and to the mains cable. Contact the Service Centre or an electrician to change a damaged mains cable.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.

### Use



#### **WARNING!**

**Risk of injury, burns or electric shock or explosion.**

- Use this appliance in a household environment.
- Do not change the specification of this appliance.
- Make sure that the ventilation openings are not blocked.
- Do not leave the appliance unattended during operation.
- Do not apply pressure on the open door.
- Do not use the appliance as a work surface and do not use the cavity for storage purposes.
- Do not operate appliance without food.
- Metallic containers for food and beverages are not allowed during microwave cooking.

### Care and cleaning



#### **WARNING!**

**Risk of injury, fire or damage to the appliance.**

- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.
- Regularly clean the appliance to prevent the deterioration of the surface material.
- Do not allow food spills or cleaner residue to accumulate on door sealing surfaces.
- Remaining fat or food in the appliance can cause smoke/fire, particularly on the grill element.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- Do not use a steam cleaner to clean this appliance.

### Disposal




#### **WARNING!**

**Risk of injury or suffocation.**

- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.

## PRODUCT DESCRIPTION

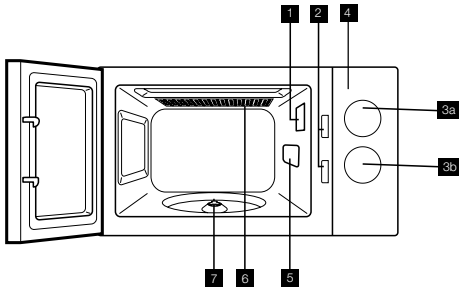


- 1** Lamp
- 2** Safety Interlock system
- 3a** Power level Knob
- 3b** Timer Knob
- 4** Control panel
- 5** Brown mica cover
- 6** Grill
- 7** Turntable shaft

## ACCESSORIES

### Turntable set


Glass cooking tray and roller guide.

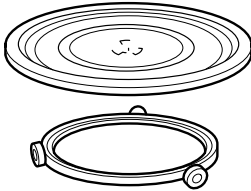

Always use the turntable set to prepare food in the appliance.

### Grill rack


For grilling food and combi cooking.

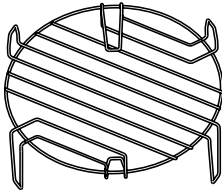

### WARNING!

The wire grill rack is not suitable for use on microwave only mode, it can be used on grill, convection and combi (includes short burst of microwave, which is ok) cooking modes only. Using this wire grill rack on microwave only mode may cause damage to the appliance.

## CONTROL PANEL

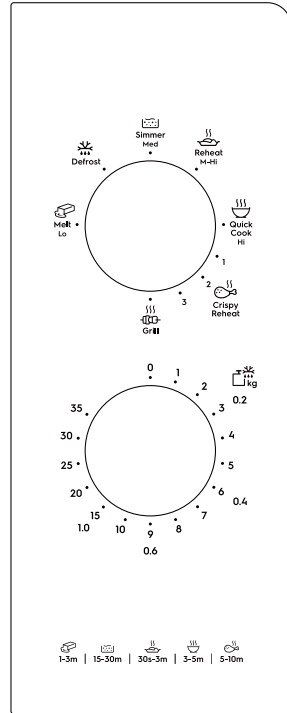

	Symbol	Function	Description
<b>1</b>		Quick Cook	Fast or normal cooking.
<b>2</b>		Reheat	Normal cooking. Reheat.
<b>3</b>		Simmer	Slow cooking, simmer and stew.
<b>4</b>		Defrost	To defrost food by time.
<b>5</b>		Melt	Keep warm. Melting/ soften.
<b>6</b>		Weight Defrost	To defrost food by weight.
<b>7</b>		Grill	Cook, grill or sear the foods.
<b>8</b>		Crispy Reheat	Reheat fried foods.

## DAILY USE

### Suitable cookware and materials

Cookware / Material	Microwave			Grilling/ Convection
	Defrosting	Heating	Cooking	
Ovenproof glass and porcelain (with no metal components, e.g. Pyrex, heat-proof glass)	■	■	■	■
Non-ovenproof glass and porcelain <sup>1)</sup>	■	--	--	--
Glass and glass ceramic made of ovenproof / frost-proof material (e.g. Arcoflam), grill shelf	■	■	■	■
Ceramic <sup>2)</sup> , earthenware <sup>2)</sup>	■	■	■	--
Heat-resistant plastic up to 200°C <sup>3)</sup>	■	■	■	--
Cardboard, paper	■	--	--	--
Clingfilm	■	--	--	--
Roasting film with microwave safe closure <sup>3)</sup>	■	■	■	--
Roasting dishes made of metal, e.g. enamel, cast iron	--	--	--	■
Baking tins, black lacquer or silicon coated <sup>3)</sup>	--	--	--	■
Baking tray	--	--	--	■
Browning cookware, e.g. Crisp pan or Crunch plate	--	■	■	--
Ready meals in packaging <sup>3)</sup>	■	■	■	■

1) With no silver, gold, platinum or metal plating / decorations.

2) Without quartz or metal components, or glazes which contain metals.






3) You must follow the manufacturer's instructions about the maximum temperatures.

■ suitable

-- not suitable

## DAILY USE (CONTINUED)

### Power setting tables

Symbol	Power Level	Output (W)	Suitable Foods
	Quick Cook - High	800W	Heat beverage. Cook rice, vegetable & noodles.
	Reheat - Medium High	640W	Cook poultry and meat. Reheat.
	Simmer - Medium	440W	Simmer soup. Stew fish and seafood.
	Defrost - Medium Low	240W	Thaw foods.
	Melt - Low	140W	Melt butter/ chocolate. Keep cooked food warm.

### Defrosting



1. Turn the knob to Defrost
2. Select suitable time.  
Note: If desired time is less than 3 minutes, turn the timer knob to over 3 minutes position and then turn back to the desired time setting.
3. Once the desired time is set, the cooking begins. If pausing in between is needed, just open the door at any time, and close it to resume operation.
4. When it times out and cooking ends, the microwave oven produces a bell ring, the inside lamp will also be automatically turned off.  
Note: If food is removed before time out, make sure to set back the timer to "0" position, this avoids the microwave oven from operating in empty load.

Below is some food defrosting time advice:

No.	Weight	Defrost time
1	200g	About 4 minutes
2	400g	About 8 minutes
3	600g	About 12 minutes




Do not use weight defrosting on food that is left out of the freezer for more than 20 minutes, or for frozen ready-made food.

### Power level setting:

Power Level	Output (W)	Suitable Foods
Grill	100% Grill	Roast meat, sausage, lamb, seafood, steak or other thin pieces
Combi 1	80% Grill 20% Microwave	Toasted bread, sliced food, sandwiches or etc.
Combi 2 (Crispy Reheat)	70% Grill 30% Microwave	Chicken nuggets, chicken breast meat, chicken wings or etc.
Combi 3	60% Grill 40% Microwave	Roast whole chicken or duck.

### Grill or Combi Cooking



1. Turn the knob to Crispy Reheat / Grill.
2. Select suitable time.
3. Once the desired time is set, the cooking begins. If pausing in between is needed, just open the door at any time, and close it to resume operation.

## USING THE ACCESSORIES



### WARNING!

Refer to the safety chapters.




### CAUTION!

Do not cook food without the turntable set. Use only the turntable set provided with the appliance.




Never cook food directly on the glass cooking tray.

### Inserting the turntable set

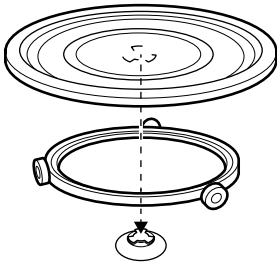

1. Place the roller guide around the turntable shaft.
2. Before first use remove the tape from the centre of the turntable shaft.
3. Place the glass cooking tray on the roller guide.

### Inserting the grill rack

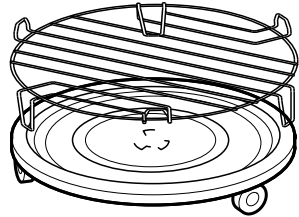

Place the grill rack on the turntable set.



### WARNING!

The wire grill rack is not suitable for use on microwave only mode, it can be used on grill, convection and combi (includes short burst of microwave, which is ok) cooking modes only. Using this wire grill rack on microwave only mode may cause damage to the appliance.

## HELPFUL HINTS AND TIPS

Problem	Remedy
You cannot find details for the amount of food prepared.	Look for a similar food. Increase or shorten the length of the cooking times according to the following rule: <b>Double the amount = almost double the time, Half the amount = half the time</b>
The food got too dry.	Set shorter cooking time or select lower microwave power.
The food is not defrosted, hot or cooked after the time came to an end.	Set longer cooking time or set higher power. Note that large dishes need longer time.
After the cooking time comes to an end, the food is overheated at the edge but is still not ready in the middle.	Next time set a lower power and a longer time. Stir liquids halfway through, e.g. soup.

To get better results for rice use a flat, wide dish.

### Defrosting

Always defrost roast with the fat side down. Do not defrost covered meat because this may cause cooking instead of defrosting. Always defrost whole poultry breast side down.

### Cooking

Always remove chilled meat and poultry from the refrigerator at least 30 minutes before cooking. Let the meat, poultry, fish and vegetables stay covered after cooking.

Brush a little oil or melted butter over the fish. Add 30-45ml of cold water for every 250g of vegetables. Cut the fresh vegetables into even size pieces before cooking. Cook all vegetables with a cover on the container.

### Reheating

When you reheat packed ready meals always follow the instructions written on the packaging.

### Grilling

Grill flat food items in the middle of the grill rack. Turn the food over halfway through the set time and continue grilling.



## CARE AND CLEANING



### WARNING!

Refer to the safety chapters.

#### Notes on cleaning:

- To clean front panel fingerprint-resistant stainless steel simply wipe with a soft cloth using warm water and a mild detergent. DO NOT use stainless steel cleaners, abrasive cleaners or harsh solvents.
- Clean the appliance interior after each use. Then you can remove dirt more easily and it does not burn on.
- Clean stubborn dirt with a special cleaner.
- Clean all accessories regularly and let them dry. Use a soft cloth with warm water and a cleaning agent.
- To soften hard to remove remains, boil a glass of water at full microwave power for 2 to 3 minutes.
- To remove odours, mix a glass of water with 2 tsp of lemon juice and boil at full microwave power for 5 minutes.

## TROUBLESHOOTING



### WARNING!

Refer to the safety chapters.

Problem	Possible cause	Remedy
The appliance does not operate.	The appliance is deactivated.	Activate the appliance.
	The appliance is not plugged in.	Plug in the appliance.
	The fuse in the fuse box is blown.	Check the fuse. If the fuse blows more than one time, contact a qualified electrician.
	The door is not closed properly.	Make sure that nothing blocks the door.
The lamp does not operate.	The lamp is defective.	The lamp has to be replaced. Contact the customer service centre.
There is sparking in the cavity.	There are metal dishes or dishes with metal trim.	Remove the dish from the appliance.
	There are metal skewers or aluminium foil that touches the interior walls.	Make sure that the skewers and foil does not touch the interior walls.
The turntable set makes scratching or grinding noise or does not rotate smoothly.	There is an object or dirt below the glass cooking tray.	Clean the area below the glass cooking tray including rollers. Check turntable roller assembly and glass are installed correctly.
The appliance stops operating without a clear reason.	There is a malfunction.	Check ventilation of the unit is not obstructed. If this situation repeats with correct installation call the customer service centre.
Microwave runs cooking cycle but food does not heat up.	Internal self-resetting thermostat has activated. The microwave is fitted with a thermostat to protect internal components from overheating.	Once the thermostat's temperature has reduced the unit should function normally. Wait 5 minutes then try the appliance again.
Steam accumulating on microwave oven door or leaking from vents.	Cooking foods with a high moisture content will always produce steam.	This is a normal part of the cooking process.
Smoke during cooking process.	Fat accumulated on cavity grill element.	Ensure inside of unit is cleaned regularly.

If you cannot find a solution to the problem yourself, contact your dealer or the customer service centre.

The necessary data for the customer service centre is on the rating plate on the appliance.

We recommend that you write the data here:

Model (M)

.....

Product number (PNC)

.....

Serial number (S.N.)

.....

## INSTALLATION



### CAUTION!

Do not block the air vents. If you do that, the appliance can overheat.




### CAUTION!

Do not connect the appliance to adapters or extension leads. This can cause overloading and risk of fire.

- Put the appliance far away from steam, hot air and water splashes.
- If the appliance is stored/ transported at sub-zero temperatures, do not activate it immediately after installation. Allow at least two hours for it to be brought up to room temperature before turning on the unit.

### Installation

- Remove all packing material and any promotional material from the microwave oven.
- Examine the oven for any damage such as dents or a broken door. Do not install if the oven is damaged. Call the service centre.
- Remove the protective film on the oven cabinet surface. Do not remove the light brown Mica cover that is attached to the right-hand side of the oven cavity to protect the magnetron.
- Do not leave the packing material so that small children can play with it. This can be hazardous.
- Select a flat, level surface that provides enough open space for the intake and outlet vents and that is strong enough to bear the weight of the oven. A minimum clearance of 7.5cm is required between the oven and any adjacent walls. Leave a minimum clearance 30cm above the oven.

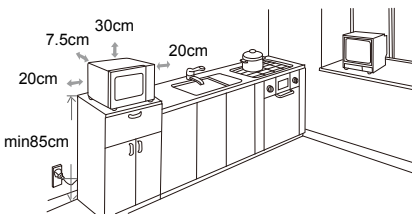

Blocking the intake or outlet vents can damage the oven. If air vents are blocked during operation, the oven may overheat, and this may lead to malfunctioning. Hot air escapes from the vents, so be sure not to obstruct it or let curtains come between the oven and the rear wall.

*NOTE: It is recommended to have greater than 7.5cm clearance on at least one of the sides to improve product performance and operation.*

- The oven should be placed in a stable position to avoid the possibility of causing vibration or noise.
- Do not remove the legs from the bottom of the oven.
- This oven should only be installed freestanding; not built-in or in a cabinet.
- Keep the oven away from heat and water. Exposure to heat and water can lower the efficiency and lead to malfunctioning.
- Place the oven as far away from radios and TV as possible. Operation of the oven may cause interference to your radio or TV reception.
- When there is interference, it may be reduced or eliminated by taking the following measures:
  - Clean door and sealing surface of the microwave oven.
  - Reorient the receiving antenna of the radio and/or television.
  - Move the microwave oven away from the receiver.
  - Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.
- Be sure the voltage and frequency where you connect the microwave oven is the same as specified on the rating plate on the microwave oven. If the microwave oven is connected to the socket via an extension cord, make sure the cord is earthed.



### WARNING!

If installed near or over a heat source, the microwave oven could be damaged.



### WARNING!

This microwave oven must not be used on a non-earth protected power supply. Contact an electrician if you are uncertain regarding electrical connection of the oven or provision of earth protection of the supply.



### WARNING!

If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## ELECTRICAL INSTALLATION



### WARNING!

Only a qualified person must do the electrical installation.



The manufacturer is not responsible if you do not follow the safety precautions from the chapter "Safety Instructions".

This appliance is supplied with a main cable and main plug.



### WARNING!

The microwave oven is fitted with a plug and must be only connected to a properly installed, earthed socket. In accordance with the appropriate regulations, the socket must only be installed and the connecting cable must only be replaced by a qualified electrician. If the plug is no longer accessible following installation an all-pole isolating switch must be present on the installation side with a contact gap of at least 3mm.

## Customer care center

<p><b>Thailand</b> Consumer Care Tel : (+66 2) 725 9000 Electrolux Thailand Co., Ltd. Electrolux Building 14th Floor 1910 New Phetchaburi Road, Bangkapi, Huai Khwang, Bangkok 10310 Office Tel : (+66 2) 7259100 Office Fax : (+66 2) 7259299 Email : customercarethai@electrolux.com</p>	<p><b>Malaysia</b> Consumer Care Center Tel: 1300-88-11-22 Electrolux Home Appliances Sdn. Bhd. Corporate Office Address: Unit T2-7, 7th Floor, Tower 2, PJ33, No. 3, Jalan Semangat, Seksyen 13, 46200 Petaling Jaya, Selangor. Office Tel : (+60 3) 7843 599 9 Office Fax : (+60 3) 7955 5511 Consumer Care Center Address: Lot C6, No. 28, Jalan 15/22, Taman Perindustrian Tiong Nam, 40200 Shah Alam, Selangor Consumer Care Center Fax : (+60 3) 5524 2521 Email : malaysia.customercare@electrolux.com</p>
<p><b>Indonesia</b> Hotline service: 08041119999 PT. Electrolux Indonesia Electrolux Building Jl.Abdul Muis No.34, Petojo Selatan, Gambir Jakarta Pusat 10160 Email:customercare@electrolux.co.id SMS &amp; WA : 0812.8088.8863</p>	<p><b>Philippines</b> Consumer Care Center Toll Free : 1-800-10-845-CARE(2273) Consumer Care Hotline : (+63 2) 845-CARE(2273) Electrolux Philippines, Inc. Unit B 12F Cyber Sigma Bldg, Lawton Avenue, McKinley West, Taguig, Philippines 1634 Trunkline: +63 2 737- 4757 Website : www.electrolux.com.ph Email : wecare@electrolux.com</p>
<p><b>Vietnam</b> Consumer Care Center Toll Free: 1800-58-88-99 Tel: (+84 28) 3910 5465 Electrolux Vietnam Ltd. Floor 10th, Sofic Tower 10 Mai Chi Tho Street – Thu Thiem Ward – District 2 Thu Duc City, Ho Chi Minh City, Vietnam Office Tel: (+84 28) 3910 5465 Office Fax: (+84 28) 3910 5470 Email: vncare@electrolux.com</p>	<p><b>Singapore</b> Consumer Care Center Tel: (+65) 6727 3699 Electrolux S.E.A. Pte Ltd. 351 Braddell Road #01-04, 351 On Braddell Singapore 579713. Email : customer-care.sin@electrolux.com</p>
<p><b>Korea</b> Contact Center: 1566-1238 Electrolux Korea Ltd. 9th Floor, Pine Avenue B, 100 Eulji-ro, Jung-gu, Seoul 04551, Korea Electrolux Korea Home page: www.electrolux.co.kr Customer Care Home page: www.electroluxconsumer.co.kr Email: homecare.krh@electrolux.com</p>	<p><b>Taiwan</b> Consumer Care Center Toll Free: 0800-888-259 Electrolux S.E.A Private Limited Taiwan Branch 4F., No.3, Sec. 1, Dunhua S. Rd. Songshan Dist., Taipei City 105408 Taiwan (R.O.C.) Email: service.tw@electrolux.com</p>

## ด้วยความห่วงใยผู้ใช้งานทุกท่าน

ขอขอบคุณที่เลือกซื้อเครื่องใช้ไฟฟ้าของ Electrolux คุณได้เลือกผลิตภัณฑ์ที่มาพร้อมกับระบบการันตีและนวัตกรรมอย่างมืออาชีพที่ส่งมอบมาบนันสิบปี สร้างสรรค์และมีสไตล์ ออกแบบโดยคำนึงถึงคุณเป็นหลัก ดังนั้นเมื่อใดก็ตามที่คุณใช้ผลิตภัณฑ์ดังกล่าว คุณจะรู้สึกปลอดภัย เพราะรู้ว่าคุณจะได้ผลลัพธ์ที่ยอดเยี่ยมทุกครั้ง ขอต้อนรับสู่ Electrolux

### ก่อนใช้งานเป็นครั้งแรก

ตรวจสอบหาร่องรอยความเสียหายหรือตำหนิต่าง ๆ หากพบว่าอุปกรณ์ชำรุดเสียหายหรือมีรอย คุณต้องแจ้งภายใน 7 วัน เพื่อเคลมสินค้าที่ชำรุดเสียหายภายใต้การรับประกันของบริษัท และไม่กระทบต่อสิทธิตามกฎหมายของคุณ

ก่อนใช้งาน เราขอแนะนำให้คุณอ่านคู่มือการใช้งานทั้งหมดซึ่งมีคำอธิบายเกี่ยวกับผลิตภัณฑ์และฟังก์ชันการทำงานให้เข้าใจก่อน สิ่งสำคัญคือต้องติดตั้งผลิตภัณฑ์อย่างถูกต้อง และอ่านคำแนะนำด้านความปลอดภัยอย่างละเอียด เพื่อหลีกเลี่ยงอันตรายที่อาจเกิดขึ้นและการใช้อุปกรณ์ผิดวัตถุประสงค์

โปรดเก็บคู่มือเล่มนี้ไว้ในที่ปลอดภัยเพื่อนำมาใช้อ้างอิงในอนาคต

### เงื่อนไขการใช้งาน

อุปกรณ์นี้ผลิตขึ้นเพื่อใช้ในครัวเรือน และการใช้งานที่คล้าย ๆ กันเช่น:

- ส่วนของห้องครัวสำหรับพนักงานภายในร้าน สำนักงานและพื้นที่ทำงานอื่น ๆ
- บ้านพักในฟาร์ม
- โดยลูกค้าในโรงแรม ห้องพักและพื้นที่พักอาศัยในรูปแบบอื่น ๆ
- สถานประกอบการที่ให้บริการห้องพักและอาหารเข้า

### ก่อนโทรติดต่อศูนย์บริการ

คุณต้องอ่านคู่มือการใช้งานอย่างครบถ้วนก่อนโทรเข้าสู่ศูนย์บริการที่อาจมีการเรียกเก็บค่าบริการเพิ่มเติม

### บันทึกกลุ่มและหมายเลขเครื่องที่นี้:

รุ่น: \_\_\_\_\_

หมายเลขเครื่อง: \_\_\_\_\_

#### ข้อมูลสำคัญที่อาจส่งผลกระทบต่อการใช้งาน

การปฏิบัติตามคำแนะนำในการใช้งานที่ปรากฏในคู่มือนี้มีความสำคัญอย่างยิ่งต่อสุขภาพและความปลอดภัย การไม่ปฏิบัติตามข้อกำหนดในคู่มือนี้อย่างเคร่งครัด อาจส่งผลให้เกิดการบาดเจ็บ ความเสียหายต่อทรัพย์สิน และส่งผลกระทบต่อสิทธิในการเรียกร้องค่าชดเชยของคุณภายใต้การรับประกันของบริษัท Electrolux ที่มาพร้อมกับผลิตภัณฑ์ของคุณ จะต้องใช้ ติดตั้ง และใช้งานผลิตภัณฑ์ให้สอดคล้องกับคำแนะนำในคู่มือนี้ คุณอาจไม่สามารถอ้างสิทธิในการรับประกันของบริษัท Electrolux ได้ ในกรณีที่ผลิตภัณฑ์เสียหายเนื่องจากคุณไม่ได้ปฏิบัติตามคู่มือนี้

## สารบัญ

คำเตือนทั่วไป .....	13
คำแนะนำด้านความปลอดภัย .....	14
รายละเอียดผลิตภัณฑ์ .....	15
อุปกรณ์เสริม .....	15
แผงควบคุม .....	15
การใช้งานประจำวัน .....	16
การใช้อุปกรณ์เสริม .....	18
เคล็ดสลับและข้อแนะนำ .....	18
การดูแลรักษาและการทำความสะอาด .....	19
การแก้ไขปัญหา .....	19
การติดตั้ง .....	20
การติดตั้งระบบไฟฟ้า .....	21
ศูนย์บริการลูกค้า .....	21

### สัญลักษณ์



**คำเตือน!**

**สัญลักษณ์นี้แสดงข้อมูลเกี่ยวกับความปลอดภัยของคุณ**



**ข้อควรระวัง!**

**สัญลักษณ์นี้แสดงข้อมูลเกี่ยวกับวิธีการหลีกเลี่ยงความเสียหายที่จะเกิดกับเครื่อง**



**สิ่งสำคัญ!**

**สัญลักษณ์นี้แสดงเคล็ดสลับและข้อมูลเกี่ยวกับการใช้เครื่อง**



**สิ่งแวดลอม!**

**สัญลักษณ์นี้แสดงเคล็ดสลับและข้อมูลเกี่ยวกับการใช้เครื่องอย่างประหยัดและไม่มีตรงกับสิ่งแวดล้อม**

### ข้อมูลการกึ่งผลิตภัณฑ์สำหรับผู้ใช้



**สิ่งแวดลอม!**

- วัสดุบรรจุภัณฑ์ส่วนใหญ่ทำจากพลาสติกได้ โปรดทิ้งวัสดุเหล่านี้ ณ ศูนย์รีไซเคิลในพื้นที่ของคุณ หรือหรือทิ้งในถังขยะที่เหมาะสม
- หากคุณต้องการกึ่งผลิตภัณฑ์นี้ โปรดติดต่อหน่วยงานในพื้นที่ของคุณ และสอบถามวิธีการกึ่งที่ถูกต้อง

## คำเตือนทั่วไป

โปรดอ่านคำแนะนำด้านความปลอดภัยที่สำคัญให้เข้าใจ และเก็บไว้ใช้อ้างอิงในอนาคต ส่งต่อคู่มือผู้ใช้ให้กับเจ้าของเครื่องคนใหม่

หมายเหตุ! คุณต้องอ่านคำเตือนอย่างละเอียดก่อนติดตั้งหรือใช้เครื่อง หากต้องการความช่วยเหลือ โปรดติดต่อฝ่ายบริการลูกค้า บริษัทจะไม่ยอมรับผิดในกรณีที่มีการละเลยคำแนะนำเหล่านี้หรือคำแนะนำด้านความปลอดภัยอื่นๆ ที่รวมอยู่ในคู่มือนี้

### ความปลอดภัยของเด็กและผู้ที่มีความเสี่ยง



#### คำเตือน!

#### เสี่ยงต่อการขาดอากาศหายใจ ได้รับบาดเจ็บ หรือถูกพลกกาว

- เครื่องใช้ไฟฟ้านี้ไม่เเจตนาให้ใช้โดยบุคคล (รวมถึงเด็ก) ที่ด้อยความสามารถทางร่างกาย การประสาขสัมพันธ์หรือจิตใจหรือขาดประสบการณ์และความรู้ เว้นแต่ว่าจะได้รับการควบคุมดูแลหรือการสอนเกี่ยวกับการใช้ เครื่องใช้ไฟฟ้าโดยบุคคลที่รับผิดชอบต่อความปลอดภัยของบุคคลเหล่านั้น
- ควรควบคุมดูแลไม่ให้เด็กเล่นกับอุปกรณ์นี้
- เก็บบรรจุภัณฑ์ทั้งหมดให้ห่างจากมือเด็ก
- หากเครื่องนี้ถูกปรณป้องกันเด็ก เราขอแนะนำให้คุณเปิดใช้งานอุปกรณ์ดังกล่าว หากมีเด็กอยู่ด้วย
- คำเตือน! ชิ้นส่วนที่เข้าถึงได้อาจร้อนขึ้นระหว่างการใช้งาน จึงควรระวังไม่ให้เด็กเลือกอยู่ใกล้กับเครื่อง



#### ข้อควรระวัง!

#### โปรดอ่านคำแนะนำด้านความปลอดภัยที่สำคัญให้เข้าใจ และเก็บไว้ใช้อ้างอิงในอนาคต

#### ความปลอดภัยทั่วไป

- ภายในเครื่องจะร้อนเมื่อใช้งาน ห้ามแตะชิ้นส่วนที่ความร้อนที่อยู่ในเครื่อง สวมถุงมือเสมอเมื่อต้องหยิบอุปกรณ์เสริมหรือเครื่องใช้ในเตาอบมา รวมทั้งตอนนำเข้าไป
- ห้ามใช้เครื่องทำความสะอาดด้วยไอน้ำในการทำความสะอาดเตา
- ถอดปลั๊กเตาไมโครเวฟออกก่อนทำการบำรุงรักษา
- ห้ามใช้เตาไมโครเวฟ หากประตูหรือซิลประตูชำรุดจนกว่าจะได้รับการซ่อมแซมโดยช่างผู้ชำนาญ
- เตาไมโครเวฟไม่ได้ผลิตขึ้นเพื่อใช้งานร่วมกับตัวจับเวลาภายนอกหรือระบบรีโมทคอนโทรลแยก
- ฝาครอบของเตาไมโครเวฟมีไว้เพื่อป้องกันการสัมผัสกับพลังงานไมโครเวฟ การซ่อมบำรุงหรือการซ่อมแซมที่ถอดถอดฝาครอบเตาออกมา ต้องดำเนินการโดยช่างผู้ชำนาญเท่านั้น
- อย่านุ่มของเหลวและอาหารอื่นๆ ที่อยู่ในภาชนะที่ปิดสนิท เพราะอาจเกิดการระเบิดได้
- ใช้ภาชนะที่สามารถใช้กับเตาไมโครเวฟเท่านั้น

- เมื่ออุ่นอาหารในภาชนะพลาสติกหรือกระดาษ ให้เฝ้าอยู่ตลอดเวลา เพราะภาชนะอาจติดไฟได้
- เตาไมโครเวฟออกแบบมาเพื่ออุ่นอาหารและเครื่องดื่ม การใช้เตาไมโครเวฟเพื่อทำอาหารหรือเสิร์ฟแห้ง ให้ความร้อนกับแผ่นทำความร้อน รองเท้าแตะ ฟองน้ำ ผ้าขนหนูหมาด ๆ และอื่นๆ อาจเสี่ยงที่จะเกิดการบาดเจ็บ เกิดประกายไฟ หรือไฟไหม้ได้
- หากมีควันลอยออกมา ให้ปิดสวิตช์เตาไมโครเวฟหรือถอดปลั๊กออก โดยที่ยังปิดประตูเตาไว้ เพื่อไม่ให้เปลวไฟลุกลาม
- การใช้เตาไมโครเวฟอุ่นเครื่องดื่ม อาจทำให้เครื่องดื่มเดือดและร้อนจัด ได้ ต้องใช้ความระมัดระวังเมื่อกายบนะ
- ควรตรวจเช็ช่ย่าวตมและถอดอาหารเด็ก และตรวจสอบอุณหภูมิก่อนบริโภค เพื่อป้องกันการลวก
- ไมควรอุ่นไข่ดิบทั้งฟองและไข่ต้มที่ยังไม่ได้ปอกเปลือกในเตาไมโครเวฟ เพราะไข่อาจระเบิดได้ แม้ว่าเตาไมโครเวฟจะหยุดให้ความร้อนแล้วก็ตาม
- ควรทำความสะอาดเตาไมโครเวฟและจัดทราอาหารที่ค้างอยู่ในเตาออกเป็นประจำ
- หากไม่รักษาความสะอาดของเตาไมโครเวฟ พื้นผิวของเตาจะเสื่อมสภาพ ที่อาจส่งผลเสียต่ออายุการใช้งานและอาจทำให้เกิดอันตรายได้
- พื้นผิวของเตาในส่วนที่สัมผัสได้ อาจร้อนขณะที่ใช้เตา
- เตาไมโครเวฟออกแบบมาเพื่อตั้งวาง ต้องเฝ้าวางเตาไว้ด้านหลังประตูแต่หรือในตู้ที่ปิดมิดชิด โปรดปฏิบัติตามข้อกำหนดการติดตั้งในคู่มือนี้
- ห้ามใช้ยาฆ่าความสะอาดที่มีฤทธิ์กัดกร่อนรุนแรงหรือที่ซูดโลหะแหลมคมในการทำความสะอาดประตูกระจก เพราะอาจทำให้กระจกเป็นรอยและแตกได้
- หากสายไฟชำรุดเสียหาย ผู้มีหน้าที่เปลี่ยนคือบริษัท ศูนย์บริการที่ได้รับอนุญาต หรือบุคลากรผู้เชี่ยวชาญ เพื่อป้องกันอันตรายที่อาจเกิดขึ้น



#### ข้อควรระวัง!

หลีกเลี่ยงอันตรายจากการรีเซ็ตอุปกรณ์ตัดวงจรเมื่ออุณหภูมิสูงโดยไม่ได้ตั้งใจไว้ด้วยการไม่เสียบปลั๊กเตาไมโครเวฟเข้ากับอุปกรณ์สวิตช์ภายนอก เช่น ตัวจับเวลา หรือเชื่อมต่อกับวงจรที่มีการเปิดปิดเป็นประจำ



#### คำเตือน!

ปิดสวิตช์เตาไมโครเวฟก่อนเปลี่ยนหลอดไฟเพื่อป้องกันไฟฟ้าช็อต



#### หมายเหตุ:

- อาจมีสารตกค้างหรือน้ำมันจากการผลิตหลงเหลืออยู่ภายในเตา อาจส่งผลให้เกิดกลิ่นหรือควันได้ในช่วงแรกของการใช้งาน ซึ่งถือเป็นเรื่องปกติ และจะหายไปเองหลังจากใช้งานไประยะหนึ่ง เราแนะนำให้คุณทำตามขั้นตอนต่อไปนี้
- เปิดโหมดย่างแล้วปล่อยให้เครื่องทำงาน ทำแบบนั้นซ้ำหลายครั้งโดยไม่ต้องใส่อาหารเข้าไปในเตาไมโครเวฟ
  - ตรวจสอบให้แน่ใจว่าเครื่องอยู่ในที่อากาศถ่ายเทสะดวก

## คำแนะนำด้านความปลอดภัย

### การติดตั้ง



#### คำเตือน!

**การติดตั้งเครื่องนี้ ต้องดำเนินการโดยผู้ที่มีความสามารถเท่านั้น**

- นำบรรจุภัณฑ์ทั้งหมดออก
- ห้ามติดตั้งหรือใช้เตาไมโครเวฟที่ชำรุดเสียหาย
- ปฏิบัติตามคำแนะนำในการติดตั้งที่มาพร้อมกับเตาไมโครเวฟ
- โปรดใช้ความระมัดระวังในการเคลื่อนย้าย เนื่องจากเครื่องมีน้ำหนักมาก สวมถุงมือหนังเสมอ
- รักษาระยะห่างขั้นต่ำจากเครื่องใช้และอุปกรณ์อื่นๆ

### การต่อระบบไฟฟ้า



#### คำเตือน!

**เสี่ยงที่จะเกิดไฟไหม้และไฟฟ้าช็อต**

- อุปกรณ์นี้มาพร้อมกับสายไฟและปลั๊กไฟ 10A เหมาะสำหรับใช้กับเต้ารับ 10A แบบมาตรฐาน หากจำเป็นต้องติดตั้งเต้ารับ ควรให้ช่างผู้ชำนาญเป็นผู้ดำเนินการ
- อุปกรณ์จะต้องต่อสายดิน
- ขั้วกลางไฟฟ้าที่อยู่บนป้ายระบุต้องสอดคล้องกับแหล่งจ่ายไฟ หากไม่ตรงกัน แนะนำให้ตัดต่ออย่างไฟฟ้า
- เสียบปลั๊กไฟเข้ากับเต้ารับไฟหลักเมื่อวางเตาไมโครเวฟเรียบร้อยแล้ว คุณจะต้องเอื้อมเสียบปลั๊กและดึงปลั๊กไฟหลักได้สะดวกหลังจากติดตั้งเสร็จแล้ว
- ปลั๊กไฟและสายไฟต้องไม่ชำรุดเสียหาย ติดต่อกับศูนย์บริการหรือช่างไฟฟ้าเพื่อเปลี่ยนสายไฟที่ชำรุดเสียหาย
- ห้ามดึงที่สายไฟเมื่อจะถอดปลั๊ก ดึงที่ตัวปลั๊กไฟเสมอ

### การใช้งาน



#### คำเตือน!

**เสี่ยงต่อการบาดเจ็บ ไฟไหม้หรือไฟฟ้าช็อต หรือเกิดการระเบิด**

- ใช้เตาไมโครเวฟในครัวเรือนเท่านั้น
- ต้องปฏิบัติตามคำแนะนำการใช้
- ต้องไม่มีอะไรปิดกั้นช่องระบายอากาศ
- ห้ามปล่อยให้เครื่องทำงานโดยไม่มีผู้ดูแล
- อย่าออกแรงกดประตูที่ปิดอยู่
- ห้ามใช้เครื่องเป็นพื้นที่ทำงาน และห้ามเก็บของในช่องใส่อาหาร
- ห้ามใช้เตาไมโครเวฟโดยไม่ใส่อาหาร
- ใ้มนุญาตให้ใช้ภาชนะโลหะใส่อาหารและเครื่องดื่มในระหว่างการทำอาหารด้วยไมโครเวฟ

### การดูแลรักษาและการทำความสะอาด



#### คำเตือน!

**เสี่ยงต่อการบาดเจ็บ ไฟไหม้ หรือเครื่องชำรุดเสียหาย**

- ก่อนบำรุงรักษา ควรปิดและถอดปลั๊กไฟหลักออกจากเต้ารับ
- ทำความสะอาดเครื่องเป็นประจำเพื่อป้องกันไม่ให้พื้นผิวเสื่อมสภาพ
- อย่าให้เศษอาหารหรือสารตกค้างจากน้ำยาทำความสะอาดสะสมบนขอบยางของประตู
- ไขมันหรืออาหารที่เหลืออยู่ในเครื่อง อาจทำให้เกิดควัน/ไฟไหม้ได้ โดยเฉพาะที่อยู่บนตะแกรงย่าง
- ทำความสะอาดเครื่องด้วยผ้าชุบน้ำหมาดๆ ใช้น้ำยาทำความสะอาดที่มีค่าเป็นกลางเท่านั้น ห้ามใช้ผลิตภัณฑ์ที่มีฤทธิ์กัดกร่อน ผ่นใยขัดถู ตัวทำละลาย หรือวัตถุที่เป็นโลหะ
- ห้ามใช้เครื่องทำความสะอาดด้วยไอน้ำทำความสะอาดอุปกรณ์นี้

### การกึ่งผลิตภัณฑ์




#### คำเตือน!

**เสี่ยงต่อการบาดเจ็บหรือขาดอากาศหายใจ**

- ถอดปลั๊กอุปกรณ์ออกจากเต้ารับ
- ถอดสายไฟแล้วนำไปทิ้ง

## รายละเอียดผลิตภัณฑ์

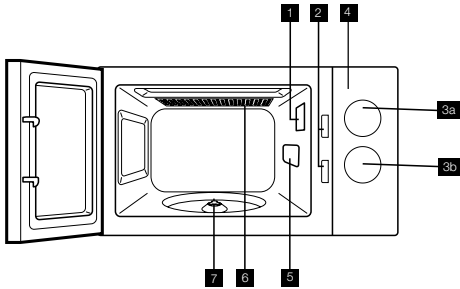


- |                                |                     |
|--------------------------------|---------------------|
| 1 หลอดไฟ                       | 4 แผงควบคุม         |
| 2 ระบบล็อกเพื่อความปลอดภัย     | 5 แผ่นปิดก้นน้ำคั้น |
| 3a มปรับระดับกำลังไฟฟ้าแบบหมุน | 6 ตะแกรงย่าง        |
| 3b ปุ่มตั้งเวลาแบบหมุน         | 7 แถบหมุน           |

## อุปกรณ์เสริม

### ชุดจานหมุน


จานหมุนแก้วและลวดวงแหวน

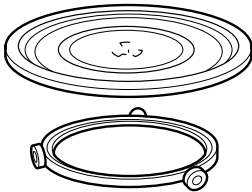

ใช้ชุดจานหมุนเพื่อเตรียมอาหารในเตาไมโครเวฟเสมอ

### ตะแกรงย่าง


สำหรับย่างอาหารและทำอาหารแบบผสม

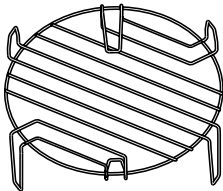

### คำเตือน!

ตะแกรงย่างไม่เหมาะกับการใช้งานฟังก์ชันไมโครเวฟ สามารถใช้กับฟังก์ชันย่าง อบลมร้อน และแบบผสม (รวมถึงการไมโครเวฟเป็นระยะเวลาสั้นๆ) เท่านั้น การใช้ตะแกรงย่างในฟังก์ชันไมโครเวฟ อาจทำให้อุปกรณ์เสียหายได้

## แผงควบคุม

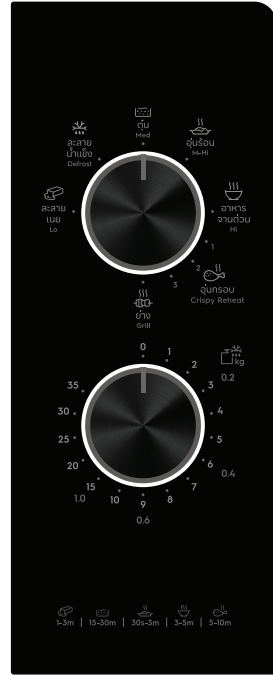

สัญลักษณ์	ฟังก์ชัน	รายละเอียด
1		อาหารจานด่วน ทำอาหารอย่างรวดเร็วหรือตามปกติ
2		อุ่นร้อน ทำอาหารตามปกติ อุ่นร้อน
3		ตุ๋น ทำอาหารช้าๆ ตุ๋น หรือเคี้ยว
4		ละลายน้ำแข็ง ละลายน้ำแข็งอาหารตามเวลาที่ตั้งไว้
5		ละลายเนย ละลายน้ำแข็ง/ทำให้นุ่ม
6		ละลายน้ำแข็ง ละลายน้ำแข็งอาหารโดยคำนวณน้ำหนัก
7		ย่าง ทำอาหาร ปิ้งหรือย่าง
8		อุ่นกรอบ อุ่นอาหารทอด

## การใช้งานประจำวัน

### ภาชนะและวัสดุที่เหมาะสม

ภาชนะ / วัสดุ	ไมโครเวฟ			ย่าง/ อบลมร้อน
	ละลายน้ำแข็ง	อุ่นอาหาร	การทำอาหาร	
แก้วและพอร์ซเลนที่ใช้กับเตาอบได้ (ไม่มีส่วนประกอบที่เป็นโลหะ เช่น แก้ว Pyrex, แก้วทนความร้อน)	■	■	■	■
แก้วและพอร์ซเลนที่ใช้กับเตาอบไม่ได้ <sup>1)</sup>	■	--	--	--
แก้วและเซรามิกแก้วที่ทำจากวัสดุที่ใช้กับเตาอบได้/ทนการแช่แข็ง (เช่น Arcoflam) ขึ้นวางสำหรับย่าง	■	■	■	■
เซรามิก <sup>2)</sup> , เครื่องปั้นดินเผา <sup>2)</sup>	■	■	■	--
พลาสติกทนความร้อนที่อุณหภูมิ 200°C <sup>3)</sup>	■	■	■	--
กระดาษแข็ง, กระดาษ	■	--	--	--
ฟิล์มยึดถนอมอาหาร	■	--	--	--
ฟิล์มสำหรับอบย่างพร้อมฝาปิดที่นำเข้าไมโครเวฟได้ <sup>3)</sup>	■	■	■	--
จานสำหรับอบย่างที่ทำจากโลหะ เช่น อีนาเมล เหล็กหล่อ	--	--	--	■
แม่พิมพ์อบขนม ที่เคลือบเงาดำหรือซิลิโคน <sup>3)</sup>	--	--	--	■
ถาดอบขนม	--	--	--	■
ภาชนะทำอาหาร เช่น กระถาง หรือจานสำหรับอบกรอบ	--	■	■	--
อาหารสำเร็จรูปบรรจุห่อ <sup>3)</sup>	■	■	■	■

- 1) ไม่มีการเคลือบหรือตกแต่งด้วยเงิน ทอง ทองคำขาว หรือโลหะ
- 2) ไม่มีส่วนประกอบที่ทำจากควอartz หรือโลหะ หรือการเคลือบผิวด้วยโลหะ
- 3) คุณจะต้องปฏิบัติตามคำแนะนำของบริษัผู้ผลิตเกี่ยวกับการใช้อุณหภูมิสูงสุด

■ เหมาะสม  
-- ไม่เหมาะสม



## การใช้งานประจำวัน (ต่อ)

### ตารางแสดงการตั้งค่าระดับความร้อน

สัญลักษณ์	ระดับความร้อน	กำลังไฟฟ้า (วัตต์)	อาหารที่เหมาะสม
	อาหารจานด่วน - สูง	800 วัตต์	อุ่นเครื่องต้ม หุงข้าว ทำอาหารชนิดผัดและก๋วยเตี๋ยว
	อุ่นร้อน - ปานกลาง สูง	640 วัตต์	ทำอาหารชนิดเนื้อสัตว์ปิ้ง อุ่นร้อน
	อุ่น - ปานกลาง	440 วัตต์	เคี้ยวน้ำซุป สตูว์ปลาและอาหารทะเล
	ละลายน้ำแข็ง - ปานกลาง ต่ำ	240 วัตต์	ละลายอาหาร
	ละลายเนย - ต่ำ	140 วัตต์	ละลายเนย/ชีสโกกแลต อุ่นอาหารปรุงสุก

### ละลายน้ำแข็ง



1. หมุนปุ่มไปที่ **Defrost**
2. เลือกเวลาที่เหมาะสม  
หมายเหตุ: หากต้องการเวลาไม่ถึง 3 นาที ให้หมุนปุ่มตั้งเวลาเลขตำแหน่ง 3 นาที ก่อนหมุนกลับมาที่ตัวเลขเวลาที่ต้องการ
3. เมื่อตั้งเวลาที่ต้องการเสร็จแล้ว การทำอาหารก็จะเริ่มต้นขึ้น หากต้องหยุดพักเป็นช่วง ๆ แต่เปิดประตูเตาอบ และปิดเพื่อให้เตากลับมาทำงานอีกครั้ง
4. เมื่อหมดเวลาที่ตั้งไว้และการทำอาหารสิ้นสุดลง คุณจะได้ยินเสียงกริ่งดังมาจากเตาไมโครเวฟ ส่วนหลอดไฟที่อยู่ด้านในจะดับเองโดยอัตโนมัติ  
หมายเหตุ: หากนำอาหารออกก่อนหมดเวลา ให้หมุนปุ่มตั้งเวลากลับไปเป็น "0" เพื่อป้องกันไม่ให้เกิดการทำงานโดยไม่มีอาหารอยู่ด้านใน

ดูเวลาที่แนะนำสำหรับการละลายน้ำแข็งอาหารได้จากด้านล่าง:

รายการ	น้ำหนัก	เวลาละลายน้ำแข็ง
1	200 กรัม	ประมาณ 4 นาที
2	400 กรัม	ประมาณ 8 นาที
3	600 กรัม	ประมาณ 12 นาที




ห้ามใช้การละลายน้ำแข็งตามน้ำหนักกับอาหารที่นำออกจากช่องแช่แข็งเกิน 20 นาที หรืออาหารสำเร็จรูปแช่แข็ง

### การตั้งค่าระดับความร้อน:

ระดับความร้อน	กำลังไฟฟ้า (วัตต์)	อาหารที่เหมาะสม
<b>ย่าง</b>	ย่าง 100%	ย่างเนื้อสัตว์ ไส้กรอก เนื้อแกะ อาหารทะเล สเต็ก หรืออาหารอื่นที่แล่ชิ้นบาง ฯลฯ
<b>แบบผสม 1</b>	ย่าง 80% ไมโครเวฟ 20%	ขนมปังปิ้ง อาหารที่สไลด์เป็นแผ่น แซนด์วิช ฯลฯ
<b>แบบผสม 2 (อุ่นกรอบ)</b>	ย่าง 70% ไมโครเวฟ 30%	นิกเก็ตไก่ เนื้ออกไก่ ปีกไก่ ฯลฯ
<b>แบบผสม 3</b>	ย่าง 60% ไมโครเวฟ 40%	ย่างไก่หรือเปิดทั้งตัว

### ย่างหรือการทำอาหารแบบผสม



1. หมุนปุ่มไปที่ **Reheat / Grill**
2. เลือกเวลาที่เหมาะสม
3. เมื่อตั้งเวลาที่ต้องการเสร็จแล้ว การทำอาหารจะเริ่มต้นขึ้น หากต้องหยุดพักเป็นช่วง ๆ แต่เปิดประตูเตา และปิดเพื่อให้เตากลับมาทำงานอีกครั้ง

## การใช้อุปกรณ์เสริม



**คำเตือน!**

โปรดดูรายละเอียดจากหัวข้อความปลอดภัย




**ข้อควรระวัง!**

ห้ามทำอาหารโดยไม่ใช้ชุดจานหมุน ใช้ชุดจานหมุนที่มาพร้อมกับเครื่องเท่านั้น




ห้ามวางอาหารบนจานหมุนแก้วภายในเตาไมโครเวฟโดยตรง

### การติดตั้งจานหมุน

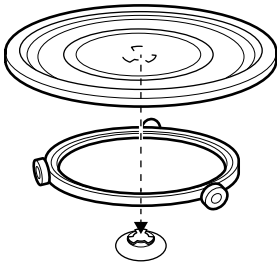

1. วางวงแหวนประกอบจานหมุนลงบนแกนหมุน
2. ก่อนใช้งานครั้งแรก ให้แกะแถบออกจากกลางแกนหมุน
3. วางจานหมุนแก้วทำอาหารลงบนวงแหวน

### การวางตะแกรงย่าง

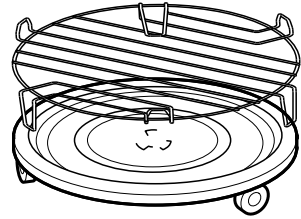

วางตะแกรงย่างบนชุดจานหมุน



**คำเตือน!**

ตะแกรงย่างไม่เหมาะที่จะใช้กับฟังก์ชันไมโครเวฟ สามารถใช้กับฟังก์ชันย่าง อบลมร้อน และแบบผสม (รวมถึงการไมโครเวฟเป็นระยะเวลาสั้นๆ) เท่านั้น การใส่ตะแกรงย่างในฟังก์ชันไมโครเวฟเท่านั้น อาจทำให้อุปกรณ์เสียหายได้

## เคล็ดลับและข้อแนะนำ

ปัญหา	วิธีการแก้ไข
ไม่พบรายละเอียดเกี่ยวกับปริมาณอาหารที่เตรียมไว้	เทียบเคียงจากอาหารที่คล้ายกัน เพิ่มหรือลดระยะเวลาในการทำอาหารตามกฎต่อไปนี้: <b>ปริมาณเพิ่มขึ้นสองเท่า = เพิ่มเวลาเกือบสองเท่า, ปริมาณลดลงครึ่งหนึ่ง = ลดเวลาครึ่งหนึ่ง</b>
อาหารแห้งเกินไป	ตั้งเวลาทำอาหารให้สั้นลงหรือเลือกกำลังไฟไมโครเวฟที่ต่ำลง
อาหารแข็งไม่ละลาย อาหารไม่ร้อนหรือสุกหลังจากหมดเวลาที่ตั้งไว้	ตั้งเวลาทำอาหารให้นานขึ้นหรือใช้กำลังไฟให้สูงขึ้น อาหารจานใหญ่ปริมาณมาก จะใช้เวลานานขึ้น
หลังจากครบเวลาการ อาหารไหม้ที่ขอบ แต่ตรงกลางยังไม่พร้อมรับประทาน	ในครั้งต่อไป ให้ใช้กำลังไฟต่ำลงและตั้งเวลาให้นานขึ้น คนอาหารที่เป็นน้ำ เช่น ซุป เมื่อถึงครึ่งทางของระยะเวลาทำอาหาร

สำหรับข้าว ควรใช้จานแบนกว้างเพื่อให้ผลลัพธ์ออกมาดีขึ้น

### การละลายน้ำแข็ง

ควรละลายอาหารประเภทเนื้อโดยให้ด้านไขมันอยู่ด้านล่าง ห้ามละลายโดยมีฝาครอบปิดไว้ เพราะจะทำให้เนื้อสุก แทนที่จะเป็นการละลายเท่านั้น หากต้องการนำสัตว์ปีกทั้งตัวมาละลายน้ำแข็ง ให้คว่ำส่วนอกลงเสมอ

### การทำอาหาร

ควรนำเนื้อและเนื้อสัตว์ปีกออกมาจากตู้เย็นก่อนทำอาหารอย่างน้อย 30 นาที ควรพักเนื้อสัตว์ เนื้อสัตว์ปีก เนื้อปลา และผัก โดยปิดฝาครอบไว้หลังจากทำอาหารเสร็จ

ใช้ปรอททาน้ำมันหรือเนยที่ละลายแล้วบนเนื้อปลาเล็กน้อย เติมน้ำเย็น 30-45 มล. สำหรับผักทุกๆ 250 กรัม หั่นผักเป็นชิ้นๆ ขนาดเท่าๆ กัน ก่อนนำไปประกอบอาหาร ขณะทำอาหารที่เป็นผัก ให้ปิดฝาครอบทาบะด้วยทุกครั้ง

### การอุ่นอาหาร

เมื่อคุณอุ่นอาหารพร้อมทานที่ใสบรรจุภัณฑ์ไว้ ควรปฏิบัติตามคำแนะนำที่ระบุไว้บนบรรจุภัณฑ์

### การย่าง

สำหรับอาหารที่เป็นชิ้นแบนๆ ให้วางไว้กลางตะแกรงย่าง พลิกด้านอาหารหลังจากเวลาทำอาหารที่ตั้งไว้ผ่านไปครึ่งทาง แล้วย่างต่อ

## การดูแลรักษาและการทำความสะอาด



### คำเตือน!

โปรดดูรายละเอียดจากหัวข้อความปลอดภัย

### ข้อควรทราบเกี่ยวกับการทำความสะอาด:

- ทำความสะอาดสเตนเลสลดการสะสมของรอยนิ้วมือบริเวณแผงด้านหน้าของ ตัวเครื่องด้วยผ้านุ่มชุบน้ำอุ่นผสมน้ำยาทำความสะอาดแบบอ่อน ห้ามใช้น้ำยาคำทำความสะอาดสเตนเลส สารกัดกร่อน หรือตัวทำละลายที่มีฤทธิ์รุนแรง

- ทำความสะอาดภายในตัวเครื่องทุกครั้งหลังการใช้งาน เพื่อให้สามารถเช็ดคราบสกปรกได้ง่ายยิ่งขึ้น และไม่ถูกเผาไหม้
- ทำความสะอาดคราบที่กำจัดออกยากโดยใช้น้ำยาคำทำความสะอาดชนิดพิเศษ
- ทำความสะอาดอุปกรณ์ทั้งหมดอย่างสม่ำเสมอ โดยใช้ผ้านุ่มและน้ำอุ่นผสมน้ำยาคำทำความสะอาด หลังล้างควรผึ่งให้แห้ง
- หากต้องการทำให้คราบติดแน่นนุ่มลง ให้นำน้ำเปล่า 1 แก้ว ใสในเตาไมโครเวฟ และตั้งค่ากำลังไฟสูงสุด 2 ถึง 3 นาที
- หากต้องการกำจัดกลิ่น ให้นำน้ำ 1 แก้ว ผสมน้ำมะนาว 2 ช้อนชา ใสในเตาไมโครเวฟ และตั้งค่ากำลังไฟเต็มที่ เป็นเวลา 5 นาที

## การแก้ไขปัญหา



### คำเตือน!

โปรดดูรายละเอียดจากหัวข้อความปลอดภัย

ปัญหา	สาเหตุที่อาจเป็นไปได้	วิธีการแก้ไข
เครื่องไม่ทำงาน	เครื่องปิดการทำงานอยู่	เปิดเครื่องอีกครั้ง
	ยังไม่ได้เสียบปลั๊กไฟ	เสียบปลั๊ก
	ฟิวส์ในกล่องฟิวส์เกิดขาด	ตรวจสอบฟิวส์ หากฟิวส์ขาดมากกว่าหนึ่งครั้ง โปรดติดต่อช่างไฟฟ้าที่มีความชำนาญ
	ปิดประตูไม่สนิท	ตรวจสอบให้แน่ใจว่าไม่มีวัตถุในประตูไว้
หลอดไฟไม่ทำงาน	หลอดไฟชำรุด	ต้องเปลี่ยนหลอดไฟ โปรดติดต่อศูนย์บริการลูกค้า
เกิดประกายไฟภายในเตา	มีจานโลหะหรือจานที่มีขอบโลหะ	นำจานออกจากเตาไมโครเวฟ
	มีไม้เสียบโลหะหรือฟอยล์อลูมิเนียมที่แตะกับผนังด้านในของเตาไมโครเวฟ	ไม้เสียบและฟอยล์ต้องไม่แตะกับผนังด้านในของเตาไมโครเวฟ
ชุดจานหมูนมีเสียงขูดหรือเสียดสี หรือ หมุนไม่สะดวก	มีวัตถุหรือคราบสกปรกอยู่ข้างใต้จานหมุนแก้ว	ทำความสะอาดพื้นที่ด้านล่างจานหมุนแก้ว รวมทั้งล่องแหวน ตรวจสอบว่าวางชุดลื้อและจานหมุนแก้วได้อย่างถูกต้อง
เครื่องหยุดทำงานโดยไม่ทราบสาเหตุที่แน่ชัด	การทำงานบางอย่างผิดปกติ	ตรวจสอบว่าไม่ได้ปิดกั้นช่องระบายอากาศของตัวเครื่อง หากยังเกิดปัญหานี้อยู่ถึง ๑ ที่ติดต่อช่างได้อย่างถูกต้อง โปรดติดต่อศูนย์บริการลูกค้า
เตาไมโครเวฟทำงานตามเวลาที่ตั้งไว้แต่อาหารไม่ร้อน	อุปกรณ์ควบคุมอุณหภูมิภายในเครื่องที่มีฟังก์ชันรีเซ็ตอยู่ในตัวทำงาน เตาไมโครเวฟติดตั้งอุปกรณ์ควบคุมอุณหภูมิเพื่อป้องกันไม่ให้ส่วนประกอบภายในร้อนเกินไป	เมื่ออุณหภูมิของอุปกรณ์ควบคุมอุณหภูมิลดลง เตาจะกลับมาทำงานได้ตามปกติ รอ 5 นาที แล้วลองใช้เตาอีกครั้ง
ไอน้ำสะสมที่ประตูเตาไมโครเวฟหรือรั่วออกจากช่องระบายอากาศ	การทำอาหารที่มีความชื้นสูงจะทำให้เกิดไอน้ำ	เป็นเรื่องปกติของกระบวนการทำอาหาร
เกิดควันในระหว่างการทำอาหาร	ไขมันสะสมบนตะแกรงย่าง	ทำความสะอาดภายในเครื่องเสมอ

หากคุณไม่สามารถแก้ไขปัญหาได้ด้วยตัวเอง โปรดติดต่อตัวแทนจำหน่ายหรือศูนย์บริการลูกค้า

ข้อมูลที่จะเป็นเมื่อติดต่อศูนย์บริการลูกค้าอยู่บนป้ายระบุบนเครื่อง

เราขอแนะนำให้คุณจดบันทึกข้อมูลไว้ดังนี้:

- รุ่น (M) .....
- หมายเลขผลิตภัณฑ์ (PNC) .....
- หมายเลขเครื่อง (S.N.) .....

## การติดตั้ง



### ข้อควรระวัง!

อย่าบังช่องระบายอากาศ เพราะอาจทำให้เครื่องร้อนเกินไป




### ข้อควรระวัง!

ห้ามเชื่อมต่อเครื่องเข้ากับแอมป์หรือปลั๊กพ่วง ไม่เช่นนั้นอาจทำให้เกิดไฟไหม้และเกิดความเสียหายของเพลิงไหม้

- วางเครื่องให้ห่างจากโอ่งน้ำ สมรอน และน้ำที่อาจกระเด็นได้
- หากจัดเก็บ/ขนย้ายเครื่องไปในที่อุณหภูมิต่ำกว่าศูนย์ ห้ามเปิดใช้งานทันทีหลังติดตั้งเสร็จ ควรปล่อยให้เครื่องอยู่ที่อุณหภูมิห้องอย่างน้อย 2 ชั่วโมงก่อนใช้เครื่อง

## การติดตั้ง

- นำวัสดุบรรจุภัณฑ์และสื่อส่งเสริมการขายทั้งหมดออกจากเตาไมโครเวฟ
- ตรวจสอบเครื่องเพื่อหาร่องรอยความเสียหาย เช่น รอยบุบหรือประตูที่ชำรุด ห้ามติดตั้งหากพบว่าเตาชำรุดเสียหาย ติดต่อบริการศูนย์บริการ
- แคะฟิล์มป้องกันที่อยู่ด้านบนช่องใส่อาหารของเตาออก อย่าถอดแผ่นปิดก้นน้ำคูลิ่งสีน้ำตาลอ่อนที่ติดอยู่ทางด้านขวามือของช่องเตาออกเพื่อป้องกันแมงกิ้งตรอน
- อย่าวางวัสดุบรรจุภัณฑ์ที่ถึงไวจนเด็กเล็กนำไปเล่น เพราะอาจเป็นอันตรายได้
- เลือกพื้นผิวที่เรียบและได้ระดับ มีพื้นที่กว้างขวางเพียงพอสำหรับช่องระบายอากาศเข้าและออก และแข็งแรงพอที่จะรับน้ำหนักของเตาได้ ต้องมีระยะห่างอย่างน้อย 7.5 ซม. ระหว่างเตากับผนังที่อยู่ติดกัน เว้นระยะห่างเหนือเตาไมโครเวฟอย่างน้อย 30 ซม.

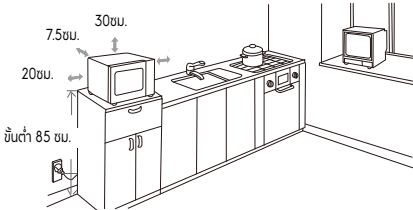

การปิดกั้นช่องระบายอากาศเข้าหรือออก อาจทำให้เตาเสียหายได้ หากช่องระบายอากาศถูกปิดกั้นระหว่างการทำงาน เตาอาจร้อนเกินไปจนทำงานผิดปกติได้ สมรอนจะพ่นออกจากช่องระบายอากาศ ดังนั้นอย่าปิดกั้นหรือปล่อยให้มันกั้นระหว่างเตากับผนังด้านหลัง

*หมายเหตุ: แนะนำให้เว้นระยะห่างมากกว่า 7.5 ซม. ด้านใดด้านหนึ่งของเตาเป็นอย่างน้อย เพื่อเพิ่มประสิทธิภาพการทำงานของเตา*

- ควรวางเตาไว้บนพื้นที่ยึดเพื่อป้องกันไม่ให้เตาสั่นหรือเคลื่อนที่
- ห้ามถอดขาตั้งออกจากด้านล่างของเตาไมโครเวฟ
- ควรตั้งเตาไว้บนโต๊ะหรือเคาน์เตอร์ ไม่ควรวางไว้บนเฟอร์นิเจอร์บิวท์อินหรือในตู้
- ต้องวางเตาให้ห่างจากความร้อนและน้ำ การสัมผัสความร้อนและน้ำอาจทำให้ประสิทธิภาพลดลงและทำงานผิดปกติได้
- วางเตาให้ห่างจากวิทยุและทีวีให้มากที่สุด การทำงานของเตาอาจรบกวนการทำงานของสัญญาณของวิทยุหรือทีวี
- หลีกเลี่ยงปัญหาเกิดคลื่นรบกวนการทำงานได้ด้วยการปฏิบัติตามมาตรการดังต่อไปนี้:
  - ทำความสะอาดประตูและซีลขอบประตูเตาไมโครเวฟ
  - ปรับตำแหน่งเสาอากาศรับสัญญาณของวิทยุและ/หรือทีวี
  - ย้ายเตาไมโครเวฟให้ห่างจากเครื่องรับสัญญาณ
  - เสียบปลั๊กเตาไมโครเวฟเข้ากับเต้ารับอื่น เพื่อให้เตาไมโครเวฟกับเครื่องรับสัญญาณอยู่ในเต้ารับต่างกัน
- แรงดันไฟฟ้าและความถี่ที่คุณใช้เชื่อมต่อเตาไมโครเวฟนั้นตรงกับที่ระบุไว้บนป้ายระบุที่อยู่บนเตาไมโครเวฟ หากเตาไมโครเวฟเชื่อมต่อปลั๊กไฟกับเต้าเสียบประเภทปลั๊กพ่วง โปรดตรวจสอบให้แน่ใจว่าได้ทำการต่อสายดินเป็นที่เรียบร้อยแล้ว



### คำเตือน!

หากติดตั้งใกล้หรือเหนือแหล่งกำเนิดความร้อน เตาไมโครเวฟอาจเสียหายได้



### คำเตือน!

ห้ามใช้เตาไมโครเวฟกับวงจรไฟฟ้าที่ไม่ได้ต่อสายดิน โปรดติดตั้งช่างไฟฟ้า หากคุณไม่แน่ใจเกี่ยวกับการเชื่อมต่อวงจรไฟฟ้าของเตาหรือการติดตั้งสายดินของวงจรไฟฟ้า



### คำเตือน!

หากสายไฟเสียหาย จะต้องให้บริษัท ตัวแทนซ่อมบำรุงของบริษัท หรือบุคคลอื่นที่มีคุณสมบัติเหมาะสมเป็นผู้เปลี่ยน เพื่อหลีกเลี่ยงอันตราย

## การติดตั้งระบบไฟฟ้า



**คำเตือน!**

การติดตั้งระบบไฟฟ้าต้องดำเนินการโดยช่างผู้ชำนาญเท่านั้น



บริษัทจะไม่รับผิดชอบต่อลูกค้าที่ไม่ปฏิบัติตามข้อควรระวังด้านความปลอดภัย จากหัวข้อ "คำแนะนำด้านความปลอดภัย"

อุปกรณ์นี้มาพร้อมกับสายไฟและปลั๊ก



**คำเตือน!**

เตาไมโครเวฟมาพร้อมกับปลั๊กไฟที่ต้องต่อเข้ากับเต้ารับที่ต่อสายดินอย่างเหมาะสมเท่านั้น ระเบียบข้อบังคับกำหนดให้ช่างไฟฟ้าที่มีความชำนาญเป็นผู้ติดตั้งเต้ารับและเปลี่ยนสายไฟเท่านั้น หากไม่สามารถเข้าถึงปลั๊กไฟได้หลังจากติดตั้ง ต้องมีวิศวกรตรวจสอบทุกข้อในด้านที่ติดตั้ง พร้อมระยะห่างหน้าสัมผัสอย่างน้อย 3 มม.

## ศูนย์บริการลูกค้า

<p><b>ประเทศไทย</b> ศูนย์บริการลูกค้า โทร: (+66 2) 725 9000 Electrolux Thailand Co., Ltd. อาคาร ซีล็คโทรล็กซ์ เลขที่ 1910 ชั้น 14 ถนนพญาบุรุษตัดใหม่ แขวงบางกะปิ เขตห้วยขวาง กรุงเทพฯ 10310 www.electrolux.co.th LINE ID: @electroluxTH-care อีเมล: customercarethai@electrolux.com</p>	<p><b>มาเลเซีย</b> Consumer Care Center Tel: 1300-88-11-22 Electrolux Home Appliances Sdn. Bhd. Corporate Office Address: Unit T2-7, 7th Floor, Tower 2, PJ33, No. 3, Jalan Semangat, Seksyen 13, 46200 Petaling Jaya, Selangor. Office Tel : (+60 3) 7843 599 9 Office Fax : (+60 3) 7955 5511 Consumer Care Center Address: Lot C6, No. 28, Jalan 15/22, Ta man Perindustrian Tiong Nam, 40200 Shah Alam, Selangor Consumer Care Center Fax: (+60 3) 5524 2521 อีเมล: malaysia.customercare@electrolux.com</p>
<p><b>อินโดนีเซีย</b> บริการออนไลน์: 08041119999 PT. Electrolux Indonesia Electrolux Building Jl. Abdul Muis No.34, Petojo Selatan, Gambir Jakarta Pusat 10160 Email: customercare@electrolux.co.id SMS &amp; WA : 0812.8088.8863</p>	<p><b>ฟิลิปปินส์</b> Consumer Care Center เบอร์โทรฟรี: 1-800-10-845-CARE(2273) Consumer Care Hotline : (+63 2) 845-CARE(2273) Electrolux Philippines, Inc. Unit B 12F Cyber Sigma Bldg, Lawton Avenue, McKinley West, Taguig, Philippines 1634 Trunkline: +63 2 737- 4757 เว็บไซต์: www.electrolux.com.ph อีเมล: wecare@electrolux.com</p>
<p><b>เวียดนาม</b> Consumer Care Center เบอร์ โทรฟรี: 1800-58-88-39 โทรศัพท์ : (+84 28) 3910 5465 Electrolux Vietnam Ltd. Floor 10th, Sofic Tower 10 Mai Chi Tho Street - Thu Thiem Ward - District 2 Thu Duc City, Ho Chi Minh City, Vietnam Office Tel: (+84 28) 3910 5465 Office Fax: (+84 28) 3910 5470 อีเมล: vncare@electrolux.com</p>	<p><b>สิงคโปร์</b> Consumer Care Center Tel: (+65) 6727 3699 Electrolux S.E.A. Pte Ltd. 351 Braddell Road #01-04, 351 On Braddell Singapore 579713. หมายเลขโทรสารสำนักงาน: (+65) 6727 3611 อีเมล: customer-care.sin@electrolux.com</p>
<p><b>เกาหลี</b> Contact Center: 1566-1238 Electrolux Korea Ltd. 9th Floor, Pine Avenue B, 100 Eulji-ro, Jung-gu, Seoul 04551, Korea Electrolux Korea Home page: www.electrolux.co.kr Customer Care Home page: www.electroluxconsumer.co.kr อีเมล: homecare.kr@electrolux.com</p>	<p><b>ไต้หวัน</b> Consumer Care Center เบอร์ โทรฟรี: 0800-888-259 Electrolux S.E.A Private Limited Taiwan Branch 4F., No.3, Sec. 1, Dunhua S. Rd. Songshan Dist., Taipei City 105408 Taiwan (R.O.C.) อีเมล: service.tw@electrolux.com</p>





