


EMM25D22BM
EMG25D22BM
EMG25D22NB



EN Freestanding Microwave Oven

Installation & User manual

2

TH เตาไมโครเวฟ ชนิดตั้งโต๊ะ

การติดตั้งและคู่มือการใช้งาน

16



Electrolux

WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with its decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. Whenever you use it, you can be safe in the knowledge that you'll get great results every time.

Welcome to Electrolux.

BEFORE USING YOUR APPLIANCE

Check for any damage or marks. If you find the appliance is damaged or marked, you must report it within 7 days to claim for damages under the manufacturers' warranty. This does not affect your statutory rights.

Before you use the appliance, we recommend that you read through the whole user manual which provides the description of the product and its functions. It is important that the product is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards.

For future reference, please store this booklet in a safe place.

CONDITIONS OF USE

This appliance is for used in household and similar applications such as:

- Staff kitchen areas in shops, offices, and other working environments.
- Farmhouses.
- Use by clients in hotels, motels, and other residential type environments.
- Bed and breakfast type environments.

BEFORE YOU CALL

Please ensure you read the instruction manual fully before you call for service, or a full-service fee could be applicable.

RECORD MODEL AND SERIAL NUMBER HERE:

Model: _____

Serial No: _____

IMPORTANT INFORMATION THAT MAY IMPACT YOUR MANUFACTURER'S WARRANTY

Adherence to the directions for use in this manual is extremely important for health and safety. Failure to strictly adhere to the requirements in this manual may result in personal injury, property damage and affect your ability to make a claim under the Electrolux manufacturer's warranty provided with your product. Products must be used, installed and operated in accordance with this manual. You may not be able to claim on the Electrolux manufacturer's warranty if your product fault is due to failure to adhere this manual.

CONTENTS

General warnings	3
Safety instructions	4
Product description	5
Control panel	5
Accessories	7
Using the accessories	7
Daily use	8
Automatic programmes	10
Additional functions	11
Helpful hints and tips	12
Care and cleaning	12
Troubleshooting	13
Installation	14
Electrical Installation	15
Customer care center	15

SYMBOLS



WARNING!

This symbol indicates information concerning your personal safety.



CAUTION!

This symbol indicates information on how to avoid damaging the appliance.



IMPORTANT!

This symbol indicates tips and information about use of the appliance.



ENVIRONMENT!

This symbol indicates tips and information about economical and ecological use of the appliance.

INFORMATION ON DISPOSAL FOR USERS



ENVIRONMENT!

- Most of the packaging materials are recyclable. Please dispose these materials through your local recycling depot or by placing them in appropriate collection containers.
- If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

GENERAL WARNINGS

Important safety instructions, please read carefully and keep for future reference. Pass the user manual to new owners of the appliance.

NOTE! You must read these warnings carefully before installing or using the appliance. If you need assistance, contact our Customer Care Department. The manufacturer will not accept liability, should these instructions or any other safety instructions stated in this book are not followed.

Safety of children and vulnerable people



WARNING!

Risk of suffocation, injury, or permanent disability

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging away from children.
- If the appliance has a child safety device, we recommend that you activate it if children are present.
- **WARNING:** Accessible parts may become hot during use. Young children should be kept away from it.



CAUTION!

Important safety instructions, read carefully and keep for future reference.

General safety

- The interior of the appliance becomes hot when in operation. Do not touch the heating elements that are inside the appliance. Always use oven gloves to remove or put in accessories or ovenware.
- Do not use a steam cleaner to clean the appliance.
- Before maintenance, disconnect the power supply.
- If the door or door seals are damaged, the appliance must not be operated until it has been repaired by a competent person.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Only a competent person can carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
- Do not heat liquids and other foods in sealed containers. They are liable to explode.
- Only use utensils that are suitable for use in microwave ovens.

- When heating food in plastic or paper containers, keep an eye on the appliance due to the possibility of ignition.
- The appliance is intended for heating food and beverages. Do not dry food, clothing, slippers, sponges, damp cloth or heat up warming pads, and similar may lead to risk of injury, ignition, or fire and cause injury.
- If smoke is emitted, switch off, unplug the appliance and keep the door closed to stifle out any flames.
- Heating up beverages in microwave can result in delayed eruptive boiling. Care must be taken when handling the container.
- The contents of feeding bottles and baby food jars should be stirred or shaken and checked the temperature before consumption to avoid burns.
- Eggs in their shell and whole hard-boiled eggs should not be heated in the appliance as they may explode, even after microwave heating has ended.
- The appliance should be cleaned regularly and any food residual.
- Failure to maintain the appliance in a clean condition could lead to deterioration of the surface that could adversely affect the life span of the appliance and possibly result in a hazardous situation.
- The temperature of accessible surfaces may be high when the appliance is operating.
- This appliance is designed for freestanding application. It must not be installed behind a decorative door or installed in an enclosed cupboard. Please follow the installation requirements in this manual.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the glass door as they can scratch the surface, which may result in shattering of the glass.
- If the supply cord is damaged, it must be replaced by the manufacturer or an authorised service agent or similarly qualified persons to avoid a hazard.



CAUTION!

To avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.



WARNING!

Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.



NOTE:

If there are manufacturing or oil remains on the cavity or heating element, smoke or odour might occur during the first few operations. This is normal and will cease after repeated use.

We strongly recommend users to follow the below process:

- Turn on the grill mode and let the appliance operate several times without cooking food.
- Ensure sufficient ventilation around the appliance.

SAFETY INSTRUCTIONS

Installation



WARNING!

Only qualified person can install this appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Follow the installation instructions come with the appliance.
- Always be careful when you move the appliance because it is heavy. Always wear safety gloves.
- Keep minimum distance from the other appliances and units.

Electrical connection



WARNING!

Risk of fire and electrical shock.

- This appliance is supplied with a power cord and 16A power plug suitable for connection to standard 16A power socket. If a power socket needs to be installed, it must be done by a qualified electrician.
- The appliance must be earthed.
- Make sure that the electrical information on the rating plate matches with the power supply. If it is not, contact an electrician.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- Make sure not to cause damage to the mains plug and to the mains cable. Contact the Service Centre or an electrician to change a damaged mains cable.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.

Use



WARNING!

Risk of injury burns, or electric shock, or explosion.

- Use this appliance in the environment described in pg2.
- Do not change the specification of this appliance.
- Make sure that the ventilation openings are not blocked.
- Do not leave the appliance unattended during operation.
- Do not apply pressure on the open door.
- Do not use the appliance as a work surface and do not use the cavity for storage purposes.
- Do not operate appliance without food.
- Metallic containers for food and beverages are not allowed during microwave cooking.

Care and cleaning



WARNING!

Risk of injury, fire, or damage to the appliance.

- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.
- Regularly clean the appliance to prevent the deterioration of the surface material.
- Do not allow food spills or cleaner residue to accumulate on door sealing surfaces.
- Remaining fat or food in the appliance can cause smoke/fire, particularly on the grill element.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents, or metal objects.
- Do not use a steam cleaner to clean this appliance.

Disposal




WARNING!


Risk of injury or suffocation.

- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.

PRODUCT DESCRIPTION

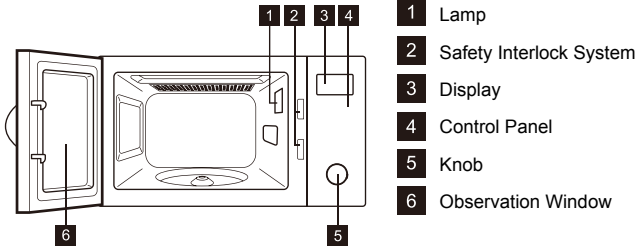

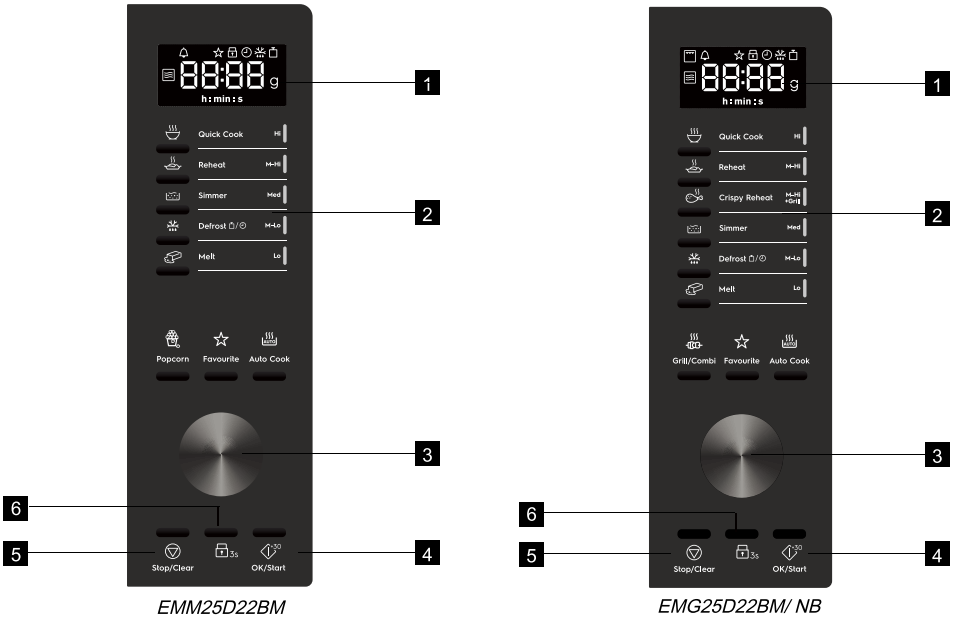









CONTROL PANEL



Symbol	Function	Description
1	---	Display Show the settings and current time.
2	---	Function buttons To select the different cooking functions.
3	---	Setting knob To adjust cooking time/ weight. To choose selection of auto menus.
4	+30 OK/ Start +30 sec button	To start the appliance or to increase the cooking time per 30 seconds at full power.
5		Stop/ Clear button To stop the operation or delete the cooking settings.
6	3s Child Lock	Hold & press to activate Child Lock function.

PRODUCT DESCRIPTION (CONTINUE)

Other symbols on the control panel

	Symbol	Function	Description
1		Quick Cook	Fast or normal cooking.
2		Reheat	Normal cooking. Reheat.
3		Crispy Reheat	Reheat fried foods. ** Applicable to EMG25D22BM/ NB ONLY.
4		Simmer	Slow cooking, simmer, or stew.
5		Defrost	To defrost food by weight/ time.
6		Melt	Keep warm. Or for melting/softening.
7		Popcorn	Cook Popcorn. ** Applicable to EMM25D22BM ONLY.
8		Grill/ Combi	Grill or Combi cooking function. ** Applicable to EMG25D22BM/ NB ONLY.
9		Favourite	Store up to 3 frequently used settings.
10		Auto Cook	Auto menus.

QUICK COOK

1. Press "Quick Cook" once, "Hi" will display.
2. Turn the knob to set the cooking time, it should be within 0:00-95:00.
3. Press "OK/Start" to start cooking.

REHEAT

1. Press "Reheat" once, "M-Hi" will display.
2. Turn the knob to set the cooking time, it should be within 0:00-95:00.
3. Press "OK/Start" to start counting down.

SIMMER

1. Press "Simmer" once, "Med" will display.
2. Turn the knob to set the cooking time, it should be within 0:00-95:00.
3. Press "OK/Start" to start counting down.

MELT

1. Press "Melt" once, "Lo" will display.
2. Turn the knob to set the cooking time, it should be within 0:00-95:00.
3. Press "OK/Start" to start cooking.

WEIGHT DEFROST

1. Press "Defrost" once, "M-Lo" will display.
 2. Turn the knob to set the weight, it should be within 100-2000g.
 3. Press "OK/Start" to start counting down.
- Note: The buzzer will sound to remind you of turning over the food during defrosting.

TIME DEFROST

1. Press "Defrost" twice, "M-Lo" will display.
2. Turn the knob to set the cooking time, it should be within 0:00-95:00.
3. Press "OK/Start" to start cooking.

PRODUCT DESCRIPTION (CONTINUE)

Other symbols on the control panel

POPCORN

1. Press "POPCORN" once, "100g" will display.
2. Press "OK/Start" to start cooking.

GRILL OR COMBINATION


1. Press "Grill/Combi" once or twice, grill and combination mode are available. "Grill/ Combi" icon will lit up.
2. Turn the knob to set the cooking time, it should be within 0:00-95:00.
3. Press "OK/Start" to start cooking.

CRISPY REHEAT

1. Press "Crispy Reheat" once, "M-Hi+Grill" will lit up.
2. Turn the knob to set the cooking time, it should be within 0:00-95:00.
3. Press "OK/Start" to start cooking.

ACCESSORIES

Turntable set

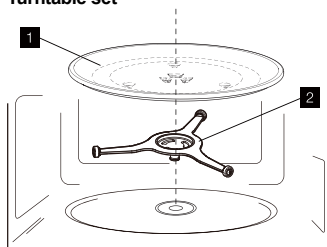

1 Glass Tray


2 Turntable Ring Assembly



Clean the cooking cavity and put the turntable in place.

Grill rack

For grilling food and combi cooking.

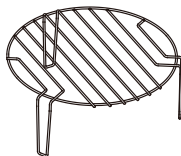

The wire grill rack is not suitable for use in microwave mode. It can be used in grill, convection and combi (includes short burst of microwave, which is ok) cooking modes only. Using this wire grill rack in microwave mode may cause damage to the appliance.

**** Applicable to EMG25D22BM/ NB ONLY.**

USING THE ACCESSORIES




Refer to the safety chapters.



Do not cook food without the turntable set. Use only the turntable set provided with the appliance.



Putting the grill rack

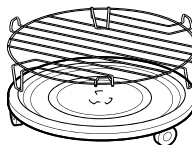

Place the grill rack on the turntable set.

1. For new installations, make sure all packaging and shipping tape has been removed.
2. Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly.
3. You must clean the cooking cavity and accessories

DAILY USE

Suitable cookware and materials

Cookware / Material	Microwave			Grilling/ Convection
	Defrosting	Heating	Cooking	
Ovenproof glass and porcelain (with no metal components, e.g., Pyrex, heat-proof glass)	■	■	■	■
Non-ovenproof glass and porcelain ¹⁾	■	--	--	--
Glass and glass ceramic made of ovenproof / frost-proof material (e.g. Arcoflam), grill shelf	■	■	■	■
Ceramic ²⁾ , earthenware ²⁾	■	■	■	--
Heat-resistant plastic up to 200°C ³⁾	■	■	■	--
Cardboard, paper	■	--	--	--
Clingfilm	■	--	--	--
Roasting film with microwave safe closure ³⁾	■	■	■	--
Roasting dishes made of metal, e.g., enamel, cast iron	--	--	--	■
Baking tins, black lacquer or silicon coated ³⁾	--	--	--	■
Baking tray	--	--	--	■
Browning cookware, e.g., Crisp pan or Crunch plate	--	■	■	--
Ready meals in packaging ³⁾	■	■	■	■

1) With no silver, gold, platinum, or metal plating / decorations.

2) Without quartz or metal components, or glazes which contain metals.

3) You must follow the manufacturer's instructions about the maximum temperatures.

■ suitable

-- not suitable

DAILY USE (CONTINUED)

Power setting tables

Press	Power Level	Power (W)	Suitable Foods
	High	900W	Heat beverage. Cook rice, vegetable & noodles.
	Medium High	720W	Cook poultry and meat. Reheat.
	Medium	450W	Simmer soup. Stew fish and seafood.
	Medium Low	270W	Thaw foods.
	Low	90W	Melt butter/ chocolate. Keep cooked food warm.

Defrosting

You can choose between two defrosting modes:

- Weight Defrost
- Time Defrost

1. Press the Defrost button **1 time** for Weight Defrosting or **2 times** for Time Defrosting .
2. Turn the Setting knob to set the Weight/ Time. For Weight Defrosting the time is set automatically.
3. Press ⁺³⁰ to confirm and start.



Do not use weight defrosting on food that is left out of the freezer for more than 20 minutes, or for frozen ready-made food.

FOR EMG25D22BM and EMG25D22NB ONLY



Press	Power Setting	Power (W)	Display	Suitable Foods
x 1	Grill	100% Grill		Roast meat, sausage, lamb, seafood, steak or other thin pieces
x 2	Combi 1	45% Grill 55% Microwave		Roast whole chicken or duck.
	Crispy Reheat	66% Grill 34% Microwave		Chicken nuggets, chicken breast meat, chicken wings or etc.

Grill or Combi Cooking

1. Press Grill/ Combi button multiple times to select desire cooking mode.
2. Turn the Setting knob to set the time.
3. Press OK/Start ⁺³⁰ button to start cooking. You can adjust the time during cooking.
4. To pause the cooking, press Stop/Clear button.
5. Press OK/Start ⁺³⁰ button to resume. Or press Stop/Clear button again, to stop cooking and reset the settings.

DAILY USE (CONTINUED)

Crispy Reheat (FOR EMG25D22BM/NB ONLY)

1. Press Crispy Reheat  button.
2. Turn the Setting knob to set the time.
3. Press OK/Start  to confirm and start cooking.

AUTOMATIC PROGRAMMES






WARNING!

Refer to the safety chapters.

Auto Cook

You can use Auto Cook function to






1. Press Auto Cook  Auto Cook button.
2. Turn the Setting knob to choose the auto menu from the list.
3. Press OK/Start  to confirm the selection.
4. Turn the Setting knob to choose weight option.
5. Press OK/Start  to start cooking.

Display	Menu	Serving / Weight	Power
R-01	Pizza	100g 200g 300g 400g	100% Power
R-02	Pasta/ Spaghetti	100g (with 800g cold water) 150g (with 1200g cold water) 200g (with 1600g cold water)	80% Power
R-03	Beverage	Milk	100% Power
		Coffee	
R-04	Congee/Porridge	50g 100g 150g	100%/ 50% Power
R-05	Potato	1 (230g) 2 (460g) 3 (690g)	100% Power
R-06	Vegetable	200g 300g 400g	100% Power
R-07	Chicken	250g 350g 450g 550g	80% Power
R-08	Fish	250g 350g 450g 550g	80% Power
R-09 <i>** Applicable to EMG25D22BM/NB ONLY.</i>	Roast Beef/ Lamb	250g 350g 450g 550g	Combi 2
R-10 <i>** Applicable to EMG25D22BM/NB ONLY.</i>	BBQ Meat Pieces	Beef	Combi 2
		Lamb	Combi 2



ADDITIONAL FUNCTIONS

CHILD LOCK FUNCTION

The Child Safety Lock prevents an accidental operation of the appliance.

1. Press Child Lock   button and hold 3 seconds.
2. Child Lock icon  shown on the display.
3. All LEDs is off.
4. To unlock, press Child Lock   button and hold 3 seconds again.

MULTI-STAGE COOKING FUNCTION

1. Press Defrost  once
2. Turn the Setting knob to set the weight
3. Press Function buttons. For example: Quick Cook
4. Turn the Setting knob to set the cooking time
5. Press OK/Start  to start cooking.



NOTES

- Two cooking stages can be set in multi-stage cooking.
- If you set defrost function, it will work automatically in the first stage.
- Auto menu cannot be set as one of the multi-stages.
- Each one press on OK/Start could increase the cook time by 30 seconds during cooking except for weight defrost.



FAVOURITE FUNCTION

Frequently used cooking settings can be saved and access quickly with the Favourite function. Once a customised programme has been set, simply activate it via the star-shaped icon. You don't have to remember the exact settings each time. It's convenience, at a touch

To Save FAVOURITE

1. Press Function buttons, for example: Quick Cook
2. Turn the Setting knob to set the cooking time. For example: 3:00 minutes
3. Press & hold Favourite  button for 3 seconds, until "0 1" flash on display.
4. Turn the Setting knob to choose which slot to save from 01, 02 and 03.
5. Press OK/ Start  to confirm and save.

To Use FAVOURITE

1. Press Favorite  button once, "0 1" will flash.
2. Turn the Setting knob to choose the saved cooking settings from 01, 02 and 03.
3. Press OK/Start  to start cooking.

NOTES

- Reheat, auto menu can not be set to memory cooking.
- Only one or two cooking procedures can be set, the setting method is the same as cooking settings.
- There is no memory after power failure. It cannot be set when the oven door is open.
- If the memory cooking program has been set, press "OK/Start", the oven will start immediately; otherwise, the cooking program needs to be reset.

HELPFUL HINTS AND TIPS

Problem	Remedy
You cannot find details for food prepared.	Look for a similar food. Increase or shorten the length of the cooking times according to the following rule: Double the amount = almost double the time, Half the amount = half the time
The food got too dry.	Set shorter cooking time or select lower microwave power.
The food is not defrosted, hot or cooked after the cooking time ended.	Set longer cooking time or set higher power. Note that large dishes need longer time.
After the cooking time comes to an end, the food is overheated at the edge but is still not ready in the middle.	Next time set a lower power and a longer time. Stir liquids halfway through, e.g., soup.

To get better results for rice use a flat, wide dish.

Defrosting

Always defrost roast with the fat side down. Do not defrost covered meat because this may cause cooking instead of defrosting. Always defrost whole poultry breast side down.

Cooking

Always remove chilled meat and poultry from the refrigerator at least 30 minutes before cooking. Let the meat, poultry, fish, and vegetables stay covered after cooking.

Brush a little oil or melted butter over the fish. Add 30-45ml of cold water for every 250g of vegetables. Cut the fresh vegetables into even size pieces before cooking. Cook all vegetables with a cover on the container.

Reheating

When you reheat packed ready meals always follow the instructions written on the packaging.

Grilling

Grill flat food items in the middle of the grill rack. Turn the food over halfway through the set time and continue grilling.

Combi Cooking

Use Combi Cooking to keep the crispness of certain foods. Halfway through the cooking time turn the foods over and continue cooking. Each Combi mode combines the microwave and grill functions at different time periods and power levels.

CARE AND CLEANING



WARNING!

Refer to the safety chapters.

Notes on cleaning:

- To clean the fingerprint-resistant stainless steel front panel, simply wipe with a soft cloth using warm water and a mild detergent. DO NOT use stainless steel cleaners, abrasive cleaners, or harsh solvents.
- Clean the interior of appliance after each use. You can remove dirt more easily and it does not burn on.
- Clean stubborn dirt with a special cleaner.
- Clean all accessories regularly and let them dry. Use a soft cloth with warm water and a cleaning agent.
- To soften hard to remove residual, boil a glass of water at full microwave power for 2 to 3 minutes.
- To remove odours, mix a glass of water with 2 tsp of lemon juice and boil at full microwave power for 5 minutes.

TROUBLESHOOTING



WARNING!

Refer to the safety chapters.

Problem	Possible cause	Remedy
The appliance does not operate.	The appliance is deactivated.	Activate the appliance.
	The appliance is not plugged in.	Plug in the appliance.
	The fuse in the fuse box is blown.	Check the fuse. If the fuse blows more than one time, contact a qualified electrician.
The lamp does not operate.	The door is not closed properly.	Make sure that nothing blocks the door.
	The lamp is defective.	The lamp must be replaced. Contact the customer service center.
There is sparking in the cavity.	Metal dish or dish with metal trim is used.	Remove the dish from the appliance.
	There are metal skewers or aluminum touches the interior walls.	Make sure that the skewers and foil does not touch the interior walls.
The turntable set makes scratching or grinding noise or does not rotate smoothly.	There is an object or dirt below the glass cooking tray.	Clean the area below the glass cooking tray including rollers. Check turntable roller assembly and glass are installed correctly.
Oven is in operation, but food is not heat up.	There is a malfunction.	Check ventilation of the unit is not obstructed. If this situation repeats with correct installation, call the customer service center.
Microwave runs cooking cycle but food does not heat up.	Internal self-resetting thermostat has activated. The microwave is fitted with a thermostat to protect internal components from overheating.	Once the thermostat's temperature has reduced the unit should function normally. Wait 5 minutes then try the appliance again.
Steam accumulating on microwave oven door or leaking from vents.	Cooking foods with a high moisture content will always produce steam.	This is a normal part of the cooking process.
Smoke detected during cooking process.	Fat accumulated on cavity grill element.	Ensure inside of unit is cleaned regularly.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

If you cannot find a solution to the problem yourself, contact your dealer or the customer service center.

The necessary data for the customer service center is on the rating plate on the appliance.

We recommend that you write the data here:

Model (M)

.....

Product number (PNC)

.....

Serial number (S.N.)

.....

INSTALLATION



CAUTION!

Do not block the air vents. If you do that, the appliance can overheat.




CAUTION!

Do not connect the appliance to adapters or extension leads. This can cause overloading and risk of fire.

- Put the appliance far away from steam, hot air and water splashes.
- If the appliance is stored/ transported at sub-zero temperatures, do not activate it immediately after installation. Allow at least two hours for it to be brought up to room temperature before turning on the unit.

Installation

- Remove all packing material and any promotional material from the microwave oven.
- Examine the oven for any damage such as dents or a broken door. Do not install if the oven is damaged. Call the service centre.
- Remove the protective film on the oven cabinet surface. Do not remove the light brown Mica cover that is attached to the right-hand side of the oven cavity to protect the magnetron.
- Do not leave the packing material so that small children can play with it. This can be hazardous.
- Select a flat, level surface that provides enough open space for the intake and outlet vents and that is strong enough to bear the weight of the oven. Leave a minimum clearance 30cm above the oven.

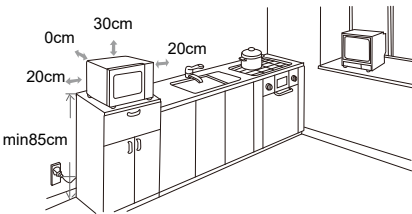

- 1) The minimum installation height is 85cm.
- 2) The rear surface of appliance shall be placed against a wall. Leave a minimum clearance of 30cm above the oven. A minimum clearance of 20cm is required between the oven and any adjacent walls.
- 3) Do not remove the legs from the bottom of the oven.
- 4) Blocking the intake and/or outlet openings can damage the oven.
- 5) Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.

Blocking the intake or outlet vents can damage the oven. If air vents are blocked during operation, the oven may overheat, and this may lead to malfunctioning. Hot air escapes from the vents, so be sure not to obstruct it or let curtains come between the oven and the rear wall.

- The oven should be placed in a stable position to avoid the possibility of causing vibration or noise.
- Do not remove the legs from the bottom of the oven.
- This oven should only be installed freestanding; not built-in or in a cabinet.
- Keep the oven away from heat and water. Exposure to heat and water can lower the efficiency and lead to malfunctioning.
- Place the oven as far away from radios and TV as possible. Operation of the oven may cause interference to your radio or TV reception.
- When there is interference, it may be reduced or eliminated by taking the following measures:
 - Clean door and sealing surface of the microwave oven.
 - Reorient the receiving antenna of the radio and/or television.
 - Move the microwave oven away from the receiver.
 - Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.
- Be sure the voltage and frequency where you connect the microwave oven is the same as specified on the rating plate on the microwave oven. If the microwave oven is connected to the socket via an extension cord, make sure the cord is earthed.



WARNING!

Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

The accessible surface may be hot during operation.



ELECTRICAL INSTALLATION



WARNING!

Only qualified person can do the electrical installation.



The manufacturer is not responsible if you do not follow the safety precautions from the chapter "Safety Instructions".

This appliance is supplied with a main cable and main plug.



WARNING!

The microwave oven is fitted with a plug and must be only connected to a properly installed, earthed socket. In accordance with the appropriate regulations, the socket must only be installed, and the connecting cable must only be replaced by a qualified electrician. If the plug is no longer accessible following installation an all-pole isolating switch must be present on the installation side with a contact gap of at least 3mm.

Customer care center

<p>Thailand Consumer Care Tel : (+66 2) 725 9000 Electrolux Thailand Co., Ltd. Electrolux Building 14th Floor 1910 New Phetchaburi Road, Bangkapi, Huai Khwang, Bangkok 10310 Office Tel : (+66 2) 7259100 Office Fax : (+66 2) 7259299 Email : customercarethai@electrolux.com</p>	<p>Malaysia Consumer Care Center Tel: 1300-88-11-22 Electrolux Home Appliances Sdn. Bhd. Corporate Office Address: Unit T2-7, 7th Floor, Tower 2, PJ33, No. 3, Jalan Semangat, Seksyen 13, 46200 Petaling Jaya, Selangor. Office Tel : (+60 3) 7843 599 9 Office Fax : (+60 3) 7955 5511 Consumer Care Center Address: Lot C6, No. 28, Jalan 15/22, Ta man Perindustrian Tiong Nam, 40200 Shah Alam, Selangor Consumer Care Center Fax : (+60 3) 5524 2521 Email : malsia.customercare@electrolux.com</p>
<p>Indonesia Hotline service: 08041119999 PT. Electrolux Indonesia Electrolux Building Jl.Abdul Muis No.34, Petojo Selatan, Gambir Jakarta Pusat 10160 Email:customercare@electrolux.co.id SMS & WA : 0812.8088.8863</p>	<p>Philippines Consumer Care Center Toll Free : 1-800-10-845-CARE(2273) Consumer Care Hotline : (+63 2) 845-CARE(2273) Electrolux Philippines, Inc. Unit B 12F Cyber Sigma Bldg,Lawton Avenue, McKinley West,Taguig, Philippines 1634 Trunkline: +63 2 737- 4757 Website : www.electrolux.com.ph Email : wecare@electrolux.com</p>
<p>Vietnam Consumer Care Center Toll Free: 1800-58-88-99 Tel: (+84 28) 3910 5465 Electrolux Vietnam Ltd. Floor 10th, Sofic Tower 10 Mai Chi Tho Street – Thu Thiem Ward – District 2 Thu Duc City, Ho Chi Minh City, Vietnam Office Tel: (+84 28) 3910 5465 Office Fax: (+84 28) 3910 5470 Email: vnccare@electrolux.com</p>	<p>Singapore Consumer Care Center Tel: (+65) 6727 3699 Electrolux S.E.A. Pte Ltd. 351 Braddell Road #01-04, 351 On Braddell Singapore 579713 Email : customer-care.sin@electrolux.com</p>
<p>Korea Contact Center: 1566-1238 Electrolux Korea Ltd. 9th Floor, Pine Avenue B, 100 Eulji-ro, Jung-gu, Seoul 04551, Korea Electrolux Korea Home page: www.electrolux.co.kr Customer Care Home page: www.electroluxconsumer.co.kr Email: homecare.krh@electrolux.com</p>	<p>Taiwan Consumer Care Center Toll Free: 0800-888-259 Electrolux S.E.A Private Limited Taiwan Branch 4F., No.3, Sec. 1, Dunhua S. Rd. Songsshan Dist., Taipei City 105408 Taiwan (R.O.C.) Email: service.tw@electrolux.com</p>

ด้วยความห่วงใยผู้ใช้งานทุกท่าน

ขอขอบคุณที่เลือกซื้อเครื่องใช้ไฟฟ้าของ Electrolux คุณได้เลือกผลิตภัณฑ์ที่มาพร้อมกับประสบการณ์และนวัตกรรมอย่างมืออาชีพที่ส่งสมมาบนมันสิบปี สร้างสรรค์และมีสไตล์ ออกแบบโดยคำนึงถึงคุณเป็นหลัก ดังนั้นเมื่อใดก็ตามที่คุณใช้ผลิตภัณฑ์ดังกล่าว คุณจะรู้สึกปลอดภัย เพราะรู้ว่าคุณจะได้ผลลัพธ์ที่ยอดเยี่ยมทุกครั้ง ขอต้อนรับสู่ Electrolux

ก่อนใช้งานเป็นครั้งแรก

ตรวจสอบหาร่องรอยความเสียหายหรือตำหนิต่าง ๆ หากพบว่าอุปกรณ์ชำรุดเสียหายหรือมีรอย คุณต้องแจ้งภายใน 7 วัน เพื่อเคลมสินค้าที่ชำรุดเสียหายภายใต้การรับประกันของบริษัท และไม่กระทบต่อสิทธิ์ตามกฎหมายของคุณ

ก่อนใช้งาน เราขอแนะนำให้ผู้อ่านคู่มือการใช้งานทั้งหมดซึ่งมีคำอธิบายเกี่ยวกับผลิตภัณฑ์และฟังก์ชันการทำงานให้เข้าใจก่อน สิ่งสำคัญคือต้องติดตั้งผลิตภัณฑ์อย่างถูกต้อง และอ่านคำแนะนำด้านความปลอดภัยอย่างละเอียด เพื่อหลีกเลี่ยงอันตรายที่อาจเกิดขึ้นและการใช้อุปกรณ์ผิดวัตถุประสงค์

โปรดเก็บคู่มือเล่มนี้ไว้ในที่ปลอดภัยเพื่อนำมาใช้อ้างอิงในอนาคต

เงื่อนไขการใช้งาน

อุปกรณ์นี้ผลิตขึ้นเพื่อใช้ในครัวเรือน และการใช้งานที่คล้าย ๆ กันเช่น:

- ส่วนของห้องครัวสำหรับพนักงานภายในร้าน สำนักงานและพื้นที่ทำงานอื่น ๆ
- บ้านพักในฟาร์ม
- โถยูลูกค้าในโรงแรม ห้องพักและพื้นที่พักอาศัยในรูปแบบอื่น ๆ
- สถานประกอบการที่ให้บริการห้องพักและอาหารเช้า

ก่อนโทรติดต่อศูนย์บริการ

คุณต้องอ่านคู่มือการใช้งานอย่างครบถ้วนก่อนโทรเข้าศูนย์บริการที่อาจมีการเรียกเก็บค่าบริการเพิ่มเติม

บันทึกกลุ่มและหมายเลขเครื่องที่นี้:

รุ่น: _____

หมายเลขเครื่อง: _____

ข้อมูลสำคัญที่อาจส่งผลกระทบต่อการใช้งาน

การปฏิบัติตามคำแนะนำในการใช้งานที่ปรากฏในคู่มือนี้มีความสำคัญอย่างยิ่งต่อสุขภาพและความปลอดภัย การไม่ปฏิบัติตามข้อกำหนดในคู่มือนี้อย่างเคร่งครัด อาจส่งผลให้เกิดการบาดเจ็บ ความเสียหายต่อทรัพย์สิน และส่งผลกระทบต่อสิทธิ์ในการเรียกร้องค่าชดเชยของคุณภายใต้การรับประกันของบริษัท Electrolux ที่มาพร้อมกับผลิตภัณฑ์ของคุณ จะต้องใช้ ติดตั้ง และใช้งานผลิตภัณฑ์ให้สอดคล้องกับคำแนะนำในคู่มือนี้ คุณอาจไม่สามารถอ้างสิทธิ์ในการรับประกันของบริษัท Electrolux ได้ ในกรณีที่ผลิตภัณฑ์เสียหายเนื่องจากคุณไม่ได้ปฏิบัติตามคู่มือนี้

สารบัญ

คำเตือนทั่วไป	17
คำแนะนำด้านความปลอดภัย	18
แผงควบคุม	19
รายละเอียดผลิตภัณฑ์	19
อุปกรณ์เสริม	21
การใช้อุปกรณ์เสริม	21
การใช้งานประจำวัน	22
โปรแกรมอัตโนมัติ	24
ฟังก์ชันเพิ่มเติม	25
เคล็ดลิบและข้อแนะนำ	26
การดูแลรักษาและการทำความสะอาด	26
การแก้ไขปัญหา	27
การติดตั้ง	28
การติดตั้งระบบไฟฟ้า	29
ศูนย์บริการลูกค้า	29

สัญลักษณ์



คำเตือน!

สัญลักษณ์นี้แสดงข้อมูลเกี่ยวกับความปลอดภัยของคุณ



ข้อควรระวัง!

สัญลักษณ์นี้แสดงข้อมูลเกี่ยวกับวิธีการหลีกเลี่ยงความเสียหายที่จะเกิดกับเครื่อง



สิ่งสำคัญ!

สัญลักษณ์นี้แสดงเคล็ดลิบและข้อมูลเกี่ยวกับการใช้เครื่อง



สิ่งแวดล้อม!

สัญลักษณ์นี้แสดงเคล็ดลิบและข้อมูลเกี่ยวกับการใช้เครื่องอย่างประหยัดและเป็นมิตรกับสิ่งแวดล้อม

ข้อมูลการกึ่งผลิตภัณฑ์สำหรับผู้ใช้



สิ่งแวดล้อม!

- วัสดุบรรจุภัณฑ์ส่วนใหญ่ทำไปรีไซเคิลได้ โปรดทิ้งวัสดุเหล่านี้ ณ ศูนย์รีไซเคิลในพื้นที่ของคุณ หรือทิ้งในถังขยะที่เหมาะสม
- หากคุณต้องการกึ่งผลิตภัณฑ์นี้ โปรดติดต่อหน่วยงานในพื้นที่ของคุณ และสอบถามวิธีการกึ่งที่ถูกต้อง

คำเตือนทั่วไป

โปรดอ่านคำแนะนำด้านความปลอดภัยที่สำคัญให้เข้าใจ และเก็บไว้ให้อ้างอิงในอนาคต ส่งต่อคู่มือผู้ใช้ให้กับเจ้าของเครื่องคนใหม่

หมายเหตุ! คุณต้องอ่านคำเตือนอย่างละเอียดก่อนติดตั้งหรือใช้เครื่อง หากต้องการความช่วยเหลือ โปรดติดต่อฝ่ายบริการลูกค้า บริษัทฯ ไม่ยอมรับผิดในกรณีที่มีการละเลยคำแนะนำเหล่านี้ให้คำแนะนำด้านความปลอดภัยอื่นๆ ที่รวมอยู่ในคู่มือนี้

ความปลอดภัยของเด็กและผู้ที่มีความเสี่ยง



คำเตือน!

เสี่ยงต่อการบาดเจ็บจากอากาศหายใจ ได้รับบาดเจ็บ หรือถูกพลาพลาถาวร

- เครื่องใช้ไฟฟ้านี้ไม่มีเจตนาให้ใช้โดยบุคคล (รวมถึงเด็ก) ที่ต่อความสามารถทางร่างกาย ทางประสาทสัมผัสหรือจิตใจหรือขาดประสบการณ์และความรู้ เว้นแต่ว่าจะได้รับการควบคุมดูแลหรือการสอนเกี่ยวกับการใช้ เครื่องใช้ไฟฟ้าโดยบุคคลที่รับผิดชอบต่อความปลอดภัยของบุคคลเหล่านี้
- ควรควบคุมดูแลไม่ให้เด็กเล่นกับอุปกรณ์นี้
- เก็บบรรจุภัณฑ์ทั้งหมดให้ห่างจากมือเด็ก
- หากเครื่องมืออุปกรณ์ป้องกันเด็ก เราขอแนะนำให้คุณเปิดใช้งานอุปกรณ์ดังกล่าว หากมีเด็กอยู่ด้วย
- คำเตือน! ชิ้นส่วนที่เข้าถึงได้อาจร้อนขึ้นระหว่างการใช้งาน จึงควรระวังไม่ให้เด็กเลืกอยู่ใกล้กับเครื่อง



ข้อควรระวัง!

โปรดอ่านคำแนะนำด้านความปลอดภัยที่สำคัญให้เข้าใจ และเก็บไว้ให้อ้างอิงในอนาคต

ความปลอดภัยทั่วไป

- ภายในเครื่องจะร้อนขึ้นเมื่อใช้งาน ห้ามแตะจับส่วนที่ความร้อนที่อยู่ในเครื่อง สวมถุงมือเสมอเมื่อต้องหยิบอุปกรณ์เสริมหรือเครื่องใช้ในเตาอบรวมทั้งถาดนำเข้าไว้
- ห้ามใช้เครื่องทำความสะอาดด้วยไอน้ำในการทำ ความสะอาดเตา
- ถอดปลั๊กไมโครเวฟออกก่อนทำการบำรุงรักษา
- ห้ามใช้เตาไมโครเวฟ หากประตูหรือซีลประตูชำรุดจนกว่าจะได้รับการซ่อมแซมอย่างผู้ชำนาญ
- เตาไมโครเวฟไม่ได้ผลิตขึ้นเพื่อใช้งานร่วมกับตัวจับเวลาภายนอก หรือระบบโทรทัศน์ไกลแยก
- ฝาครอบของเตาไมโครเวฟมีไว้เพื่อป้องกันการสัมผัสกับพลังงานไมโครเวฟ การซ่อมบำรุงหรือการซ่อมแซมที่ต้องถอดฝาครอบเตาออกมา ต้องดำเนินการโดยช่างผู้ชำนาญเท่านั้น
- อย่าอุ่นของเหลวและอาหารอื่นๆ ในภาชนะที่ปิดสนิท เพราะอาจเกิดการระเบิดได้

• ใช้ภาชนะที่สามารถใช้กับเตาไมโครเวฟเท่านั้น
• เมื่ออุ่นอาหารในภาชนะพลาสติกหรือกระดาษ ให้ฝาดูอยู่ตลอดเวลา เพราะภาชนะอาจติดไฟได้
• เตาไมโครเวฟออกแบบมาเพื่ออุ่นอาหารและเครื่องดื่ม การใช้เตาไมโครเวฟเพื่อทำให้อาหารหรือเสื้อผ้าแห้ง ให้ความร้อนกับแผ่นทำความร้อน รองเท้าแตะ พองน้ำ ผ่านชุดน้ำหมาดๆ และอื่นๆ อาจเสี่ยงที่จะเกิดกราดเจ็บ เกิดประกายไฟ หรือไฟไหม้ได้
• หากมีควันลอยออกมา ให้ปิดสวิตช์เตาไมโครเวฟหรือถอดปลั๊กออก โดยที่ยังปิดประตูเตาไว้ เพื่อให้เปลวไฟถูกลดลง
• การใช้เตาไมโครเวฟอุ่นเครื่องดื่ม อาจทำให้เครื่องดื่มเดือดและร้อนจัด ต้องใช้ความระมัดระวังเมื่อยกภาชนะ
• ควรคนหรือเขย่าขวดนมและโภชนาการเด็ก และตรวจสอบอุณหภูมิก่อนบริโภค เพื่อป้องกันการลวก
• ไม่ควรอุ่นใช้ดับทั้งฟองและใช้ดื่มที่ยังไม่ได้ปกเปลือกลงในเตาไมโครเวฟ เพราะใช้อาจระเบิดได้ แม้ว่าเตาไมโครเวฟจะหยุดให้ความร้อนแล้วก็ตาม
• ควรทำความสะอาดเตาไมโครเวฟและจัดคราบอาหารที่ค้างอยู่ในเตาออกเป็นประจำ
• หากไม่รักษาความสะอาดเตาไมโครเวฟ พื้นผิวของเตาจะเสื่อมสภาพ ที่อาจส่งผลเสียต่ออายุการและอาจทำให้เกิดอันตรายได้
• พื้นผิวของเตาในส่วนที่สัมผัสได้ อาจร้อนขณะที่ใช้เตา
• เตาไมโครเวฟออกแบบมาเพื่อตั้งวาง ต้องไม่วางเตาไว้ด้านบนประตูตู้แช่แข็งหรือในตู้ที่ปิดมิดชิด โปรดปฏิบัติตามข้อกำหนดการติดตั้งในคู่มือ
• ห้ามใช้น้ำยาทำความสะอาดที่มีฤทธิ์กัดกร่อนรุนแรงหรือที่ขูดโลหะแหลมคมในการทำความสะอาดประตูกระจก เพราะอาจทำให้กระจกเป็นรอยและแตกได้
• หากสายไฟชำรุดเสียหาย ผู้มีหน้าที่เปลี่ยนคือบริษัท ศูนย์บริการที่ได้รับอนุญาต หรือบุคลากรผู้เชี่ยวชาญ เพื่อป้องกันอันตรายที่อาจเกิดขึ้น



ข้อควรระวัง!

หลีกเลี่ยงอันตรายจากการรีเซ็ตอุปกรณ์ตัดวงจรเมื่ออุณหภูมิสูง โดยไม่ได้ตั้งใจได้ด้วยการไม่สัมผัสปลั๊กเตาไมโครเวฟเข้ากับอุปกรณ์สวิตช์ภายนอก เช่น ตัวจับเวลา หรือเชื่อมต่อกับวงจรที่มีการเปิดปิดเป็นประจำ



คำเตือน!

ปิดสวิตช์เตาไมโครเวฟก่อนเปลี่ยนหลอดไฟเพื่อป้องกันไฟฟ้าช็อต

คำแนะนำด้านความปลอดภัย

การติดตั้ง



คำเตือน!

การติดตั้งเครื่องนี้ ต้องดำเนินการโดยผู้ที่มีความสามารถเท่านั้น

- นำบรรจุภัณฑ์ทั้งหมดออก
- ห้ามติดตั้งหรือใช้เตาไมโครเวฟที่ชำรุดเสียหาย
- ปฏิบัติตามคำแนะนำในการติดตั้งที่มาพร้อมกับเตาไมโครเวฟ
- โปรดใช้ความระมัดระวังในการเคลื่อนย้าย เนื่องจากเครื่องมีน้ำหนักมาก สวมถุงมือนิรภัยเสมอ
- รักษาระยะห่างขั้นต่ำจากเครื่องใช้และอุปกรณ์อื่นๆ

การเชื่อมต่อกับวงจรไฟฟ้า



คำเตือน!

เสียบต่อไฟใหม่และไฟฟ้าช็อต

- อุปกรณ์นี้มาพร้อมกับสายไฟและปลั๊กไฟ 16A เหมาะสำหรับใช้กับเต้ารับ 16A แบบมาตรฐาน หากจำเป็นต้องติดตั้งเต้ารับ ควรให้ช่างผู้ชำนาญเป็นผู้ดำเนินการ
- อุปกรณ์จะต้องต่อสายดิน
- ขอบกลางไฟฟ้าที่อยู่บนป้ายระบุต้องสอดคล้องกับแหล่งจ่ายไฟ หากไม่ตรงกัน แนะนำให้ติดตั้งอย่างไฟฟ้า
- เสียบปลั๊กไฟเข้ากับเต้ารับไฟหลักเมื่อวางเตาไมโครเวฟเรียบร้อยแล้ว คุณจะต้องเอื้อมเสียบปลั๊กและดึงปลั๊กไฟได้สะดวกหลังจากติดตั้งเสร็จแล้ว
- ปลั๊กไฟและสายไฟต้องไม่ชำรุดเสียหาย ติดต่อกับศูนย์บริการหรือช่างไฟฟ้าเพื่อเปลี่ยนสายไฟที่ชำรุดเสียหาย
- ห้ามดึงที่สายไฟเมื่อจะถอดปลั๊ก ดึงที่ตัวปลั๊กไฟเสมอ

การใช้งาน



คำเตือน!

เสี่ยงต่อการบาดเจ็บ ไฟไหม้หรือไฟฟ้าช็อต หรือเกิดการระเบิด

- ใช้เตาไมโครเวฟในครัวเรือนเท่านั้น
- ต้องปฏิบัติตามคำแนะนำการใช้
- ต้องไม่มีอะไรปิดกั้นช่องระบายอากาศ
- ห้ามปล่อยให้เครื่องทำงานโดยไม่มีอยู่ดูแล
- อย่าออกแรงกดประตูที่เปิดอยู่
- ห้ามใช้เครื่องเป็นพื้นที่ทำงาน และห้ามเก็บของในช่องใส่อาหาร
- ห้ามใช้เตาไมโครเวฟโดยไม่มีอาหาร
- อนุญาตให้ใช้ภาชนะโลหะใส่อาหารและเครื่องดื่มในระหว่างการทำอาหารด้วยไมโครเวฟ

การดูแลรักษาและการทำความสะอาด



คำเตือน!

เสี่ยงต่อการบาดเจ็บ ไฟไหม้ หรือเครื่องชำรุดเสียหาย

- ก่อนบำรุงรักษา ควรปิดเครื่องและถอดปลั๊กไฟออกจากเต้ารับ
- ทำความสะอาดเครื่องเป็นประจำเพื่อป้องกันไม่ให้พื้นผิวเสื่อมสภาพ
- อย่าให้เศษอาหารหรือสารตกค้างจากน้ำยาทำความสะอาดสะสมบนขอบยางของประตู
- ไขมันหรืออาหารที่เหลืออยู่ในเครื่อง อาจทำให้เกิดควัน/ไฟไหม้ได้ โดยเฉพาะที่อยู่บนตะแกรงย่าง
- ทำความสะอาดเครื่องด้วยผ้าชุบน้ำหมาดๆ ใช้น้ำยาทำความสะอาดที่มีค่าเป็นกลางเท่านั้น ห้ามใช้ผลิตภัณฑ์ที่มีฤทธิ์กัดกร่อน แผ่นใยขัดถู ตัวทำละลาย หรือวัตถุที่เป็นโลหะ
- ห้ามใช้เครื่องทำความสะอาดด้วยไอน้ำทำความสะอาดอุปกรณ์นี้

การทิ้งผลิตภัณฑ์




คำเตือน!


เสี่ยงต่อการบาดเจ็บหรือบาดเจ็บจากอากาศหายใจ

- ถอดปลั๊กอุปกรณ์ออกจากเต้ารับ
- ถอดสายไฟแล้วนำไปทิ้ง


รายละเอียดผลิตภัณฑ์

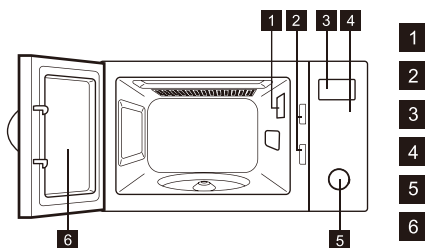

แผงควบคุม

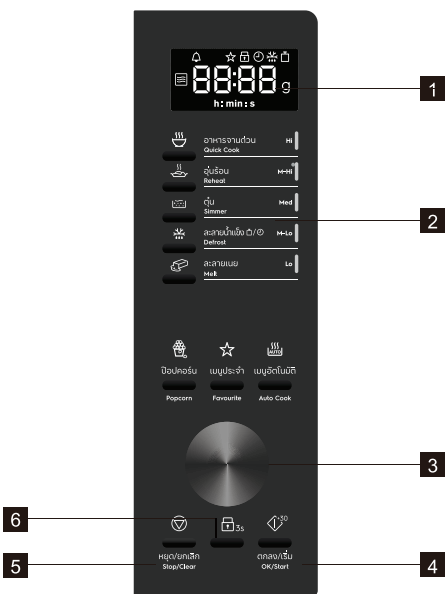

EMM25D22BM

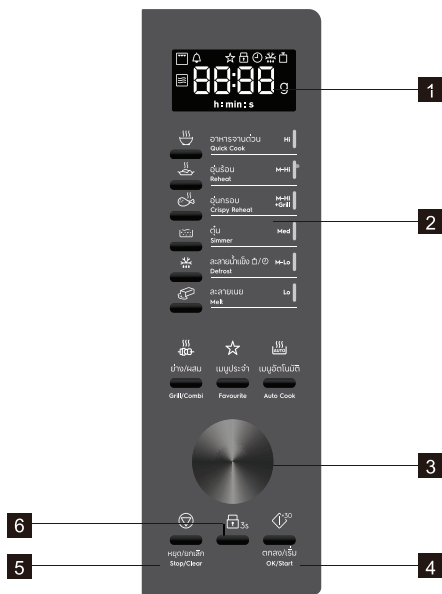

EMG25D22BM/ NB

สัญลักษณ์	ฟังก์ชัน	คำอธิบาย
1	---	หน้าจอแสดงผล แสดงการตั้งค่าและเวลาปัจจุบัน
2	---	ปุ่มฟังก์ชัน เลือกฟังก์ชันการทำอาหารแบบต่างๆ
3	---	ปุ่มตั้งค่า ปรับเวลาทำอาหาร/น้ำหนักอาหาร เลือกเมนูอัตโนมัติ
4	⏸ +30	ปุ่มเริ่ม/ +30 วินาที เริ่มการทำงานหรือเพิ่มเวลาทำอาหาร 30 วินาทีโดยใช้กำลังไฟสูงสุด
5	⏹	ปุ่มหยุด/ยกเลิก ปิดการทำงานหรือลบการตั้งค่าการทำอาหาร
6	🔒 3s	ระบบล็อกป้องกันเด็ก กดค้างไว้เพื่อเปิดใช้ฟังก์ชันล็อกป้องกันเด็ก

รายละเอียดผลิตภัณฑ์ (ต่อ)

สัญลักษณ์อื่นบนแผงควบคุม

สัญลักษณ์	ฟังก์ชัน	รายละเอียด
	อาหารจานด่วน	ทำอาหารอย่างรวดเร็วหรือตามปกติ
	อุ่นร้อน	ทำอาหารตามปกติ อุ่นร้อน
	อุ่นกรอบ	อุ่นอาหารทอด ** สำหรับรุ่น EMG25D22BM/ NB เท่านั้น
	ตุ๋น	ทำอาหารช้าๆ ตุ๋น หรือเคี้ยว
	ละลายน้ำแข็ง	ละลายน้ำแข็งอาหารตามน้ำหนัก/เวลา
	ละลายเนย	คงความอุ่นของอาหาร ละลาย/ทำให้นุ่ม
	บิ้อปคอร์น	เมนูบิ้อปคอร์น ** สำหรับรุ่น EMM25D22BM เท่านั้น
	ย่าง/ ผสม	ฟังก์ชันย่างหรือทำอาหารแบบผสม ** สำหรับรุ่น EMG25D22BM/ NB เท่านั้น
	เมนูประจำ	สามารถบันทึกและเข้าถึงการตั้งค่าที่ซับซ้อนได้สูงสุด 3 รายการและใช้ฟังก์ชันเมนูประจำเพื่อเข้าถึงรายการดังกล่าวได้อย่างรวดเร็ว
	เมนูอัตโนมัติ	ทำอาหารอัตโนมัติ

อาหารจานด่วน

- กด "อาหารจานด่วน" หนึ่งครั้ง "Hi" จะปรากฏขึ้น
- หมุนปุ่มเพื่อตั้งเวลาทำอาหาร ควรอยู่ในช่วง 0:00-95:00 น.
- กด ตกลง/เริ่ม เพื่อเริ่มทำอาหาร

อุ่นร้อน

- กด "อุ่นร้อน" หนึ่งครั้ง "M-Hi" จะปรากฏขึ้น
- หมุนปุ่มเพื่อตั้งเวลาทำอาหาร ควรอยู่ในช่วง 0:00-95:00 น.
- กด ตกลง/เริ่ม เพื่อเริ่มนับถอยหลัง

ตุ๋น

- กด "ตุ๋น" หนึ่งครั้ง "Med" จะปรากฏขึ้น
- หมุนปุ่มเพื่อตั้งเวลาทำอาหาร ควรอยู่ในช่วง 0:00-95:00 น.
- กด ตกลง/เริ่ม เพื่อเริ่มนับถอยหลัง

ละลายเนย

- กด "ละลายเนย" หนึ่งครั้ง "Lo" จะปรากฏขึ้น
- หมุนปุ่มเพื่อตั้งเวลาทำอาหาร ควรอยู่ในช่วง 0:00-95:00 น.
- กด ตกลง/เริ่ม เพื่อเริ่มทำอาหาร

ละลายน้ำแข็งตามน้ำหนัก

- กด "ละลายน้ำแข็ง" หนึ่งครั้ง "M-Lo" จะปรากฏขึ้น
- หมุนปุ่มเพื่อตั้งน้ำหนัก ควรอยู่ในช่วง 100-2000 กรัม
- กด ตกลง/เริ่ม เพื่อเริ่มนับถอยหลัง

หมายเหตุ: เสียงกริ่งจะเตือนให้คุณพลิกอาหารระหว่างการละลายน้ำแข็ง

ละลายน้ำแข็งตามเวลา

- กด "ละลายน้ำแข็ง" สองครั้ง "M-Lo" จะปรากฏขึ้น
- หมุนปุ่มเพื่อตั้งเวลาทำอาหาร ควรอยู่ในช่วง 0:00-95:00 น.
- กด ตกลง/เริ่ม เพื่อเริ่มทำอาหาร

รายละเอียดผลิตภัณฑ์ (ต่อ)

สัญลักษณ์อื่นบนแผงควบคุม

บ๊อปคอร์น

- กด "บ๊อปคอร์น" หนึ่งครั้ง "100g" จะปรากฏขึ้น
- กดตกลง/เริ่ม เพื่อเริ่มทำอาหาร

ย่าง/ผสม

- กด "ย่าง/ ผสม" หนึ่งครั้งหรือสองครั้ง โหมดย่างและผสมจะพร้อมใช้งาน ไอคอน "Grill/ Combi" จะสว่างขึ้น
- หมุนปุ่มเพื่อตั้งเวลาทำอาหาร ควรอยู่ในช่วง 0:00-95:00 น.
- กด ตกลง/เริ่ม เพื่อเริ่มทำอาหาร


อุ่นกรอบ

- กด "อุ่นกรอบ" หนึ่งครั้ง "M-Hi+Grill" จะปรากฏขึ้น
- หมุนปุ่มเพื่อตั้งเวลาทำอาหาร ควรอยู่ในช่วง 0:00-95:00 น.
- กด ตกลง/เริ่ม เพื่อเริ่มทำอาหาร

อุปกรณ์เสริม

ห้ามวางอาหารลงบนจานหมุนแกว่งภายในเตาไมโครเวฟโดยตรง

การติดตั้งจานหมุน

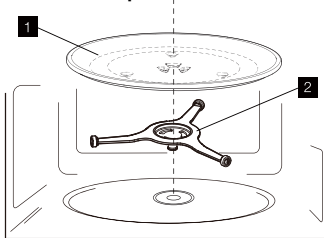


- จานหมุนแกว่ง
- วงแหวนประกอบจานหมุน



ควรทำความสะอาดเตาและวางจานหมุนให้เข้าที่เสมอ

ตะแกรงย่าง

สำหรับย่างอาหารและทำอาหารแบบผสม

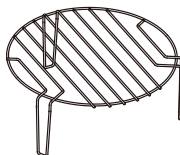

คำเตือน!

ตะแกรงย่างไม่เหมาะกับการใช้งานฟังก์ชันไมโครเวฟ สามารถใช้กับฟังก์ชันย่าง อบลมร้อน และแบบผสม (รวมถึงการไมโครเวฟเป็นระยะเวลาสั้นๆ) เท่านั้น การใช้ตะแกรงย่างในฟังก์ชันไมโครเวฟ อาจทำให้อุปกรณ์เสียหายได้

** สำหรับรุ่น EMG25D22BM/ NB เท่านั้น

การใช้อุปกรณ์เสริม



คำเตือน!

โปรดดูรายละเอียดจากหัวข้อความปลอดภัย




ข้อควรระวัง!

ห้ามทำอาหารโดยไม่ใช้ชุดจานหมุน ใช้ชุดจานหมุนที่มาพร้อมกับเครื่องเท่านั้น



การวางตะแกรงย่าง

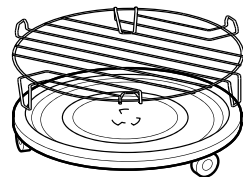

วางตะแกรงย่างบนชุดจานหมุน

- อย่าสัมผัสบรรจุก้นที่และแถบสำหรับการขนส่งทั้งหมดออกก่อนติดตั้ง
- ก่อนใช้ไมโครเวฟเพื่อเตรียมอาหารในครั้งแรก คุณจะต้องวางจานหมุนให้ถูกต้อง
- คุณต้องทำความสะอาดช่องทำอาหารและอุปกรณ์เสริม

การใช้งานประจำวัน

ภาชนะและวัสดุที่เหมาะสม

ภาชนะ / วัสดุ	ไมโครเวฟ			ย่าง / อบลมร้อน
	ละลายน้ำแข็ง	อุ่นอาหาร	การทำอาหาร	
แก้วและพอร์ซเลนที่ใช้กับเตาอบได้ (ไม่มีส่วนประกอบที่เป็นโลหะ เช่น Pyrex, แก้วทนความร้อน)	■	■	■	■
แก้วและพอร์ซเลนที่ใช้กับเตาอบไม่ได้ ¹⁾	■	--	--	--
แก้วและแก้วเซรามิกแก้วที่ทำจากวัสดุที่ใช้กับเตาอบได้ / การแช่แข็ง (เช่น Arcoflam) ขึ้นวางสำหรับย่าง	■	■	■	■
เซรามิก ²⁾ , เครื่องปั้นดินเผา ²⁾	■	■	■	--
พลาสติกทนความร้อนที่อุณหภูมิ 200°C ³⁾	■	■	■	--
กระดาษแข็ง, กระดาษ	■	--	--	--
ฟิล์มยึดถนอมอาหาร	■	--	--	--
ฟิล์มสำหรับอบอย่างพร้อมฝาปิดที่นำเข้าไมโครเวฟได้ ³⁾	■	■	■	--
จานสำหรับอบอย่างที่มาจากโลหะ เช่น อีนาเมล เหล็กหล่อ	--	--	--	■
แม่พิมพ์อบขนม เคลือบเงาต่ำ หรือซิลิโคน ³⁾	--	--	--	■
ถาดอบขนม	--	--	--	■
ภาชนะทำอาหาร เช่น กระดาษหรือจานสำหรับอบกรอบ	--	■	■	--
อาหารสำเร็จรูปบรรจุห่อ ³⁾	■	■	■	■

1) ไม่มีสารเคลือบหรือตกแต่งด้วยเงิน ทอง ทองคำขาว หรือโลหะ

2) ไม่มีส่วนประกอบที่ทำจากควอตซ์หรือโลหะ หรือการเคลือบผิวด้วยโลหะ

3) คุณจะต้องปฏิบัติตามคำแนะนำของบริษัทผู้ผลิตเกี่ยวกับการใช้อุณหภูมิสูงสุด

■ เหมาะสม

-- ไม่เหมาะสม

การใช้งานประจำวัน (ต่อ)





ตารางการตั้งระดับความร้อน

กต	ระดับความร้อน	กำลังไฟฟ้า (วัตต์)	อาหารที่เหมาะสม
	สูง	900 วัตต์	อุ่นเครื่องต้ม หุงข้าว ทำอาหารชนิดผัดและก๋วยเตี๋ยว
	ปานกลาง สูง	720 วัตต์	ทำอาหารชนิดเนื้อสัตว์ อุ่นร้อน
	ปานกลาง	450 วัตต์	เคี่ยวน้ำซุ๊ป สตูว์ปลาและอาหารทะเล
	ปานกลาง ต่ำ	270 วัตต์	ละลายอาหาร
	ต่ำ	90 วัตต์	ละลายเนย/บ็อกโกแลต อุ่นอาหารปรุงสุก

ละลายน้ำแข็ง

เลือกโหมดละลายน้ำแข็งได้ 2 แบบ คือ:

- ละลายน้ำแข็งตามน้ำหนัก
- ละลายน้ำแข็งตามเวลา

1. กดปุ่มละลายน้ำแข็ง **1 ครั้ง** หากต้องการใช้โหมดละลายน้ำแข็งตามน้ำหนัก   หรือ **2 ครั้ง** หากต้องการใช้โหมดละลายน้ำแข็งตามเวลา  

2. หมุนปุ่มตั้งค่า เพื่อตั้งน้ำหนัก/เวลา สำหรับการละลายน้ำแข็งตามน้ำหนัก เวลาจะตั้งโดยอัตโนมัติ









3. กด  ⁺³⁰ เพื่อยืนยันและเริ่มการทำงาน








ห้ามใช้การละลายน้ำแข็งตามน้ำหนักกับอาหารที่นำออกจากช่องแช่แข็งเกิน 20 นาที หรืออาหารสำเร็จรูปแช่แข็ง



สำหรับรุ่น EMG25D22BM และ EMG25D22NB เท่านั้น

กต	การตั้งค่ากำลังไฟฟ้า	กำลังไฟฟ้า(วัตต์)	หน้าจอแสดงผล	อาหารที่เหมาะสม
 x 1	ย่าง	ย่าง 100%		ย่างเนื้อสัตว์ ไส้กรอก เนื้อแกะ อาหารทะเล สตีก หรืออาหารอื่นที่แลชิ้นบาง
 x 2	แบบผสม 1	ย่าง 45% ไมโครเวฟ 55%	 	ย่างไก่หรือเปิดทั้งตัว
	อุ่นกรอบ	ย่าง 66% ไมโครเวฟ 34%	 	นึ่งแกงไก่ เนื้ออกไก่ ปีกไก่ หรืออื่น ๆ

ย่างหรือทำอาหารแบบผสม

1. กดปุ่มย่าง/ ผสม  หลายๆครั้งเพื่อเลือกโหมดการทำอาหารที่ต้องการ.
2. หมุนปุ่มตั้งค่า เพื่อเลือกเวลา
3. จากนั้นกดปุ่มตกลง/เริ่มเพื่อเริ่มการทำอาหาร  ⁺³⁰ คุณสามารถปรับเวลาได้ระหว่างที่เตากำลังทำอาหาร.
4. หากต้องการหยุดทำอาหารชั่วคราว ให้กดปุ่มหยุด/ยกเลิก 
5. กดปุ่มตกลง/เริ่ม  ⁺³⁰ เพื่อทำอาหารต่อ กดปุ่มหยุด/ยกเลิก  อีกครั้ง เพื่อหยุดการทำอาหาร และรีเซ็ตการตั้งค่า

การใช้งานประจำวัน (ต่อ)

อุ่นกรอบ (สำหรับรุ่น EMG25D22BM/NB เท่านั้น)

- กดปุ่มอุ่นกรอบ  Crispy Reheat
- หมุนปุ่มตั้งค่า เพื่อตั้งเวลา
- กดปุ่มตกลง/เริ่ม  เพื่อยืนยัน และเริ่มทำอาหาร

โปรแกรมอัตโนมัติ






คำเตือน!

โปรดดูรายละเอียดจากหัวข้อความปลอดภัย

เมนูอัตโนมัติ

คุณสามารถใช้ฟังก์ชันเมนูอัตโนมัติ เพื่อความสะดวกง่ายดาย




- กดปุ่ม เมนูอัตโนมัติ  Auto Cook
- หมุนปุ่มตั้งค่า เพื่อเลือกเมนูอัตโนมัติจากรายการ
- กดตกลง/เริ่ม  เพื่อยืนยันการเลือก
- หมุนปุ่มตั้งค่า เพื่อเลือกน้ำหนัก
- กดตกลง/เริ่ม  เพื่อเริ่มทำอาหาร

หน้าจอแสดงผล	เมนู	ปริมาณ / น้ำหนัก	ระดับความร้อน
R-01	พิซซ่า	100 กรัม 200 กรัม 300 กรัม 400 กรัม	ระดับความร้อน 100%
R-02	พาสต้า/ สปาเก็ตตี้	100 กรัม (พร้อมน้ำเย็น 800 กรัม), 150 กรัม (พร้อมน้ำเย็น 1,200 กรัม), 200 กรัม (พร้อมน้ำเย็น 1,600 กรัม)	ระดับความร้อน 80%
R-03	เครื่องดื่ม	นม	ระดับความร้อน 100%
		กาแฟ	
R-04	โจ๊ก/ข้าวต้ม	1 ถ้วย (250 มล.) 2 ถ้วย (500 มล.) 3 ถ้วย (750 มล.)	ระดับความร้อน 100%
R-04	โจ๊ก/ข้าวต้ม	50 กรัม, 100 กรัม 150 กรัม	ระดับความร้อน 100% / 50%
R-05	มันฝรั่ง	1 (230 กรัม) 2 (460 กรัม) 3 (690 กรัม)	ระดับความร้อน 100%
R-06	ผัก	200 กรัม 300 กรัม 400 กรัม	ระดับความร้อน 100%
R-07	ไก่	250 กรัม 350 กรัม 450 กรัม 550 กรัม	ระดับความร้อน 80%
R-08	ปลา	250 กรัม 350 กรัม 450 กรัม 550 กรัม	ระดับความร้อน 80%
R-09 **เฉพาะรุ่น EMG25D22BM/NB	ย่างเนื้อวัว/เนื้อแกะ	250 กรัม 350 กรัม 450 กรัม 550 กรัม	แบบผสม 2
R-10 **เฉพาะรุ่น EMG25D22BM/NB	เนื้อบาร์บีคิว เป็นชิ้น	เนื้อวัว	250 กรัม 350 กรัม 450 กรัม 550 กรัม
		เนื้อแกะ	250 กรัม 350 กรัม 450 กรัม 550 กรัม



ฟังก์ชันเพิ่มเติม

ฟังก์ชันระบบล็อกป้องกันเด็ก

ระบบล็อกป้องกันเด็ก ช่วยป้องกันไม่ให้เครื่องเปิดทำงานโดยไม่ได้ตั้งใจ

1. กดปุ่มระบบล็อกป้องกันเด็ก  3S ค้างไว้ 3 วินาที
2. สัญลักษณ์ล็อกป้องกันเด็ก  จะปรากฏขึ้นบนหน้าจอ
3. ไฟ LED ทั้งหมดจะดับลง
4. หากต้องการปลดล็อก ให้กดปุ่มระบบล็อกป้องกันเด็ก  3S และกดค้างไว้ 3 วินาที อีกครั้ง

ฟังก์ชันการทำอาหารหลายขั้นตอน

1. กดปุ่มละลายน้ำแข็ง  1 ครั้ง
2. หมุนปุ่มตั้งค่า เพื่อตั้งน้ำหนัก
3. กดปุ่มฟังก์ชัน ตัวอย่างเช่น: อาหารจานด่วน
4. หมุนปุ่มตั้งค่า เพื่อตั้งเวลาทำอาหาร
5. กดตกลง/เริ่ม เพื่อเริ่มทำอาหาร  +30



หมายเหตุ

- ตั้งค่าการทำอาหารที่ต้องใช้ 2 ขั้นตอน ได้จากการทำอาหารหลายขั้นตอน
- หากคุณตั้งค่าฟังก์ชันละลายน้ำแข็ง ฟังก์ชันนี้จะทำงานโดยอัตโนมัติในขั้นตอนแรก
- ไม่สามารถตั้งเมนูอัตโนมัติไว้รวมเป็นหนึ่งในการทำอาหารหลายขั้นตอนได้
- แต่ละครั้งที่กดปุ่มตกลง/เริ่ม จะเพิ่มเวลาทำอาหาร 30 วินาทีขณะทำอาหาร ยกเว้นการละลายน้ำแข็งตามน้ำหนัก



ฟังก์ชันเมนูประจำ

ใช้ฟังก์ชันเมนูประจำเพื่อบันทึกการตั้งค่าการทำอาหารที่ใช้บ่อยและเข้าถึงได้อย่างรวดเร็ว บันทึกตั้งค่าโปรแกรมที่กำหนดเองแล้ว คุณสามารถเปิดใช้งานได้เลย ผ่านสัญลักษณ์รูปดาว ไม่จำเป็นต้องจดจำการตั้งค่าเฉพาะในแต่ละครั้ง สะดวกสบาย แค่แตะที่ปุ่ม

วิธีบันทึกเมนูประจำ

1. ระบุขั้นตอนการทำอาหาร - กดปุ่มฟังก์ชัน ตัวอย่างเช่น: อาหารจานด่วน
2. หมุนปุ่มตั้งค่า เพื่อตั้งเวลาทำอาหาร ตัวอย่างเช่น: 3:00 นาที
3. กดปุ่มเมนูประจำค้างไว้ 3 วินาที จนกระทั่ง “0!” จะพริบบนหน้าจอ 
4. หมุนปุ่มตั้งค่า เพื่อเลือกร่องที่จะบันทึกจาก 01, 02 และ 03
5. กดตกลง/เริ่ม เพื่อยืนยันและบันทึก  +30

วิธีใช้เมนูประจำ

1. กดปุ่มเมนูประจำ  1 ครั้ง เลข “0!” จะพริบ
2. หมุนปุ่มตั้งค่า เพื่อเลือกการตั้งค่าการทำอาหารที่บันทึกไว้จาก 01, 02 และ 03
3. กดตกลง/เริ่ม  +30 เพื่อเริ่มทำอาหาร

หมายเหตุ

- เมนูอัตโนมัติ และอุ่นร้อน ไม่สามารถตั้งค่าให้จดจำการทำอาหารได้
- ตั้งค่าขั้นตอนการทำอาหารได้เพียงหนึ่งหรือสองขั้นตอนเท่านั้น
- วิธีการตั้งค่าจะเหมือนกับกับการตั้งค่าการทำอาหาร
- ระบบจะไม่จดจำการตั้งค่าหากไฟดับ และไม่สามารถตั้งค่าตอนที่ประตูเตาไมโครเวฟเปิด
- หากมีการตั้งโปรแกรมการทำอาหารไว้ในหน่วยความจำโดยตรง ให้กดปุ่ม “ตกลง/เริ่ม” จากนั้นระบบจะเปิดใช้โปรแกรมทำอาหารโดยตรง หากไม่เป็นเช่นนั้น ต้องรีเซ็ตโปรแกรมการทำอาหาร

เคล็ดลับและข้อแนะนำ

ปัญหา	วิธีการแก้ไข
ไม่พบรายละเอียดเกี่ยวกับปริมาณอาหารที่เตรียมไว้	เทียบเคียงจากอาหารที่คล้ายกัน เพิ่มหรือลดระยะเวลาในการทำอาหารตามกฎต่อไปนี้: ปริมาณเพิ่มขึ้นสองเท่า = เพิ่มเวลาเกือบสองเท่า, ปริมาณลดลงครึ่งหนึ่ง = ลดเวลาลงครึ่งหนึ่ง
อาหารแห้งเกินไป	ตั้งเวลาทำอาหารให้สั้นลงหรือเลือกกำลังไฟไมโครเวฟที่ต่ำลง
อาหารแข็งไม่ละลาย อาหารไม่ร้อนหรือสุกหลังจากหมดเวลาที่ตั้งไว้	ตั้งเวลาทำอาหารให้มากขึ้นหรือตั้งค่ากำลังไฟให้สูงขึ้น อาหารจานใหญ่ปริมาณมาก จะใช้เวลานานขึ้น
หลังจากครบเวลา อาหารไหม้ที่ขอบ แต่ตรงกลางยังไม่พร้อมรับประทาน	ในครั้งต่อไป ให้ใช้กำลังไฟต่ำลงและตั้งเวลาให้มากขึ้น คนอาหารที่เป็นน้ำ เช่น ซุป เมื่อถึงครึ่งทางของระยะเวลาทำอาหาร

สำหรับข้าว ควรใช้จานแบนกว้างเพื่อให้ผลลัพธ์ออกมาดีขึ้น

การละลายน้ำแข็ง

ควรละลายอาหารประเภทเนื้อโดยให้ด้านไขมันอยู่ด้านล่าง ห้ามละลายโดยมีฝาครอบปิดไว้ เพราะจะทำให้เนื้อสุก แทนที่จะเป็นการละลายเท่านั้น หากต้องการนำสัตว์ปีกทั้งตัวมาละลายน้ำแข็ง ให้คว่ำส่วนอกลงเสมอ

การทำอาหาร

ควรนำเนื้อและเนื้อสัตว์ปีกออกมาจากตู้เย็นก่อนทำอาหารอย่างน้อย 30 นาที ควรพักเนื้อสัตว์ เนื้อสัตว์ปีก เนื้อปลา และผัก โดยปิดฝาครอบไว้หลังทำอาหารเสร็จ

ใช้แรงกดน้ำหนักบนเหยือกที่ละลายแล้วบนเนื้อปลาเล็กน้อย เต็มน้ำเย็น 30-45 มล. สำหรับผักทุกๆ 250 กรัม หั่นผักเป็นชิ้นๆ ขนาดเท่าๆ กัน ก่อนนำไปประกอบอาหาร ขณะทำอาหารที่เป็นฝัก ให้ปิดฝารอบภาชนะด้วยทุกครั้ง

การอุ่นอาหาร

เมื่อคุณอุ่นอาหารพร้อมทานที่ใส่บรรจุภัณฑ์ไว้ ควรปฏิบัติตามคำแนะนำที่ระบุไว้บนบรรจุภัณฑ์

การย่าง

สำหรับอาหารที่เป็นชิ้นแบนๆ ให้วางไว้กลางตะแกรงย่าง พลิกด้านอาหารหลังจากเวลาทำอาหารที่ตั้งไว้ผ่านไปครึ่งทาง แล้วย่างต่อ

การทำอาหารแบบผสม

ใช้ฟังก์ชันทำอาหารแบบผสม เพื่อรักษาความกรอบของอาหารไว้ พลิกด้านอาหารหลังจากเวลาทำอาหารที่ตั้งไว้ผ่านไปครึ่งทาง แล้วทำอาหารต่อ โหมดผสมแต่ละแบบจะผสมฟังก์ชันไมโครเวฟกับฟังก์ชันย่าง โดยกำหนดระยะเวลาและระดับกำลังไฟฟ้าต่างกัน

การดูแลรักษาและการทำความสะอาด



คำเตือน!

โปรดดูรายละเอียดจากหัวข้อความปลอดภัย

ข้อควรทราบเกี่ยวกับการทำความสะอาด:

- ทำความสะอาดเสตเลนเลสโดยการผสมของร้อนนึ่งมือบริเวณแผงด้านหน้าของตัวเครื่องด้วยผ้าชุบน้ำอุ่นผสมน้ำยาทำความสะอาดแบบอ่อน ห้ามใช้น้ำยาคleaning เสตเลนเลส สารกัดกร่อน หรือตัวทำละลายที่มีฤทธิ์รุนแรง
- ทำความสะอาดภายในตัวเครื่องทุกครั้งหลังการใช้งาน เพื่อให้สามารถฉีดคราบสกปรกได้ง่ายยิ่งขึ้น และไม่ถูกเผาไหม้
- ทำความสะอาดคราบที่กำจัดออกยากโดยใช้น้ำยาคleaning ชนิดพิเศษ
- ทำความสะอาดอุปกรณ์ทั้งหมดอย่างสม่ำเสมอ โดยใช้ผ้านุ่มและน้ำอุ่นผสมน้ำยาคleaning หลังจากล้างควรผึ่งให้แห้ง
- หากต้องการทำให้คราบติดแน่นนิ่มลง ให้นำน้ำเปล่า 1 แก้ว ใส่ในเตาไมโครเวฟ และตั้งค่ากำลังไฟสูงสุด 2 ถึง 3 นาที
- หากต้องการกำจัดกลิ่น ให้นำน้ำ 1 แก้ว ผสมน้ำมะนาว 2 ช้อนชา ใส่ในเตาไมโครเวฟ และตั้งค่ากำลังไฟเต็มที่เป็นเวลา 5 นาที

การแก้ไขปัญหา



คำเตือน!

โปรดดูรายละเอียดจากหัวข้อความปลอดภัย

ปัญหา	สาเหตุที่อาจเป็นไปได้	วิธีการแก้ไข
เครื่องไม่ทำงาน	เครื่องปิดการทำงานอยู่	เปิดเครื่องอีกครั้ง
	ยังไม่ได้เสียบปลั๊กไฟ	เสียบปลั๊ก
	ฟิวส์ในกล่องฟิวส์เกิดขาด	ตรวจสอบฟิวส์ หากฟิวส์ขาดมากกว่าหนึ่งครั้ง โปรดติดต่อช่างไฟฟ้าที่มีความชำนาญ
	ปิดประตูไม่สนิท	ตรวจสอบให้แน่ใจว่าไม่มีวัตถุกั้นประตูไว้
หลอดไฟไม่ทำงาน	หลอดไฟชำรุด	จำเป็นต้องเปลี่ยนหลอดไฟ โปรดติดต่อศูนย์บริการลูกค้า
เกิดประกายไฟภายในเตา	มีจานโลหะหรือจานที่มีขอบโลหะ	นำจานออกจากเตาไมโครเวฟ
	มีไม่เสียบโลหะหรือฟอยล์อลูมิเนียมที่แตะกับผนังด้านในของเตาไมโครเวฟ	ไม่เสียบและฟอยล์ต้องไม่แตะกับผนังด้านในของเตาไมโครเวฟ
ชุดจานหมูนึ่งมีเสียงขูดหรือเสียดสีหรือหมูนึ่งไปเสียดไป	มีวัตถุหรือคราบสกปรกอยู่ข้างใต้จานหมูนึ่ง	ทำความสะอาดพื้นที่ด้านล่างจานหมูนึ่ง รวมถึงร่องวงแหวน ตรวจสอบว่าวางชุดล้อนึ่งและจานหมูนึ่งได้อย่างถูกต้อง
เครื่องหยุดทำงานโดยไม่ทราบสาเหตุแม้ขัด	การทำงานบางอย่างผิดปกติ	ตรวจสอบว่าไม่ได้ปิดกั้นช่องระบายอากาศของตัวเครื่อง หากยังเกิดปัญหานี้อยู่ทั้ง ๆ ที่ติดตั้งได้อย่างถูกต้อง โปรดติดต่อศูนย์บริการลูกค้า
เตาไมโครเวฟทำงานตามเวลาที่ตั้งไว้ แต่อาหารไม่ร้อน	อุปกรณ์ควบคุมอุณหภูมิภายในเครื่องที่มีฟังก์ชันรีเซ็ตเองในตัวทำงาน เตาไมโครเวฟติดตั้งอุปกรณ์ควบคุมอุณหภูมิเพื่อป้องกันไม่ให้ส่วนประกอบภายในร้อนเกินไป	เมื่ออุณหภูมิของอุปกรณ์ควบคุมอุณหภูมิลดลง เตาจะกลับมาทำงานได้ตามปกติ รอ 5 นาที แล้วลองใช้เตาอีกครั้ง
ไอน้ำสะสมที่ประตูเตาไมโครเวฟหรือรั่วออกจากช่องระบายอากาศ	การทำอาหารที่มีความชื้นสูงทำให้เกิดไอน้ำ	เป็นเรื่องปกติของกระบวนการทำอาหาร
เกิดควันในระหว่างทำอาหาร	ไขมันสะสมบนตะแกรงด้านใน	ทำความสะอาดภายในเตาเสมอ



ตามข้อบังคับเกี่ยวกับอุปกรณ์ไฟฟ้าและอิเล็กทรอนิกส์ของเสีย

อุปกรณ์ไฟฟ้าและอิเล็กทรอนิกส์ควรเก็บรวบรวมและกำจัดแยกกัน หากในอนาคตคุณต้องทิ้งผลิตภัณฑ์นี้ โปรดอย่าทิ้งรวมกับขยะในครัวเรือน กรุณาส่งผลิตภัณฑ์ไปยังจุดเก็บของเสียประเภทอุปกรณ์ไฟฟ้าและอิเล็กทรอนิกส์ที่มีให้บริการ

หากคุณไม่สามารถแก้ไขปัญหาได้ด้วยตัวเอง โปรดติดต่อตัวแทนจำหน่ายหรือศูนย์บริการลูกค้า

ข้อมูลที่เป็นเมื่อติดต่อศูนย์บริการลูกค้าอยู่บนป้ายระบุบนเครื่อง
เราขอแนะนำให้คุณจดบันทึกข้อมูลไว้ที่นี้:

รุ่น (M)

หมายเลขผลิตภัณฑ์ (PNC)

หมายเลขเครื่อง (S.N.)

การติดตั้ง



ข้อควรระวัง!

อย่าบังช่องระบายอากาศ เพราะอาจทำให้เครื่องร้อนเกินไป




ข้อควรระวัง!

ห้ามเชื่อมต่อเครื่องเข้ากับแอมป์เตอร์ หรือปลั๊กพ่วง ไม่เช่นนั้นอาจทำให้เกิดกระแสไฟฟ้าเกิน และเกิดความเสียหายของเพลิงไหม้

- วางเครื่องให้ห่างจากโอ่งน้ำ สมร้อน และน้ำที่อาจกระเด็นได้
- หากจัดเก็บ/ขนย้ายเครื่องไปในที่อุณหภูมิต่ำกว่าศูนย์ ห้ามเปิดใช้งานทันทีหลังติดตั้งเสร็จ ควรปล่อยให้เครื่องอยู่ที่อุณหภูมิห้องอย่างน้อย 2 ชั่วโมงก่อนใช้เครื่อง

การติดตั้ง

- นำวัสดุบรรจุภัณฑ์และสื่อส่งเสริมการขายทั้งหมดออกจากเตาไมโครเวฟ
- ตรวจสอบเตาเครื่องเพื่อหาร่องรอยความเสียหาย เช่น รอยบุบหรือประตูที่ชำรุด ห้ามติดตั้งหากเตาอบชำรุดเสียหาย ติดต่อบริการ
- แกะแผ่นฟิล์มป้องกันที่อยู่ด้านบนช่องใส่อาหารของเตาออก อย่าถอดแผ่นปิดก้นภาชนะที่ติดอยู่ทางด้านขวามือของช่องเตาออกเพื่อป้องกันแมงกิ้งตรอน
- อย่าวางวัสดุบรรจุภัณฑ์ที่ถึงโถงเด็กเล็กนำไปเล่น เพราะอาจเป็นอันตรายได้
- เลือกพื้นผิวที่เรียบและได้ระดับ มีพื้นที่กว้างขวางเพียงพอสำหรับช่องระบายอากาศเข้าและออก และแข็งแรงพอที่จะรับน้ำหนักของเตาได้ ระหว่างเตากับผนังที่อยุ่ ติดกัน.
เว้นระยะห่างเหนือเตาไมโครเวฟอย่างน้อย 30 ซม.

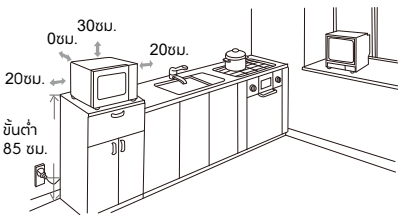

- 1) ความสูงขั้นต่ำในการติดตั้งคือ 85 ซม.
- 2) พื้นผิวที่ด้านหลังของตัวเครื่องควรหันเข้าผนังห้อง เว้นระยะห่างเหนือเตาไมโครเวฟอย่างน้อย 30 ซม. ต้องมีระยะห่างอย่างน้อย 20 ซม. ระหว่างเตากับผนังที่อยู่ติดกัน
- 3) ห้ามถอดขาตั้งออกจากด้านล่างของเตาไมโครเวฟ
- 4) การปิดกั้นช่องทางเข้าและ/หรือช่องทางออกอาจทำให้เตาไมโครเวฟเสียหายได้
- 5) วางเตาไมโครเวฟให้ห่างจากวิทยุและทีวีให้มากที่สุด การทำงานของเตาไมโครเวฟอาจรบกวนการรับสัญญาณวิทยุหรือทีวีของคุณ

การปิดกั้นช่องระบายอากาศเข้าหรือออก อาจทำให้เตาเสียหายได้ หากช่องระบายอากาศถูกปิดกั้นระหว่างการทำงาน เตาอาจร้อนเกินไปจนทำงานผิดปกติได้ สมร้อนจะพ่นออกจากช่องระบายอากาศ ดังนั้นอย่าปิดกั้นหรือปล่อยให้มันบังที่ระหว่างเตากับผนังด้านหลัง

- ควรวางเตาไว้บนพื้นที่มั่นคงเพื่อป้องกันไม่ให้เตาสั่นหรือเกิดเสียงดัง
- ห้ามถอดขาตั้งออกจากด้านล่างของเตาไมโครเวฟ
- ควรตั้งเตาไว้บนโต๊ะหรือเคาน์เตอร์ ไม่ควรวางไว้บนเฟอร์นิเจอร์อื่น หรือในตู้
- ต้องวางเตาให้ห่างจากความร้อนและน้ำ การสัมผัสกับความร้อนและน้ำอาจทำให้ประสิทธิภาพลดลงและทำงานผิดปกติได้
- วางเตาให้ห่างจากวิทยุและทีวีให้มากที่สุด การทำงานของเตาอาจรบกวนการทำงานของสัญญาณวิทยุหรือทีวี
- ลดหรือขจัดปัญหาเกิดคลื่นรบกวนการทำงานได้ด้วยการปฏิบัติตามมาตรการดังต่อไปนี้:
 - ทำความสะอาดประตูและซิลลอนประตูเตาไมโครเวฟ
 - ปรับตำแหน่งเสาอากาศรับสัญญาณของวิทยุและ/หรือทีวี
 - ย้ายเตาไมโครเวฟให้ห่างจากเครื่องรับสัญญาณ
 - เปลี่ยนปลั๊กเตาไมโครเวฟเข้ากับเต้ารับอื่น เพื่อให้เตาไมโครเวฟและเครื่องรับสัญญาณอยู่ในเต้ารับต่างกัน
- แรงดันไฟฟ้าและความถี่ที่คลื่นในเชื่อมต่อเตาไมโครเวฟเป็นตรงกับที่ระบุไว้บนป้ายระบุที่อยู่บนเตาไมโครเวฟ หากเตาไมโครเวฟเชื่อมต่อปลั๊กไฟกับเต้าเสียบประเภทปลั๊กพ่วง โปรดตรวจสอบให้แน่ใจว่าได้ทำการต่อสายดินเป็นที่เรียบร้อยแล้ว



คำเตือน!

ห้ามติดตั้งเตาไมโครเวฟเหนือเตาตั้งพื้นหรืออุปกรณ์ให้ความร้อนอื่น ๆ หากติดตั้งใกล้หรือเหนือแหล่งความร้อน เตาอาจเสียหายและการรับประกันจะกลายเป็นโมฆะ

พื้นผิวส่วนที่เข้าถึงได้อาจร้อนระหว่างการใช้งาน



การติดตั้งระบบไฟฟ้า



คำเตือน!

การติดตั้งระบบไฟฟ้าต้องดำเนินการโดยช่างผู้ชำนาญเท่านั้น



บริษัทจะไม่รับผิดชอบ หากคุณไม่ปฏิบัติตามข้อควรระวังด้านความปลอดภัยจากหัวข้อ “คำแนะนำด้านความปลอดภัย”



คำเตือน!

เตาไมโครเวฟมาพร้อมกับปลั๊กไฟที่ต้องต่อเข้ากับเตาที่ต่อสายดินอย่างเหมาะสมเท่านั้น ระเบียบข้อบังคับกำหนดให้ช่างไฟฟ้าที่มีความชำนาญเป็นผู้ติดตั้งเตาและเปลี่ยนสายไฟเท่านั้น หากไม่สามารถเข้าถึงปลั๊กไฟได้หลังจากติดตั้ง ต้องมีวิศวกรตรวจสอบทุกชั่วโมงในด้านที่ติดตั้ง พร้อมระงับการทำงานชั่วคราว 3 วัน.

อุปกรณ์ที่มาพร้อมกับสายไฟและปลั๊ก

ศูนย์บริการลูกค้า

<p>ประเทศไทย ศูนย์บริการลูกค้า โทร: (+66 2) 725 9000 Electrolux Thailand Co., Ltd. อาคาร อิเล็กโทรลักซ์ เลขที่ 1910 ชั้น 14 ถนนเพชรบุรีตัดใหม่ แขวงนางท้อ-ปี เขตห้วยขวาง กรุงเทพฯ 10310 www.electrolux.co.th LINE ID: @electroluxTH-care อีเมล: customercarethai@electrolux.com</p>	<p>มาเลเซีย Consumer Care Center Tel: 1300-88-11-22 Electrolux Home Appliances Sdn. Bhd. Corporate Office Address: Unit T2-7, 7th Floor, Tower 2, PJ33, No. 3, Jalan Semangat, Seksyen 13, 46200 Petaling Jaya, Selangor. Office Tel : (+60 3) 7843 599 9 Office Fax : (+60 3) 7955 5511 Consumer Care Center Address: Lot C6, No. 28, Jalan 15/22, Ta man Perindustrian Tiong Nam, 40200 Shah Alam, Selangor Consumer Care Center Fax: (+60 3) 5524 2521 อีเมล: malaysia.customercare@electrolux.com</p>
<p>อินโดนีเซีย บริการออนไลน์: 08041119999 PT. Electrolux Indonesia Electrolux Building Jl.Abdul Muis No.34, Petojo Selatan, Gambir Jakarta Pusat 10160 Email:customercare@electrolux.co.id SMS & WA : 0812.8088.8863</p>	<p>ฟิลิปปินส์ Consumer Care Center เบอร์โทรฟรี: 1-800-10-845-CARE(2273) Consumer Care Hotline : (+63 2) 845-CARE(2273) Electrolux Philippines, Inc. Unit B 12F Cyber Sigma Bldg, Lawton Avenue, McKinley West, Taguig, Philippines 1634 Trunkline: +63 2 737- 4757 เว็บไซต์: www.electrolux.com.ph อีเมล: wecare@electrolux.com</p>
<p>เวียดนาม Consumer Care Center เบอร์ โทรฟรี: 1800-58-88-99 โทรศัพท์ : (+84 28) 3910 5465 Electrolux Vietnam Ltd. Floor 10th, Sofic Tower 10 Mai Chi Tho Street - Thu Thiem Ward - District 2 Thu Duc City, Ho Chi Minh City, Vietnam Office Tel: (+84 28) 3910 5465 Office Fax: (+84 28) 3910 5470 อีเมล: vncare@electrolux.com</p>	<p>สิงคโปร์ Consumer Care Center Tel: (+65) 6727 3699 Electrolux S.E.A. Pte Ltd. 351 Braddell Road #01-04, 351 On Braddell Singapore 579713. หมายเลขโทรสารสำนักงาน: (+65) 6727 3611 อีเมล: customer-care.sin@electrolux.com</p>
<p>เกาหลี Contact Center: 1566-1238 Electrolux Korea Ltd. Youngpoong Building, 22F, 41, Cheonggyecheon-ro, Jongno-gu, Seoul 03188, Korea Electrolux Korea Home page: www.electrolux.co.kr Customer Care Home page: www.electroluxconsumer.co.kr อีเมล: homecare.kr@electrolux.com</p>	<p>ไต้หวัน Consumer Care Center เบอร์ โทรฟรี: 0800-888-259 Electrolux S.E.A Private Limited Taiwan Branch 4F., No.3, Sec. 1, Dunhua S. Rd. Songsshan Dist., Taipei City 105408 อีเมล: service.tw@electrolux.com</p>

