


EMM20K22BA



EN Freestanding Microwave Oven


Installation & User manual

2

TH เตาไมโครเวฟ ชนิดตั้งโต๊ะ

คู่มือการติดตั้งและคู่มือการใช้งาน

12

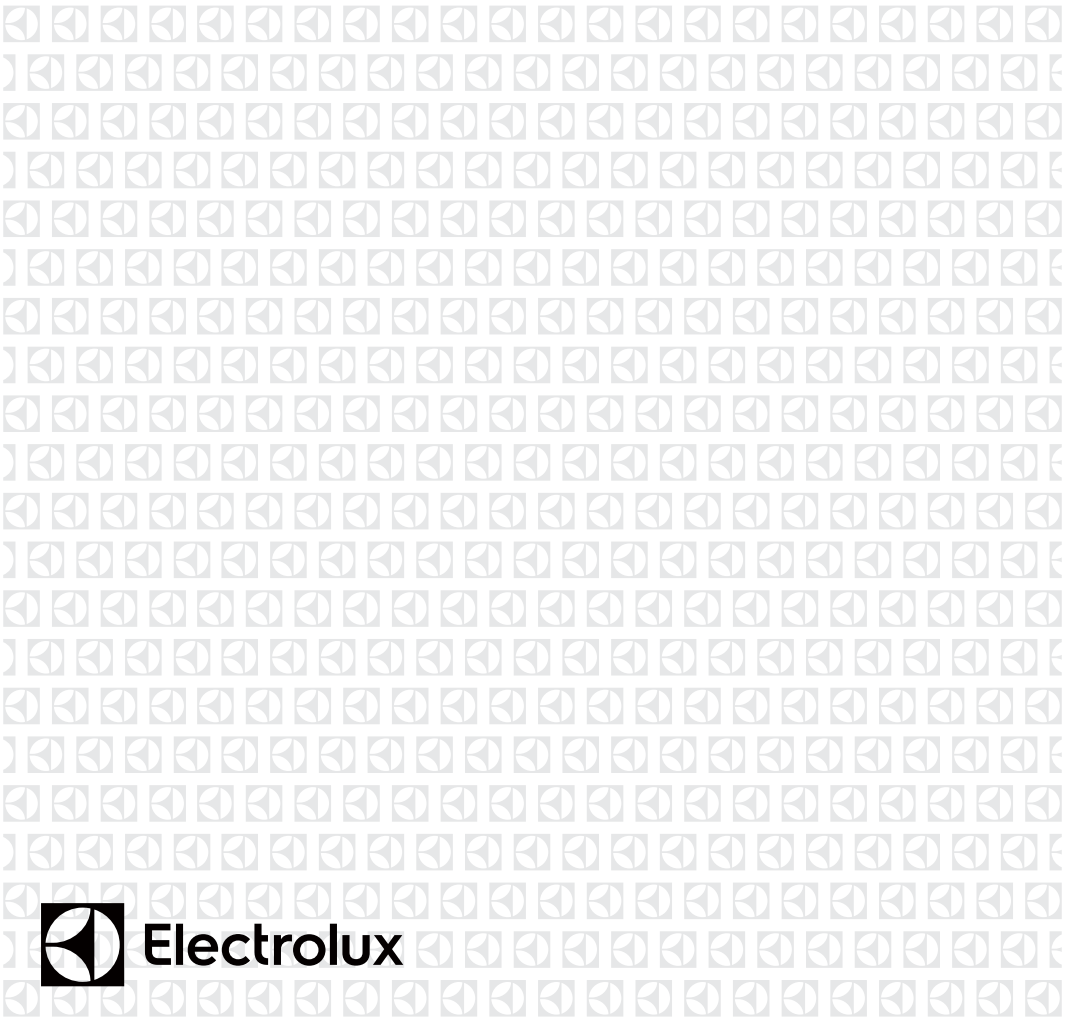

Electrolux

WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time.

Welcome to Electrolux.

BEFORE USING YOUR APPLIANCE

Check for any damage or marks. If you find the appliance damaged or marked you must report it within 7 days to claim for damages under the manufacturer's warranty. This does not affect your statutory rights.

Before you use the appliance, we recommend that you read through the whole user manual which provides the description of the product and its functions. It is important that the product is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards.

For future reference, please store this booklet in a safe place.

CONDITIONS OF USE

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments.
- Farm houses.
- By clients in hotels, motels and other residential type environments.
- Bed and breakfast type environments.

BEFORE YOU CALL

Please ensure you read the instruction manual fully before you call for service, or a full service fee could be applicable.

RECORD MODEL AND SERIAL NUMBER HERE:

Model: _____

Serial No: _____

IMPORTANT INFORMATION THAT MAY IMPACT YOUR MANUFACTURER'S WARRANTY

Adherence to the directions for use in this manual is extremely important for health and safety. Failure to strictly adhere to the requirements in this manual may result in personal injury, property damage and affect your ability to make a claim under the Electrolux manufacturer's warranty provided with your product. Products must be used, installed and operated in accordance with this manual. You may not be able to claim on the Electrolux manufacturer's warranty in the event that your product fault is due to failure to adhere this manual.

CONTENTS

General warnings	3
Safety instructions	4
Product description.....	5
Accessories	5
Control panel	5
Daily use	6
Using the accessories	8
Helpful hints and tips	8
Care and cleaning	9
Troubleshooting	9
Installation.....	10
Electrical Installation.....	11
Customer care center.....	11

SYMBOLS



WARNING!

This symbol indicates information concerning your personal safety.



CAUTION!

This symbol indicates information on how to avoid damaging the appliance.



IMPORTANT!

This symbol indicates tips and information about use of the appliance.



ENVIRONMENT!

This symbol indicates tips and information about economical and ecological use of the appliance.

INFORMATION ON DISPOSAL FOR USERS



ENVIRONMENT!

- Most of the packaging materials are recyclable. Please dispose of these materials through your local recycling depot or by placing them in appropriate collection containers.
- If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

GENERAL WARNINGS

Important safety instructions, read carefully and keep for future reference. Pass the user manual on to possible new owners of the appliance.

NOTE! You must read these warnings carefully before installing or using the appliance. If you need assistance, contact your Customer Care Department. The manufacturer will not accept liability, should these instructions or any other safety instructions incorporated in this book be ignored.

Children and vulnerable people safety.



WARNING!

Risk of suffocation, injury or permanent disability.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging away from children.
- If the appliance has a child safety device, we recommend that you activate it if children are present.
- WARNING: Accessible parts may become hot during use. Young children should be kept away.



CAUTION!

Important safety instructions, read carefully and keep for future reference.

General safety

- Internally the appliance becomes hot when in operation. Do not touch the heating elements that are in the appliance. Always use oven gloves to remove or put in accessories or ovenware.
- Do not use a steam cleaner to clean the appliance.
- Before maintenance isolate the power supply.
- If the door or door seals are damaged, the appliance must not be operated until it has been repaired by a competent person.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Only a competent person can carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
- Do not heat liquids and other foods in sealed containers. They are liable to explode.

- Only use utensils that are suitable for use in microwave ovens.
- When heating food in plastic or paper containers, keep an eye on the appliance due to the possibility of ignition.
- The appliance is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Microwave heating of beverages can result in delayed eruptive boiling. Care must be taken when handling the container.
- The contents of feeding bottles and baby food jars should be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- Eggs in their shell and whole hard-boiled eggs should not be heated in the appliance since they may explode, even after microwave heating has ended.
- The appliance should be cleaned regularly and any food deposits removed.
- Failure to maintain the appliance in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- The temperature of accessible surfaces may be high when the appliance is operating.
- This appliance is designed for freestanding application. It must not be installed behind a decorative door or installed in an enclosed cupboard. Please follow the installation requirements in this manual.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the glass door since they can scratch the surface, which may result in shattering of the glass.
- If the supply cord is damaged, it must be replaced by the manufacturer or an authorised service agent or similarly qualified persons in order to avoid a hazard.



CAUTION!

In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.



WARNING!

Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

SAFETY INSTRUCTIONS

Installation



WARNING!

Only a qualified person must install this appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Obey the installation instructions supplied with the appliance.
- Always be careful when you move the appliance because it is heavy. Always wear safety gloves.
- Keep the minimum distance from the other appliances and units.

Electrical connection



WARNING!

Risk of fire and electrical shock.

- This appliance is supplied with a power cord and 10A power plug suitable for connection to standard 10A power socket. If a power socket needs to be installed, it must be done by a suitably qualified electrician.
- The appliance must be earthed.
- Make sure that the electrical information on the rating plate agrees with the power supply. If not, contact an electrician.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- Make sure not to cause damage to the mains plug and to the mains cable. Contact the Service Centre or an electrician to change a damaged mains cable.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.

Use



WARNING!

Risk of injury, burns or electric shock or explosion.

- Use this appliance in a household environment.
- Do not change the specification of this appliance.
- Make sure that the ventilation openings are not blocked.
- Do not leave the appliance unattended during operation.
- Do not apply pressure on the open door.
- Do not use the appliance as a work surface and do not use the cavity for storage purposes.
- Do not operate appliance without food.
- Metallic containers for food and beverages are not allowed during microwave cooking.

Care and cleaning



WARNING!

Risk of injury, fire or damage to the appliance.

- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.
- Regularly clean the appliance to prevent the deterioration of the surface material.
- Do not allow food spills or cleaner residue to accumulate on door sealing surfaces.
- Remaining fat or food in the appliance can cause smoke/fire, particularly on the grill element.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- Do not use a steam cleaner to clean this appliance.

Disposal




WARNING!

Risk of injury or suffocation.

- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.

PRODUCT DESCRIPTION

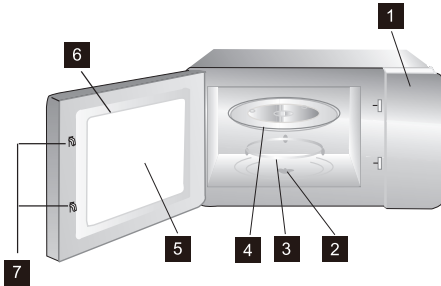


- | | |
|----------------------------------|----------------------------------|
| 1 Control panel | 5 Observation window |
| 2 Turntable shaft | 6 Door assembly |
| 3 Turntable ring assembly | 7 Safety interlock system |
| 4 Glass tray | |

ACCESSORIES


Turntable set

Hub (underside)

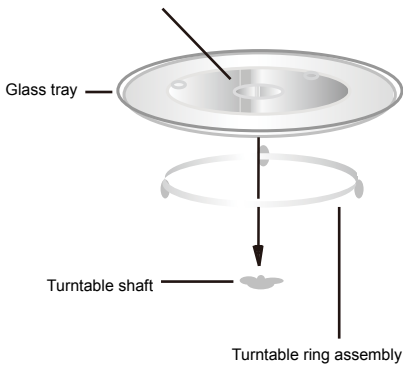

Always use the turntable set to prepare food in the appliance.

CONTROL PANEL

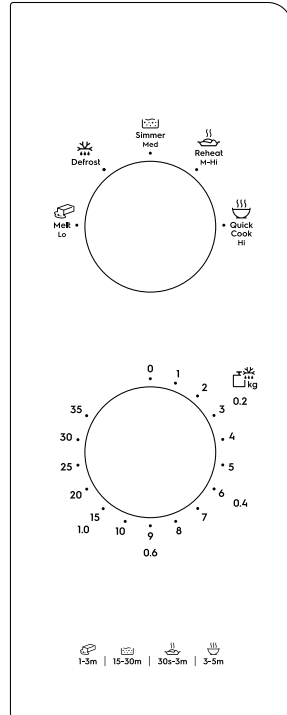

Symbol	Function	Description
1	Quick Cook	Fast or normal cooking.
2	Reheat	Normal cooking. Reheat.
3	Simmer	Slow cooking, simmer and stew.
4	Defrost	To defrost food by time.
5	Melt	Keep warm. Melting/ soften.
6	Weight Defrost	To defrost food by weight.

DAILY USE

Suitable cookware and materials

Cookware / Material	Microwave			Grilling/ Convection
	Defrosting	Heating	Cooking	
Ovenproof glass and porcelain (with no metal components, e.g. Pyrex, heat-proof glass)	■	■	■	■
Non-ovenproof glass and porcelain ¹⁾	■	--	--	--
Glass and glass ceramic made of ovenproof / frost-proof material (e.g. Arcoflam), grill shelf	■	■	■	■
Ceramic ²⁾ , earthenware ²⁾	■	■	■	--
Heat-resistant plastic up to 200°C ³⁾	■	■	■	--
Cardboard, paper	■	--	--	--
Clingfilm	■	--	--	--
Roasting film with microwave safe closure ³⁾	■	■	■	--
Roasting dishes made of metal, e.g. enamel, cast iron	--	--	--	■
Baking tins, black lacquer or silicon coated ³⁾	--	--	--	■
Baking tray	--	--	--	■
Browning cookware, e.g. Crisp pan or Crunch plate	--	■	■	--
Ready meals in packaging ³⁾	■	■	■	■

1) With no silver, gold, platinum or metal plating / decorations.

2) Without quartz or metal components, or glazes which contain metals.

3) You must follow the manufacturer's instructions about the maximum temperatures.

■ suitable






-- not suitable

DAILY USE (CONTINUED)

Materials to be avoided in microwave oven

Utensils	Remarks
• Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
• Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
• Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
• Metal twist ties	May cause arcing and could cause a fire in the oven.
• Paper bags	May cause a fire in the oven.
• Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
• Wood	Wood will dry out when used in the microwave oven and may split or crack.

Power setting tables

Symbol	Power Level	Output (W)	Suitable Foods
	Quick Cook - High	800W	Heat beverage. Cook rice, vegetable & noodles.
	Reheat - Medium High	616W	Cook poultry and meat. Reheat.
	Simmer - Medium	440W	Simmer soup. Stew fish and seafood.
	Defrost - Medium Low	264W	Thaw foods.
	Melt - Low	136W	Melt butter/ chocolate. Keep cooked food warm.

Notice: When removing food from the oven, please ensure that the oven power is switched off by turning the timer switch to 0 (zero). Failure to do so, and operating the microwave oven without food in it, can result in overheating and damage to the magnetron.

1. To set cooking power by turning the power knob to desired level.
2. To set the time of cooking by turning the timer knob to desired time per your food cooking guide.
3. The microwave oven will automatically start cooking after power level and time are set.
4. After the cooking time is up, the unit will "Dong" to stop.
5. If the unit is not in use, always set time to "0".



Do not use weight defrosting on food that is left out of the freezer for more than 20 minutes, or for frozen ready-made food.



USING THE ACCESSORIES



WARNING!

Refer to the safety chapters.




CAUTION!

Do not cook food without the turntable set. Use only the turntable set provided with the appliance.



Never cook food directly on the glass cooking tray.

Turntable Installation

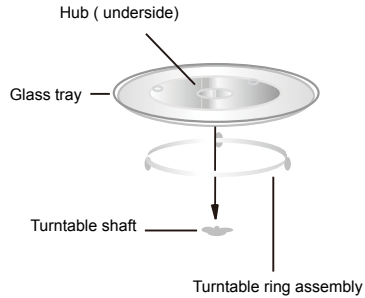

1. Never place the glass tray upside down. The glass tray should never be restricted.
2. Both glass tray and turntable ring assembly must always be used during cooking.
3. All food and containers of food are always placed on the glass tray for cooking.
4. If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

HELPFUL HINTS AND TIPS

Problem	Remedy
You cannot find details for the amount of food prepared.	Look for a similar food. Increase or shorten the length of the cooking times according to the following rule: Double the amount = almost double the time, Half the amount = half the time
The food got too dry.	Set shorter cooking time or select lower microwave power.
The food is not defrosted, hot or cooked after the time came to an end.	Set longer cooking time or set higher power. Note that large dishes need longer time.
After the cooking time comes to an end, the food is overheated at the edge but is still not ready in the middle.	Next time set a lower power and a longer time. Stir liquids halfway through, e.g. soup.

To get better results for rice use a flat, wide dish.

Defrosting

Always defrost roast with the fat side down. Do not defrost covered meat because this may cause cooking instead of defrosting. Always defrost whole poultry breast side down.

Reheating

When you reheat packed ready meals always follow the instructions written on the packaging.

Cooking

Always remove chilled meat and poultry from the refrigerator at least 30 minutes before cooking. Let the meat, poultry, fish and vegetables stay covered after cooking.

Brush a little oil or melted butter over the fish. Add 30-45ml of cold water for every 250g of vegetables. Cut the fresh vegetables into even size pieces before cooking. Cook all vegetables with a cover on the container.

CARE AND CLEANING



WARNING!

Refer to the safety chapters.

Notes on cleaning:

- To clean front panel fingerprint-resistant stainless steel simply wipe with a soft cloth using warm water and a mild detergent. DO NOT use stainless steel cleaners, abrasive cleaners or harsh solvents.
- Clean the appliance interior after each use. Then you can remove dirt more easily and it does not burn on.
- Clean stubborn dirt with a special cleaner.
- Clean all accessories regularly and let them dry. Use a soft cloth with warm water and a cleaning agent.
- To soften hard to remove remains, boil a glass of water at full microwave power for 2 to 3 minutes.
- To remove odours, mix a glass of water with 2 tsp of lemon juice and boil at full microwave power for 5 minutes.

TROUBLESHOOTING



WARNING!

Refer to the safety chapters.

Problem	Possible cause	Remedy
The appliance does not operate.	The appliance is deactivated.	Activate the appliance.
	The appliance is not plugged in.	Plug in the appliance.
	The fuse in the fuse box is blown.	Check the fuse. If the fuse blows more than one time, contact a qualified electrician.
	The door is not closed properly.	Make sure that nothing blocks the door.
The lamp does not operate.	The lamp is defective.	The lamp has to be replaced. Contact the customer service centre.
There is sparking in the cavity.	There are metal dishes or dishes with metal trim.	Remove the dish from the appliance.
	There are metal skewers or aluminium foil that touches the interior walls.	Make sure that the skewers and foil does not touch the interior walls.
The turntable set makes scratching or grinding noise or does not rotate smoothly.	There is an object or dirt below the glass cooking tray.	Clean the area below the glass cooking tray including rollers. Check turntable roller assembly and glass are installed correctly.
The appliance stops operating without a clear reason.	There is a malfunction.	Check ventilation of the unit is not obstructed. If this situation repeats with correct installation call the customer service centre.
Microwave runs cooking cycle but food does not heat up.	Internal self-resetting thermostat has activated. The microwave is fitted with a thermostat to protect internal components from overheating.	Once the thermostat's temperature has reduced the unit should function normally. Wait 5 minutes then try the appliance again.
Steam accumulating on microwave oven door or leaking from vents.	Cooking foods with a high moisture content will always produce steam.	This is a normal part of the cooking process.
Smoke during cooking process.	Fat accumulated on cavity grill element.	Ensure inside of unit is cleaned regularly.

If you cannot find a solution to the problem yourself, contact your dealer or the customer service centre.

The necessary data for the customer service centre is on the rating plate on the appliance.

We recommend that you write the data here:

Model (M)

.....

Product number (PNC)

.....

Serial number (S.N.)

.....

INSTALLATION



CAUTION!

Do not block the air vents. If you do that, the appliance can overheat.




CAUTION!

Do not connect the appliance to adapters or extension leads. This can cause overloading and risk of fire.

- Put the appliance far away from steam, hot air and water splashes.
- If the appliance is stored/ transported at sub-zero temperatures, do not activate it immediately after installation. Allow at least two hours for it to be brought up to room temperature before turning on the unit.

Installation

- Remove all packing material and any promotional material from the microwave oven.
- Examine the oven for any damage such as dents or a broken door. Do not install if the oven is damaged. Call the service centre.
- Remove the protective film on the oven cabinet surface. Do not remove the light brown Mica cover that is attached to the right-hand side of the oven cavity to protect the magnetron.
- Do not leave the packing material so that small children can play with it. This can be hazardous.
- Select a flat, level surface that provides enough open space for the intake and outlet vents and that is strong enough to bear the weight of the oven. Leave a minimum clearance 30cm above the oven.

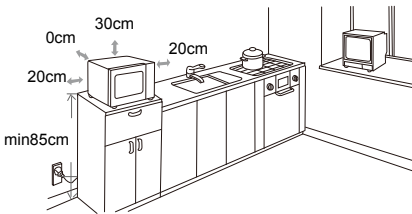

- 1) The minimum installation height is 85cm.
- 2) The rear surface of appliance shall be placed against a wall. Leave a minimum clearance of 30cm above the oven. A minimum clearance of 20cm is required between the oven and any adjacent walls.
- 3) Do not remove the legs from the bottom of the oven.
- 4) Blocking the intake and/or outlet openings can damage the oven.
- 5) Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.

Blocking the intake or outlet vents can damage the oven. If air vents are blocked during operation, the oven may overheat, and this may lead to malfunctioning. Hot air escapes from the vents, so be sure not to obstruct it or let curtains come between the oven and the rear wall.

- The oven should be placed in a stable position to avoid the possibility of causing vibration or noise.
- Do not remove the legs from the bottom of the oven.
- This oven should only be installed freestanding; not built-in or in a cabinet.
- Keep the oven away from heat and water. Exposure to heat and water can lower the efficiency and lead to malfunctioning.
- Place the oven as far away from radios and TV as possible. Operation of the oven may cause interference to your radio or TV reception.
- When there is interference, it may be reduced or eliminated by taking the following measures:
 - Clean door and sealing surface of the microwave oven.
 - Reorient the receiving antenna of the radio and/or television.
 - Move the microwave oven away from the receiver.
 - Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.
- Be sure the voltage and frequency where you connect the microwave oven is the same as specified on the rating plate on the microwave oven. If the microwave oven is connected to the socket via an extension cord, make sure the cord is earthed.



WARNING!

Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

The accessible surface may be hot during operation.



ELECTRICAL INSTALLATION



WARNING!

Only a qualified person must do the electrical installation.



The manufacturer is not responsible if you do not follow the safety precautions from the chapter "Safety Instructions".

This appliance is supplied with a main cable and main plug.



WARNING!

The microwave oven is fitted with a plug and must be only connected to a properly installed, earthed socket. In accordance with the appropriate regulations, the socket must only be installed and the connecting cable must only be replaced by a qualified electrician. If the plug is no longer accessible following installation an all-pole isolating switch must be present on the installation side with a contact gap of at least 3mm.

Customer care center

<p>Thailand Consumer Care Tel : (+66 2) 725 9000 Electrolux Thailand Co., Ltd. Electrolux Building 14th Floor 1910 New Phetchaburi Road, Bangkapi, Huai Khwang, Bangkok 10310 Office Tel : (+66 2) 7259100 Office Fax : (+66 2) 7259299 Email : customercarethai@electrolux.com</p>	<p>Malaysia Consumer Care Center Tel: 1300-88-11-22 Electrolux Home Appliances Sdn. Bhd. Corporate Office Address: Unit T2-7, 7th Floor, Tower 2, PJ33, No. 3, Jalan Semangat, Seksyen 13, 46200 Petaling Jaya, Selangor. Office Tel : (+60 3) 7843 599 9 Office Fax : (+60 3) 7955 5511 Consumer Care Center Address: Lot C6, No. 28, Jalan 15/22, Ta man Perindustrian Tiong Nam, 40200 Shah Alam, Selangor Consumer Care Center Fax : (+60 3) 5524 2521 Email : malaysia.customercare@electrolux.com</p>
<p>Indonesia Hotline service: 08041119999 PT. Electrolux Indonesia Electrolux Building Jl.Abdul Muis No.34, Petojo Selatan, Gambir Jakarta Pusat 10160 Email:customercare@electrolux.co.id SMS & WA : 0812.8088.8863</p>	<p>Philippines Consumer Care Center Toll Free : 1-800-10-845-CARE(2273) Consumer Care Hotline : (+63 2) 845-CARE(2273) Electrolux Philippines, Inc. Unit B 12F Cyber Sigma Bldg, Lawton Avenue, McKinley West, Taguig, Philippines 1634 Trunkline: +63 2 737- 4757 Website : www.electrolux.com.ph Email : wecare@electrolux.com</p>
<p>Vietnam Consumer Care Center Toll Free: 1800-58-88-99 Tel: (+84 28) 3910 5465 Electrolux Vietnam Ltd. Floor 10th, Sofic Tower 10 Mai Chi Tho Street – Thu Thiem Ward – District 2 Thu Duc City, Ho Chi Minh City, Vietnam Office Tel: (+84 28) 3910 5465 Office Fax: (+84 28) 3910 5470 Email: vncare@electrolux.com</p>	<p>Singapore Consumer Care Center Tel: (+65) 6727 3699 Electrolux S.E.A. Pte Ltd. 351 Braddell Road #01-04, 351 On Braddell Singapore 579713. Office Fax : (+65) 6727 3611 Email : customer-care.sin@electrolux.com</p>
<p>Korea Contact Center: 1566-1238 Electrolux Korea Ltd. 9th Floor, Pine Avenue B, 100 Eulji-ro, Jung-gu, Seoul 04551, Korea Electrolux Korea Home page: www.electrolux.co.kr Customer Care Home page: www.electroluxconsumer.co.kr Email: homecare.krh@electrolux.com</p>	<p>Taiwan Consumer Care Center Toll Free: 0800-888-259 Electrolux S.E.A Private Limited Taiwan Branch 4F., No.3, Sec. 1, Dunhua S. Rd. Songshan Dist., Taipei City 105408 Taiwan (R.O.C.) Email: service.tw@electrolux.com</p>

ด้วยความห่วงใยผู้ใช้งานทุกท่าน

ขอขอบคุณที่เลือกซื้อเครื่องใช้ไฟฟ้าของ Electrolux คุณได้เลือกผลิตภัณฑ์ที่มาพร้อมกับประสิทธิภาพและนวัตกรรมอย่างมืออาชีพที่ส่งมอบมาบนพื้นฐานที่ สร้างสรรค์และมีสไตล์ ออกแบบโดยคำนึงถึงคุณเป็นหลัก ดังนั้นเมื่อใดก็ตามที่คุณใช้ผลิตภัณฑ์ดังกล่าว คุณจะรู้สึกปลอดภัย เพราะรู้ว่าคุณจะได้ผลลัพธ์ที่ยอดเยี่ยมทุกครั้ง ขอต้อนรับสู่ Electrolux

ก่อนใช้งานเป็นครั้งแรก

ตรวจสอบหาร่องรอยความเสียหายหรือตำหนิต่าง ๆ หากพบว่าอุปกรณ์ชำรุดเสียหายหรือมีรอย คุณต้องแจ้งภายใน 7 วัน เพื่อเคลมสินค้าที่ชำรุดเสียหายภายใต้การรับประกันของบริษัท และไม่กระทบต่อสิทธิตามกฎหมายของคุณ
ก่อนใช้งาน เราขอแนะนำให้คุณอ่านคู่มือการใช้งานทั้งหมดซึ่งมีคำอธิบายเกี่ยวกับผลิตภัณฑ์และฟังก์ชันการทำงานให้เข้าใจก่อน สิ่งสำคัญคือต้องติดตั้งผลิตภัณฑ์อย่างถูกต้อง และอ่านคำแนะนำด้านความปลอดภัยอย่างละเอียด เพื่อหลีกเลี่ยงอันตรายที่อาจเกิดขึ้นและการใช้อุปกรณ์ผิดวัตถุประสงค์

โปรดเก็บคู่มือเล่มนี้ไว้ในที่ปลอดภัยเพื่อนำมาใช้อ้างอิงในอนาคต

เงื่อนไขการใช้งาน

- อุปกรณ์นี้ผลิตขึ้นเพื่อใช้ในครัวเรือน และการใช้งานที่คล้าย ๆ กันเช่น:
- ส่วนของห้องครัวสำหรับพนักงานภายในร้าน สำนักงานและพื้นที่ทำงานอื่น ๆ
 - บ้านพักในฟาร์ม
 - โดยลูกค้าในโรงแรม ห้องพักและพื้นที่พักอาศัยในรูปแบบอื่น ๆ
 - สถานประกอบการที่ให้บริการห้องพักและอาหารเข้า

ก่อนโทรติดต่อศูนย์บริการ

คุณต้องอ่านคู่มือการใช้งานอย่างครบถ้วนก่อนโทรเข้าศูนย์บริการที่อาจมีการเรียกเก็บค่าบริการเพิ่มเติม

บันทึกรุ่นและหมายเลขเครื่องที่นี้:

รุ่น: _____
หมายเลขเครื่อง: _____

ข้อมูลสำคัญที่อาจส่งผลกระทบต่อการใช้งาน

การปฏิบัติตามคำแนะนำในการใช้งานที่ปรากฏในคู่มือนี้มีความสำคัญอย่างยิ่งต่อสุขภาพและความปลอดภัย การไม่ปฏิบัติตามข้อกำหนดในคู่มือนี้อาจส่งผลกระทบต่อความปลอดภัยของคุณ การรับประกันและการบริการของคุณจะขึ้นอยู่กับประสิทธิภาพของผลิตภัณฑ์ Electrolux ที่มาพร้อมกับผลิตภัณฑ์ของคุณ จะต้องใช้ ติดตั้ง และใช้งานผลิตภัณฑ์ให้สอดคล้องกับคำแนะนำในคู่มือนี้ คุณอาจไม่สามารถอ้างสิทธิในการรับประกันของบริษัท Electrolux ได้ ในกรณีที่ผลิตภัณฑ์เสียหายเนื่องจากคุณไม่ได้ปฏิบัติตามคู่มือนี้

สารบัญ

คำเตือนทั่วไป	13
คำแนะนำด้านความปลอดภัย	14
รายละเอียดผลิตภัณฑ์	15
อุปกรณ์เสริม	15
แผงควบคุม	15
การใช้งานประจำวัน	16
การใช้อุปกรณ์เสริม	18
เคล็ดสลับและข้อแนะนำ	18
การดูแลรักษาและการทำความสะอาด	19
การแก้ไขปัญหา	19
การติดตั้ง	20
การติดตั้งระบบไฟฟ้า	21
ศูนย์บริการลูกค้า	21

สัญลักษณ์



คำเตือน!

สัญลักษณ์นี้แสดงข้อมูลเกี่ยวกับความปลอดภัยของคุณ



ข้อควรระวัง!

สัญลักษณ์นี้แสดงข้อมูลเกี่ยวกับวิธีการหลีกเลี่ยงความเสียหายที่จะเกิดกับเครื่อง



สิ่งสำคัญ!

สัญลักษณ์นี้แสดงเคล็ดสลับและข้อมูลเกี่ยวกับการใช้เครื่อง



สิ่งแหวดล้อม!

สัญลักษณ์นี้แสดงเคล็ดสลับและข้อมูลเกี่ยวกับการใช้เครื่องอย่างประหยัดและเป็นมิตรกับสิ่งแวดล้อม

ข้อมูลการทิ้งผลิตภัณฑ์สำหรับผู้ใช้



สิ่งแหวดล้อม!

- วัสดุบรรจุภัณฑ์ส่วนใหญ่ทำไปรีไซเคิลได้ โปรดทิ้งวัสดุเหล่านี้ ณ ศูนย์รีไซเคิลในพื้นที่ของคุณ หรือหรือทิ้งในถังขยะที่เหมาะสม
- หากคุณต้องการทิ้งผลิตภัณฑ์นี้ โปรดติดต่อหน่วยงานในพื้นที่ของคุณ และสอบถามวิธีการทิ้งที่ถูกต้อง

คำเตือนทั่วไป

โปรดอ่านคำแนะนำด้านความปลอดภัยที่สำคัญให้เข้าใจ และเก็บไว้ให้อ้างอิงในอนาคต ส่งต่อคู่มือผู้ใช้ให้กับเจ้าของเครื่องคนใหม่

หมายเหตุ! คุณต้องอ่านคำเตือนอย่างละเอียดก่อนติดตั้งหรือใช้เครื่อง หากต้องการความช่วยเหลือ โปรดติดต่อฝ่ายบริการลูกค้า บริษัทจะไม่ยอมรับผิดในกรณีที่มีการละเลยคำแนะนำเหล่านี้หรือคำแนะนำด้านความปลอดภัยอื่น ๆ ที่รวมอยู่ในคู่มือนี้

ความปลอดภัยของเด็กและผู้ที่มีความเสี่ยง



คำเตือน!

เสียงต่อกราดอากาศหายไ้ได้รับบาดเจ็บ หรือคุณภาพถาวร

- เครื่องใช้ไฟฟ้านี้ไม่มีเจตนาให้ใช้โดยบุคคล (รวมถึงเด็ก) ที่ด้อยความสามารถทางร่างกาย ทางประสาทสัมผัสหรือจิตใจหรือขาดประสบการณ์และความรู้ เว้นแต่ว่าจะได้รับการควบคุมดูแลหรือการสอนเกี่ยวกับการใช้ เครื่องใช้ไฟฟ้าโดยบุคคลที่รับผิดชอบต่อความปลอดภัยของบุคคลเหล่านี้
- ควรควบคุมดูแลไม่ให้เด็กเล่นกับอุปกรณ์นี้
- เก็บบรรจุภัณฑ์ทั้งหมดให้พ้นจากมือเด็ก
- หากเครื่องมีอุปกรณ์ป้องกันเด็ก เราขอแนะนำให้คุณเปิดใช้งานอุปกรณ์ดังกล่าวหากมีเด็กอยู่ด้วย
- คำเตือน! ชิ้นส่วนที่เข้าถึงได้อาจร้อนขึ้นระหว่างการใช้งาน จึงควรระวังไม่ให้เด็กเล็กอยู่ใกล้กับเครื่อง



ข้อควรระวัง!

โปรดอ่านคำแนะนำด้านความปลอดภัยที่สำคัญให้เข้าใจ และเก็บไว้ให้อ้างอิงในอนาคต

ความปลอดภัยทั่วไป

- ภายในเครื่องจะร้อนเมื่อใช้งาน ห้ามแตะชิ้นส่วนทำความร้อนที่อยู่ในเครื่อง สวมถุงมือเสมอเมื่อต้องหยิบอุปกรณ์เสริมหรือเครื่องใช้ใบเตาออกมา รวมทั้งตอนนำเข้าใบ
- ห้ามใช้เครื่องทำความสะอาดด้วยไอน้ำในการทำความสะอาดเตา
- ถอดปลั๊กเตาไมโครเวฟออกก่อนทำการบำรุงรักษา
- ห้ามใช้เตาไมโครเวฟหากประตูหรือฮิลประตูชำรุดจนกว่าจะได้รับการซ่อมแซมโดยช่างผู้ชำนาญ
- เตาไมโครเวฟไม่ได้ผลิตขึ้นเพื่อใช้งานร่วมกับตัวจับเวลาภายนอก หรือระบบโมดูลคอนโทรลแยก
- ฝาครอบของเตาไมโครเวฟมีไว้เพื่อป้องกันการสัมผัสกับพลังงานไมโครเวฟ การซ่อมบำรุงหรือการซ่อมแซมที่ต้องถอดฝาครอบเตาออกมา ต้องดำเนินการโดยช่างผู้ชำนาญเท่านั้น
- อย่าอุ่นของเหลวและอาหารอื่น ๆ ที่อยู่ในภาชนะที่ปิดสนิท เพราะอาจเกิดการระเบิดได้
- ใช้ภาชนะที่สามารถใช้กับเตาไมโครเวฟเท่านั้น

- เมื่ออุ่นอาหารในภาชนะพลาสติกหรือกระดาษ ให้ผ้าอยู่ตลอดเวลา เพราะภาชนะอาจติดไฟได้
- เตาไมโครเวฟออกแบบมาเพื่ออุ่นอาหารและเครื่องดื่ม การใช้เตาไมโครเวฟเพื่อทำให้อาหารหรือเสื้อผ้าแห้ง ให้ความร้อนกับแผ่นทำความร้อน รองเท้าแตะ ฟองน้ำ ผ้าขุบน้ำหมาด ๆ และอื่น ๆ อาจเสี่ยงที่จะเกิดการบาดเจ็บ เกิดประกายไฟ หรือไฟไหม้ได้
- หากมีควันลอยออกมา ให้ปิดสวิตช์เตาไมโครเวฟหรือถอดปลั๊กออก โดยที่ยังปิดประตูเตาไว้เพื่อไม่ให้เปลวไฟลุกลาม
- การใช้เตาไมโครเวฟอุ่นเครื่องดื่ม อาจทำให้เครื่องดื่มเดือดและร้อนจัด ต้องใช้ความระมัดระวังเมื่อยกภาชนะ
- ควรคนหรือเขย่าขวดนมและโภชนาการเด็ก และตรวจสอบอุณหภูมิก่อนบริโภค เพื่อป้องกันการลวก
- ไม่ควรอุ่นไข่ต้มทั้งฟองและไข่ต้มที่ยังไม่ได้ปอกเปลือกในเตาไมโครเวฟ เพราะไข่อาจระเบิดได้ แม้ว่าเตาไมโครเวฟจะหยุดให้ความร้อนแล้วก็ตาม
- ควรทำความสะอาดเตาไมโครเวฟและขจัดคราบอาหารที่ค้างอยู่ในเตาออกเป็นประจำ
- หากไม่รักษาความสะอาดเตาไมโครเวฟ พื้นผิวของเตาจะเสื่อมสภาพ ที่อาจส่งผลเสียต่ออายุการใช้งานและอาจทำให้เกิดอันตรายได้
- พื้นผิวของเตาในส่วนที่สัมผัสวัสดุ(ถ้าอาจร้อนขณะที่ใช้เตา
- เตาไมโครเวฟออกแบบมาเพื่อตั้งวาง ต้องไม่วางเตาไว้ด้านหลังประตูรถแต่งหรือในตู้ที่ปิดมิดชิด โปรดปฏิบัติตามข้อกำหนดการติดตั้งในคู่มือนี้
- ห้ามใช้น้ำยาทำความสะอาดที่มีฤทธิ์กัดกร่อนรุนแรงหรือที่พูดโฆษณาหลอกลวงในการ ทำความสะอาดประตูกระจก เพราะอาจทำให้กระจกเป็นรอยและแตกได้
- หากสายไฟชำรุดเสียหาย ผู้ที่มีหน้าที่เปลี่ยนคือบริษัท ศูนย์บริการที่ได้รับอนุญาต หรือบุคลากรผู้เชี่ยวชาญเพื่อป้องกันอันตรายที่อาจเกิดขึ้น



ข้อควรระวัง!

หลีกเลี่ยงอันตรายจากการรีเซ็ตอุปกรณ์ตัวตั้งจอร์เมื่ออุณหภูมิสูง โดยไม่ได้ตั้งใจ(ด้วยการไม่สัมผัสปลั๊กเตาไมโครเวฟเข้ากับอุปกรณ์สวิตช์ภายนอก เช่น ตัวจับเวลา หรือเชื่อมต่อกับวงจรที่มีการเปิดปิดเป็นประจำ



คำเตือน!

ปิดสวิตช์เตาไมโครเวฟก่อนเปลี่ยนหลอดไฟเพื่อป้องกันไฟฟ้าช็อต

คำแนะนำด้านความปลอดภัย

การติดตั้ง



คำเตือน!

การติดตั้งเครื่องนี้ ต้องดำเนินการโดยผู้ที่มีความสามารถเท่านั้น

- นำบรรจุภัณฑ์ทั้งหมดออก
- ห้ามติดตั้งหรือใช้เตาไมโครเวฟที่ชำรุดเสียหาย
- ปฏิบัติตามคำแนะนำในการติดตั้งที่มาพร้อมกับเตาไมโครเวฟ
- โปรดใช้ความระมัดระวังในการเคลื่อนย้ายเนื่องจากเครื่องมีน้ำหนักมาก สวมถุงมือไนล่อนเสมอ
- รักษาระยะห่างขั้นต่ำจากเครื่องใช้และอุปกรณ์อื่น ๆ

การต่อระบบไฟฟ้า



คำเตือน!

เสี่ยงที่จะเกิดไฟไหม้และไฟฟ้าช็อต

- อุปกรณ์นี้มาพร้อมกับสายไฟและปลั๊กไฟขนาด 10A เหมาะสำหรับใช้กับเต้ารับ 10A แบบมาตรฐาน หากจำเป็นต้องติดตั้งเต้ารับ ควรให้ช่างผู้ชำนาญเป็นผู้ดำเนินการ
- อุปกรณ์จะต้องต่อสายดิน
- ข้อมูลทางไฟฟ้าที่อยู่บนป้ายระบุข้อมูลคล่องกินแหล่งจ่ายไฟ หากไม่ตรงกัน แนะนำให้ตัดต่อวงจรไฟฟ้า
- เสียบปลั๊กไฟเข้ากับเต้ารับไฟหลักเมื่อวางเตาไมโครเวฟเรียบร้อยแล้ว คุณจะต้องเอื้อมเสียบปลั๊กและดึงปลั๊กไฟได้สะดวกหลังจากติดตั้งเสร็จแล้ว
- ปลั๊กไฟและสายไฟต้องไม่ชำรุดเสียหาย ติดต่อกับศูนย์บริการหรือช่างไฟฟ้าเพื่อเปลี่ยนสายไฟที่ชำรุดเสียหาย
- ห้ามดึงที่สายไฟเมื่อจะถอดปลั๊ก ดึงที่ตัวปลั๊กไฟเสมอ

การใช้งาน



คำเตือน!

เสี่ยงต่อการบาดเจ็บ ไฟไหม้หรือไฟฟ้าช็อตหรือเกิดการระเบิด

- ใช้เตาไมโครเวฟในครัวเรือนเท่านั้น
- ต้องปฏิบัติตามคำแนะนำในการใช้
- ต้องไม่มีอะไรปิดกั้นช่องระบายอากาศ
- ห้ามปล่อยให้เครื่องทำงานโดยไม่มีผู้ดูแล
- อย่าออกแรงกดประตูที่เปิดอยู่
- ห้ามใช้เครื่องเป็นพื้นที่ทำงานและห้ามเก็บของในช่องใส่อาหาร
- ห้ามใช้เตาไมโครเวฟโดยไม่มีอาหาร
- ไม่อนุญาตให้ใช้ภาชนะโลหะใส่อาหารและเครื่องตั้งในระหว่างการทำอาหารด้วยไมโครเวฟ

การดูแลรักษาและการทำความสะอาด



คำเตือน!

เสี่ยงต่อการบาดเจ็บ ไฟไหม้ หรือเครื่องชำรุดเสียหาย

- ก่อนบำรุงรักษา ควรปิดเครื่องและถอดปลั๊กไฟออกจากเต้ารับ
- ทำความสะอาดเครื่องเป็นประจำเพื่อป้องกันไม่ให้พื้นผิวเสื่อมสภาพ
- อย่าให้เศษอาหารหรือสารตกค้างจากน้ำยาทำความสะอาดสะสมบนขอบยางของประตู
- ไขมันหรืออาหารที่เหลืออยู่ในเครื่องอาจทำให้เกิดควัน/ไฟไหม้ได้ โดยเฉพาะที่อยู่บนตะแกรงย่าง
- ทำความสะอาดเครื่องด้วยผ้าชุบน้ำหมาด ๆ ใช้น้ำยาทำความสะอาดที่มีค่าเป็นกลางเท่านั้น ห้ามใช้ผลิตภัณฑ์ที่มีฤทธิ์กัดกร่อน แผ่นใยขัดถู ตัวทำละลายหรือวัตถุที่เป็นโลหะ
- ห้ามใช้เครื่องทำความสะอาดด้วยไอน้ำทำความสะอาดอุปกรณ์นี้

การกึ่งผลิตภัณฑ์




คำเตือน!

เสี่ยงต่อการบาดเจ็บหรือขาดอากาศหายใจ

- ถอดปลั๊กอุปกรณ์ออกจากเต้ารับ
- ถอดสายไฟแล้วนำไปทิ้ง


รายละเอียดผลิตภัณฑ์

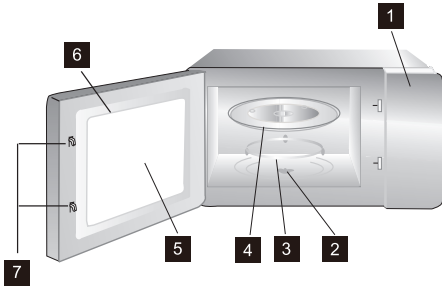

- | | |
|-----------------------|----------------------------|
| 1 แผงควบคุม | 5 หน้าบานส่งอาหาร |
| 2 แกนหมุน | 6 ชุดประกอบประตู |
| 3 วงแหวนประกอบจานหมุน | 7 ระบบล็อกเพื่อความปลอดภัย |
| 4 จานหมุนแก้ว | |


อุปกรณ์เสริม

ชุดจานหมุน

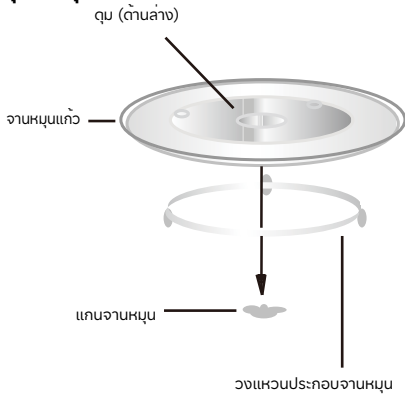

ใช้ชุดจานหมุนเพื่อเตรียมอาหารในเตาไมโครเวฟเสมอ

แผงควบคุม

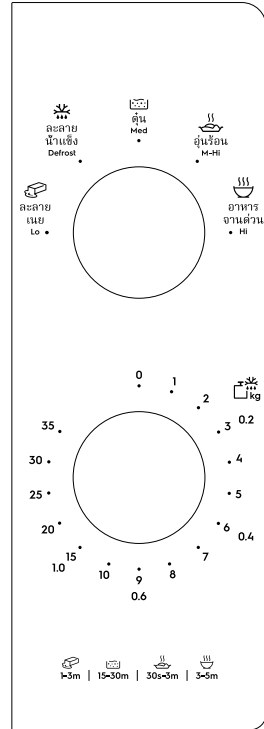

สัญลักษณ์	ฟังก์ชัน	รายละเอียด
1	อาหารจานด่วน	ทำอาหารอย่างรวดเร็วหรือตามปกติ
2	อุ่นร้อน	ทำอาหารตามปกติ อุ่นร้อน
3	อุ่น	ทำอาหารเบา ๆ อุ่น หรือเคี้ยว
4	ละลายน้ำแข็ง	ละลายน้ำแข็งอาหาร ตามเวลาที่ตั้งไว้
5	ละลายเนย	คงความชุ่มชื้น ละลาย/ ทำให้นุ่ม
6	ละลายน้ำแข็ง ตามน้ำหนัก	ละลายน้ำแข็งอาหาร โดยคำนวณน้ำหนัก

การใช้งานประจำวัน

ภาชนะและวัสดุที่เหมาะสม

ภาชนะ / วัสดุ	ไมโครเวฟ			ย่าง/ อบลมร้อน
	ละลายน้ำแข็ง	อุ่นอาหาร	การทำความร้อน	
แก้วและพอร์ซเลนที่เข้ากับเตาอบได้ (ไม่มีส่วนประกอบที่เป็นโลหะ เช่น แก้ว Pyrex, แก้วทนความร้อน)	■	■	■	■
แก้วและพอร์ซเลนที่เข้ากับเตาอบไม่ได้ ¹⁾	■	--	--	--
แก้วและเซรามิกแก้วที่ทำจากวัสดุที่เข้ากับเตาอบได้/ทนการแช่แข็ง (เช่น Arcoflam) ขึ้นวางสำหรับย่าง	■	■	■	■
เซรามิก ²⁾ , เครื่องปั้นดินเผา ²⁾	■	■	■	--
พลาสติกทนความร้อนที่อุณหภูมิ 200°C ³⁾	■	■	■	--
กระดาษแข็ง, กระดาษ	■	--	--	--
ฟิล์มยืดถนอมอาหาร	■	--	--	--
ฟิล์มสำหรับอบย่างพร้อมฝาปิดที่นำเข้าไมโครเวฟได้ ³⁾	■	■	■	--
จานสำหรับอบย่างที่ทำจากโลหะ เช่น อีนาเมล เหล็กหล่อ	--	--	--	■
แม่พิมพ์อบขนม ที่เคลือบเงาดำ หรือ ซิลิโคน ³⁾	--	--	--	■
ถาดอบขนม	--	--	--	■
ภาชนะทำอาหาร เช่น กระดาษหรือ จานสำหรับอบกรอบ	--	■	■	--
อาหารสำเร็จรูปบรรจุห่อ ³⁾	■	■	■	■

- 1) ไม่มีการเคลือบหรือตกแต่งด้วยเงิน ทอง ทองคำขาว หรือโลหะ
- 2) ไม่มีส่วนประกอบที่ทำจากควอartz หรือโลหะ หรือการเคลือบผิวด้วยโลหะ
- 3) คุณจะต้องปฏิบัติตามคำแนะนำของบริษัทผู้ผลิตเกี่ยวกับการใช้อุณหภูมิสูงสุด

- เหมาะสม
- ไม่เหมาะสม

การใช้งานประจำวัน (ต่อ)

สถานะที่ไม่ควรใช้กับเตาไมโครเวฟ

สถานะ	หมายเหตุ
• ถาดอลูมิเนียม	อาจทำให้เกิดประกายไฟได้ เปลี่ยนเป็นจานที่ใช้กับเตาไมโครเวฟได้
• กล่องอาหารพร้อมมือจับโลหะ	อาจทำให้เกิดประกายไฟได้ เปลี่ยนเป็นจานที่ใช้กับเตาไมโครเวฟได้
• เครื่องใช้ในครัวที่ทำจากโลหะหรือมีขอบที่ทำจากโลหะ	โลหะปิดกั้นอาหารจากพลังงานไมโครเวฟ ขอบที่เป็นโลหะอาจทำให้เกิดประกายไฟได้
• สายรัดโลหะ	อาจเกิดประกายไฟและอาจทำให้เกิดไฟไหม้ในเตาได้
• ลูกกระต๊าก	อาจทำให้เกิดไฟไหม้ในเตาได้
• โฟมพลาสติก	โฟมพลาสติกอาจจะละลายหรือปนเปื้อนของเหลวที่อยู่ภายในเมื่อสัมผัสกับอุณหภูมิที่สูง
• ไม้	ไม้จะแห้งเมื่อใช้กับเตาไมโครเวฟและอาจปริแตกหรือราวได้

ตารางการตั้งระดับความร้อน

สัญลักษณ์	ระดับความร้อน	กำลังไฟฟ้า (วัตต์)	อาหารที่เหมาะสม
	อาหารจานด่วน - สูง	800 วัตต์	อุ่นเครื่องต้ม หุงข้าว ทำอาหารชนิดผัดและก๋วยเตี๋ยว
	อุ่นร้อน - ปานกลาง สูง	616 วัตต์	ทำอาหารชนิดเนื้อสัตว์ อุ่นร้อน
	อุ่น - ปานกลาง	440 วัตต์	เคี่ยวน้ำซุป สตูว์ปลาและอาหารทะเล
	ละลายน้ำแข็ง - ปานกลาง ต่ำ	264 วัตต์	ละลายอาหาร
	ละลายเนย - ต่ำ	136 วัตต์	ละลายเนย/บ็อกโกแลต อุ่นอาหารปรุงสุก

ข้อพึงสังเกต: เมื่อนำอาหารออกจากเตา ต้องปิดสวิตช์เตาโดยหมุนสวิตช์จับเวลาไปที่ 0 (ศูนย์) หากไม่ทำเช่นนี้และใช้เตาไมโครเวฟโดยไม่มีอาหาร อาจส่งผลให้เกิดความร้อนสูงเกินไปและทำให้เกิดประกายไฟหรือระเบิดได้

1. ปรับระดับกำลังไฟสำหรับการทำอาหารได้ด้วยการหมุนปุ่มความร้อนไปที่ระดับที่ต้องการ
2. ตั้งเวลาในการทำอาหารได้ด้วยการหมุนปุ่มตั้งเวลายังตัวเลขเวลาที่ต้องการตามที่ปรากฏในคู่มือการทำอาหารของคุณ
3. เตาไมโครเวฟจะเริ่มทำอาหารโดยอัตโนมัติหลังจากตั้งระดับความร้อนและเวลาแล้ว
4. หลังจากทำอาหารตามเวลาที่ตั้งไว้แล้ว เครื่องจะส่งเสียง “เตือน” เพื่อหยุด
5. หากไม่ใช้งานเครื่อง ให้ตั้งเวลาเป็น "0" เสมอ



ห้ามใช้การละลายน้ำแข็งตามน้ำหนักกับอาหารที่นำออกจากช่องแช่แข็งเกิน 20 นาที หรือกับอาหารสำเร็จรูปแช่แข็ง



การใช้อุปกรณ์เสริม



คำเตือน!

โปรดดูรายละเอียดจากหัวข้อความปลอดภัย




ข้อควรระวัง!

ห้ามทำอาหารโดยไม่ใช้ชุดจานหมุน ใช้ชุดจานหมุนที่มาพร้อมกับเครื่องเท่านั้น



ห้ามวางอาหารบนจานหมุนแก้วภายในเตาไมโครเวฟโดยตรง

การติดตั้งจานหมุน

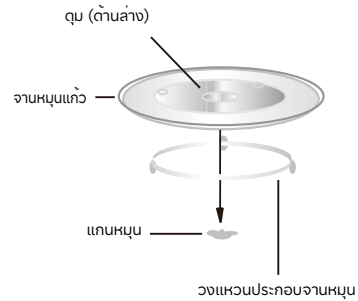

1. ระวังวางจานหมุนแก้วกลับด้าน จานหมุนแก้วควรเคลื่อนไหวได้อย่างอิสระ
2. ต้องใช้ทั้งจานหมุนแก้วและวงแหวนประกอบจานหมุนระหว่างการทำอาหาร
3. ต้องวางอาหารและภาชนะบรรจุอาหารทั้งหมดบนจานหมุนแก้วสำหรับทำอาหารเสมอ
4. หากจานหมุนแก้วหรือวงแหวนประกอบจานหมุนแตกหรือหัก โปรดติดต่อศูนย์บริการที่ได้รับอนุญาตใกล้บ้านคุณ

เคล็ดลับและข้อแนะนำ

ปัญหา	วิธีการแก้ไข
ไม่พบรายละเอียดเกี่ยวกับปริมาณอาหารที่เตรียมไว้	เทียบเคียงจากอาหารที่คล้ายกัน เพื่อหรือลดระยะเวลาในการทำอาหารตามกฎต่อไปนี้: ปริมาณเพิ่มขึ้นสองเท่า = เพิ่มเวลาเกือบสองเท่า, ปริมาณลดลงครึ่งหนึ่ง = ลดเวลาครึ่งหนึ่ง
อาหารแห้งเกินไป	ตั้งเวลาทำอาหารให้สั้นลงหรือเลือกกำลังไฟไมโครเวฟที่ต่ำลง
อาหารแห้งไม่ละลาย อาหารไม่ร้อนหรือสุกหลังจากหมดเวลาที่ตั้งไว้	ตั้งเวลาทำอาหารให้นานขึ้นหรือใช้กำลังไฟให้สูงขึ้น อาหารจานใหญ่ปริมาณมากจะใช้เวลานานขึ้น
หลังจากครบเวลา อาหารใหม่ที่ขอบ แต่ตรงกลางยังไม่พร้อมรับประทาน	ในครั้งต่อไป ให้ใช้กำลังไฟต่ำลงและตั้งเวลาให้นานขึ้น คนอาหารที่เป็นน้ำ เช่น ซุป เมื่อถึงครึ่งทางของระยะเวลาทำอาหาร

สำหรับข้าว ควรใช้จานแบนกว้างเพื่อให้ผลลัพธ์ออกมาดีขึ้น

การละลายน้ำแข็ง

ควรละลายอาหารประเภทเนื้อโดยให้ด้านที่มีไขมันอยู่ด้านล่าง ห้ามละลายเนื้อโดยมีฝาครอบปิดไว้ เพราะจะทำให้เนื้อสุก แทนที่จะเป็นคาลละลายเท่านั้น หากต้องการนำสัตว์ปีกถึงตัวมาละลายน้ำแข็ง ให้คว่ำส่วนอกลงเสมอ

การอุ่นอาหาร

เมื่อคุณอุ่นอาหารพร้อมทานที่ใส่บรรจุภัณฑ์ไว้ ควรปฏิบัติตามคำแนะนำที่ระบุไว้บนบรรจุภัณฑ์

การทำอาหาร

ควรนำเนื้อและเนื้อสัตว์ปีกออกมาจากตู้เย็นก่อนทำอาหารอย่างน้อย 30 นาที ควรพักเนื้อสัตว์ เนื้อสัตว์ปีก เนื้อปลา และผัก โดยปิดฝาคอร์นไว้หลังจากทำอาหารเสร็จ

ใช้แปรงทาลิปมันหรือเนยที่ละลายแล้วบนเนื้อปลาเล็กน้อย เติมน้ำเย็น 30 - 45 มล. สำหรับผักทุก ๆ 250 กรัม หั่นผักเป็นชิ้นๆ ขนาดเท่าๆ กันก่อนนำไปประกอบอาหาร ขณะทำอาหารที่เป็นผัก ให้ปิดฝาคอร์นภาชนะด้วย ทุกครั้ง

การดูแลรักษาและการทำความสะอาด



คำเตือน!

โปรดดูรายละเอียดจากหัวข้อความปลอดภัย

ข้อควรทราบเกี่ยวกับการทำความสะอาด:

- ทำความสะอาดเลนเสสและการสะสมของรอยนิ้วมือบริเวณแผงด้านหน้าของตัวเครื่องด้วย ผ้านุ่มชุบน้ำอุ่นผสมน้ำยาทำความสะอาดแบบอ่อน ห้ามใช้น้ำยาทำความสะอาดเลนเสส สารกัดกร่อน หรือตัวทำลายที่มีฤทธิ์รุนแรง
- ทำความสะอาดอุปกรณ์ทั้งหมดอย่างสม่ำเสมอ โดยใช้ผ้านุ่มและน้ำอุ่นผสมน้ำยาทำความสะอาด หลังล้างควรผึ่งให้แห้ง
- หากต้องการทำให้คราบติดแน่นขึ้นลง ให้นำน้ำเปล่า 1 แก้ว ใส่ในเตาไมโครเวฟ และตั้งค่ากำลังไฟสูงสุด 2 ถึง 3 นาที
- หากต้องการกำจัดกลิ่น ให้นำน้ำ 1 แก้ว ผสมน้ำมะนาว 2 ช้อนชา ใส่ในเตาไมโครเวฟ และตั้งค่ากำลังไฟสูงสุด 5 นาที

การแก้ไขปัญหา



คำเตือน!

โปรดดูรายละเอียดจากหัวข้อความปลอดภัย

ปัญหา	สาเหตุที่อาจเป็นไปได้	วิธีการแก้ไข
เครื่องไม่ทำงาน	เครื่องปิดการทำงานอยู่ ยังไม่ได้เสียบปลั๊กไฟ	เปิดเครื่องอีกครั้ง เสียบปลั๊ก
	ฟิวส์ในกล่องฟิวส์ขาด	ตรวจสอบฟิวส์ หากฟิวส์ขาดมากกว่าหนึ่งครั้ง โปรดติดต่อ ช่างไฟฟ้าที่มีความชำนาญ
	ปิดประตูไม่สนิท	ตรวจสอบให้แน่ใจว่าไม่มีวัตถุอื่นประตูไว้
หลอดไฟไม่ทำงาน	หลอดไฟชำรุด	ต้องเปลี่ยนหลอดไฟ โปรดติดต่อศูนย์บริการลูกค้า
เกิดประกายไฟภายในเตา	มีจานโลหะหรือจานที่มีขอบโลหะ มีไม่เสียบโลหะหรือพอลิออลูมิเนียมที่แตะกับผนังด้านในของเตาไมโครเวฟ	นำจานออกจากเตาไมโครเวฟ ไม่เสียบและพอลิออลูมิเนียมแต่ละกับผนังด้านในของเตาไมโครเวฟ
ชุดจานหมุนมีเสียงขูดหรือเสียดสีหรือหมุนไปสะดุดไป	มีวัตถุหรือคราบสกปรกอยู่ข้างใต้จานหมุนแก้ว	ทำความสะอาดพื้นที่ด้านล่างจานหมุนแก้ว รวมทั้งล่องวงแหวน ตรวจสอบว่าวงชุดล้อและจานหมุนแก้วได้อย่างถูกต้อง
เครื่องหยุดทำงานโดยไม่ทราบสาเหตุที่แน่ชัด	การทำงานบางอย่างผิดปกติ	ตรวจสอบว่าไม่ได้ปิดกั้นช่องระบายอากาศของตัวเครื่อง หากยังเกิดปัญหานี้อยู่ทั้ง ๆ ที่ติดตั้งได้อย่างถูกต้อง โปรดติดต่อศูนย์บริการลูกค้า
เตาไมโครเวฟทำงานตามเวลาที่ตั้งไว้ แต่อาหารไม่ร้อน	อุปกรณ์ควบคุมอุณหภูมิภายในเครื่องที่มีฟังก์ชันแช่แข็งในตัวทำงาน เตาไมโครเวฟตัดตั้งอุปกรณ์ควบคุมอุณหภูมิเพื่อป้องกันไม่ให้ส่วนประกอบภายในร้อนเกินไป	เมื่ออุณหภูมิของอุปกรณ์ควบคุมอุณหภูมิ ลดลง เตาจะกลับมาทำงานได้ตามปกติ รอ 5 นาที แล้วลองใช้เตาอีกครั้ง
ไอน้ำสะสมที่ประตูเตาไมโครเวฟหรือรั่วออกจากช่องระบายอากาศ	การทำอาหารที่มีความชื้นสูงทำให้เกิดไอน้ำ	เป็นเรื่องปกติของกระบวนการทำอาหาร
เกิดควันในระหว่างการทำอาหาร	ไขมันสะสมบนตะแกรงด้านใน	ทำความสะอาดภายในเตาเสมอ

หากคุณไม่สามารถแก้ไขปัญหาได้ด้วยตัวเอง โปรดติดต่อตัวแทนจำหน่ายหรือศูนย์บริการลูกค้า

ข้อมูลที่เป็นเมื่อติดต่อศูนย์บริการลูกค้าอยู่บนป้ายระบุบนเครื่อง

เราขอแนะนำให้คุณจดบันทึกข้อมูลไว้ดังนี้:

- รุ่น (M)
- หมายเลขผลิตภัณฑ์ (PNC)
- หมายเลขเครื่อง (S.N.)

การติดตั้ง



ข้อควรระวัง!

อย่าบังช่องระบายอากาศ เพราะอาจทำให้เครื่องร้อนเกินไป




ข้อควรระวัง!

ห้ามเชื่อมต่อเครื่องเข้ากับแก๊สแบริเตอร์ หรือปลั๊กพ่วง ไม่เช่นนั้นอาจทำให้กระแสไฟฟ้าเกิน และเกิดความเสี่ยงของเพลิงไหม้

- วางเครื่องให้ห่างจากไอน้ำ สมร้อน และน้ำที่อาจกระเด็นได้
- หากจัดเก็บ/ขนย้ายเครื่องไปในที่อุณหภูมิต่ำกว่าศูนย์ ห้ามเปิดใช้งานทันทีหลังติดตั้งเสร็จ ควรปล่อยให้เครื่องอยู่ที่อุณหภูมิห้องอย่างน้อย 2 ชั่วโมงก่อนใช้เครื่อง

การติดตั้ง

- นำวัสดุบรรจุภัณฑ์และสื่อส่งเสริมการขายทั้งหมดออกจากเตาไมโครเวฟ
- ตรวจสอบเตาเครื่องเพื่อหาร่องรอยความเสียหาย เช่น รอยบุบหรือประตูที่ชำรุด ห้ามติดตั้งหากเจอแบบชำรุดเสียหาย ติดต่อบริการ
- แกะแผ่นฟิล์มป้องกันที่อยู่ด้านบนช่องใส่อาหารของเตาออก อย่่าถอดแผ่นปิดท่อน้ำคั้นสีน้ำตาลอ่อนที่ติดอยู่ทางด้านขวาของช่องเตาออกเพื่อป้องกันแบคทีเรีย
- อย่่าวางวัสดุบรรจุภัณฑ์ที่กึ่งไวจนเด็กเล็กนำไปเล่น เพราะอาจเป็นอันตรายได้
- เลือกพื้นที่ผิวที่เรียบและได้ระดับ มีพื้นที่กว้างขวางเพียงพอสำหรับช่องระบายอากาศเข้าและออก และแข็งแรงพอที่จะรับน้ำหนักของเตาได้ ระหว่างเตากับผนังที่ยึดติดกัน เว้นระยะห่างเหนือเตาไมโครเวฟอย่างน้อย 30 ซม.

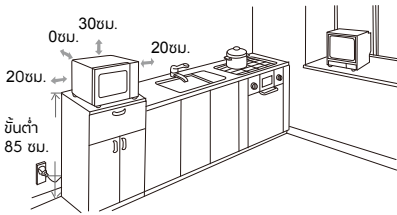

- 1) ความสูงขั้นต่ำในการติดตั้งคือ 85 ซม.
- 2) พื้นผิวที่ด้านหลังของตัวเครื่องควรหันเข้าผนังห้อง เว้นระยะห่างเหนือเตาไมโครเวฟอย่างน้อย 30 ซม. ต้องมีระยะห่างอย่างน้อย 20 ซม. ระหว่างเตากับผนังที่อยู่ติดกัน
- 3) ห้ามถอดขาตั้งออกจากด้านล่างของเตาไมโครเวฟ
- 4) การปิดกั้นช่องทางเข้าและ/หรือช่องทางออกอาจทำให้เตาไมโครเวฟเสียหายได้
- 5) วางเตาไมโครเวฟให้ห่างจากวิทยุและทีวีให้มากที่สุด การทำงานของเตาไมโครเวฟอาจรบกวนการรับส่งสัญญาณวิทยุหรือทีวีของคุณ

การปิดกั้นช่องระบายอากาศเข้าหรือออก อาจทำให้เตาเสียหายได้ หากช่องระบายอากาศถูกปิดกั้นระหว่างการทำงาน เตาอาจร้อนเกินไปจนทำงานผิดปกติได้ สมร้อนจะพ่นออกจากช่องระบายอากาศ ดังนั้นอย่าปิดกั้นหรือปล่อยให้มันกั้นระหว่างเตากับผนังด้านหลัง

- ควรวางเตาไว้บนพื้นที่มั่นคงเพื่อป้องกันไม่ให้เตาสั่นหรือเกิดเสียงดัง
- ห้ามถอดขาตั้งออกจากด้านล่างของเตาไมโครเวฟ
- ควรตั้งเตาไว้บนโต๊ะหรือเคาน์เตอร์ ไม่ควรวางไว้บนเฟอร์นิเจอร์อื่น หรือในตู้
- ต้องวางเตาให้ห่างจากความร้อนและน้ำ การสัมผัสกับความร้อนและน้ำอาจทำให้ประสิทธิภาพลดลงและทำงานผิดปกติได้
- วางเตาให้ห่างจากวิทยุและทีวีให้มากที่สุด การทำงานของเตาอาจรบกวนการทำงานของสัญญาณวิทยุหรือทีวี
- ลดหรือจัดปัญหาเกิดคลื่นรบกวนการทำงานได้ด้วยการปฏิบัติตามมาตรการดังต่อไปนี้:
 - กำค่าความสะอาดประตูและซิลลัมประตูเตาไมโครเวฟ
 - ปรับตำแหน่งเสาอากาศรับสัญญาณของวิทยุและ/หรือทีวี
 - ย้ายเตาไมโครเวฟให้ห่างจากเครื่องรับสัญญาณ
 - เสียบปลั๊กเตาไมโครเวฟเข้ากับเต้ารับอื่น เพื่อให้เตาไมโครเวฟและเครื่องรับสัญญาณอยู่ในเต้ารับต่างกัน
- แรงคั้นไฟฟ้าและความถี่ที่คุณใช้ในเชื่อมต่อเตาไมโครเวฟนั้นตรงกับที่ระบุไว้บนป้ายระบุที่อยู่บนเตาไมโครเวฟ หากเตาไมโครเวฟเชื่อมต่อปลั๊กไฟกับเต้าเสียบประเภทปลั๊กพ่วง โปรดตรวจสอบให้แน่ใจว่าไว้ที่การต่อสายดินเป็นที่เรียบร้อยแล้ว



คำเตือน!

ห้ามติดตั้งเตาไมโครเวฟเหนือเตาตั้งพื้นหรืออุปกรณ์ที่ให้ความร้อนอื่น ๆ หากติดตั้งใกล้หรือเหนือแหล่งความร้อน เตาอาจเสียหายและการรับประกันจะกลายเป็นโมฆะ

พื้นผิวส่วนที่เข้าถึงได้อาจร้อนระหว่างการใช้งาน



การติดตั้งระบบไฟฟ้า



คำเตือน!

การติดตั้งระบบไฟฟ้าต้องดำเนินการโดยช่างผู้ชำนาญเท่านั้น



บริษัทจะไม่รับผิดชอบ หากคุณไม่ปฏิบัติตามข้อควรระวังด้านความปลอดภัย จากหัวข้อ "คำแนะนำด้านความปลอดภัย"

อุปกรณ์นี้มาพร้อมกับสายไฟและปลั๊กไฟ



คำเตือน!

เตาไมโครเวฟมาพร้อมกับปลั๊กไฟที่ต้องต่อเข้ากับเต้ารับที่ต้องสายดินอย่างเหมาะสมเท่านั้น ระเบียบข้อบังคับกำหนดให้ช่างไฟฟ้าที่มีความชำนาญเป็นผู้ติดตั้งเต้ารับและเปลี่ยนสายไฟเท่านั้น หากไม่สามารถเข้าถึงปลั๊กไฟได้หลังจากการติดตั้ง ต้องมีวิศวกรติดตั้งจริงจกชีวิตในด้านที่ติดตั้ง พร้อมระงับช่างนำสัมผัสอย่างน้อย 3 ม.

ศูนย์บริการลูกค้า

<p>ประเทศไทย ศูนย์บริการลูกค้า โทร: (+66 2) 725 9000 Electrolux Thailand Co., Ltd. อาคาร ซีล็คโทรลักซ์ เลขที่ 1910 ชั้น 14 ถนนเพชรบุรีตัดใหม่ แขวงบางกะปิ เขตห้วยขวาง กรุงเทพฯ 10310 www.electrolux.co.th LINE ID: @electroluxTH-care อีเมล: customercarethai@electrolux.com</p>	<p>มาเลเซีย Consumer Care Center Tel: 1300-88-11-22 Electrolux Home Appliances Sdn. Bhd. Corporate Office Address: Unit T2-7, 7th Floor, Tower 2, PJ33, No. 3, Jalan Semangat, Seksyen 13, 46200 Petaling Jaya, Selangor. Office Tel : (+60 3) 7843 599 9 Office Fax : (+60 3) 7955 5511 Consumer Care Center Address: Lot C6, No. 28, Jalan 15/22, Ta man Perindustrian Tiong Nam, 40200 Shah Alam, Selangor Consumer Care Center Fax: (+60 3) 5524 2521 อีเมล: malaysia.customercare@electrolux.com</p>
<p>อินโดนีเซีย บริการออนไลน์: 08041119999 PT. Electrolux Indonesia Electrolux Building Jl. Abdul Muis No.34, Petojo Selatan, Gambir Jakarta Pusat 10160 Email: customercare@electrolux.co.id SMS & WA : 0812.8088.8863</p>	<p>ฟิลิปปินส์ Consumer Care Center เบอร์โทรฟรี: 1-800-10-845-CARE(2273) Consumer Care Hotline : (+63 2) 845-CARE(2273) Electrolux Philippines, Inc. Unit B 12F Cyber Sigma Bldg, Lawton Avenue, McKinley West, Taguig, Philippines 1634 Trunkline: +63 2 737- 4757 เว็บไซต์: www.electrolux.com.ph อีเมล: wecare@electrolux.com</p>
<p>เวียดนาม Consumer Care Center เบอร์ โทรฟรี: 1800-58-88-39 โทรศัพท์ : (+84 28) 3910 5465 Electrolux Vietnam Ltd. Floor 10th, Sofic Tower 10 Mai Chi Tho Street - Thu Thiem Ward - District 2 Thu Duc City, Ho Chi Minh City, Vietnam Office Tel: (+84 28) 3910 5465 Office Fax: (+84 28) 3910 5470 อีเมล: vncare@electrolux.com</p>	<p>สิงคโปร์ Consumer Care Center Tel: (+65) 6727 3699 Electrolux S.E.A. Pte Ltd. 351 Braddell Road #01-04, 351 On Braddell Singapore 579713. หมายเลขโทรสารสำนักงาน: (+65) 6727 3611 อีเมล: customer-care.sin@electrolux.com</p>
<p>เกาหลี Contact Center: 1566-1238 Electrolux Korea Ltd. 9th Floor, Pine Avenue B, 100 Eulji-ro, Jung-gu, Seoul 04551, Korea Electrolux Korea Home page: www.electrolux.co.kr Customer Care Home page: www.electroluxconsumer.co.kr อีเมล: homecare.kr@electrolux.com</p>	<p>ไต้หวัน Consumer Care Center เบอร์ โทรฟรี: 0800-888-259 Electrolux S.E.A Private Limited Taiwan Branch 4F., No.3, Sec. 1, Dunhua S. Rd. Songshan Dist., Taipei City 105408 Taiwan (R.O.C.) อีเมล: service.tw@electrolux.com</p>

